



LG G Vista Micro SD Card Replacement

This guide will help you replace the micro SD card in your LG G Vista device.

Written By: Justin Ogihara



INTRODUCTION

This guide will help you replace the micro SD card in your LG G Vista phone. This is a relatively easy process, and you shouldn't need anything other than your fingers.

Step 1 — Micro SD Card



- Power down and turn off your device.

Step 2



- Using your fingers or a plastic opening tool, remove the back cover from the device.

Step 3



- Using your fingers or a plastic opening tool, eject the micro SD card from the device.

To reassemble your device, follow these instructions in reverse order.