



# LG G6 Battery Replacement

Steps for replacing faulty or failing batteries.

Written By: tillman Harrell



## INTRODUCTION

Use this guide to replace the battery on your LG G6.

### TOOLS:

- iOpener (1)
- Phillips #000 Screwdriver (1)
- Metal Spudger (1)
- Spudger (1)
- Suction Handle (1)
- Plastic Cards (1)

### PARTS:

- [LG G6 Replacement Battery](#) (1)

## Step 1 — iOpener Heating



- ⓘ We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.

**⚠** For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.

## Step 2



- Heat the iOpener for **thirty seconds**.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.

**⚠** Be careful not to overheat the iOpener during the repair. Overheating may cause the iOpener to burst.

**⚠** Never touch the iOpener if it appears swollen.

**⚠** If the iOpener is still too hot in the middle to touch, continue using it while waiting for it to cool down some more before reheating. A properly heated iOpener should stay warm for up to 10 minutes.

## Step 3



- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.

**⚠** The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

## Step 4 — Battery




- Apply the heated iOpener to the edge of the phone for about 2 minutes.

## Step 5




- When the back panel is heated, apply the suction cup close to a corner of the phone. Lift up and insert a halberd spudger or opening pick under the rear glass.
- Slide the blade of the Halberd spudger along the edge of the phone to separate the adhesive.
- Follow around the edge of the phone, and use an opening pick or other tool (such as a plastic card) to keep already opened portions from re-adhering.

## Step 6

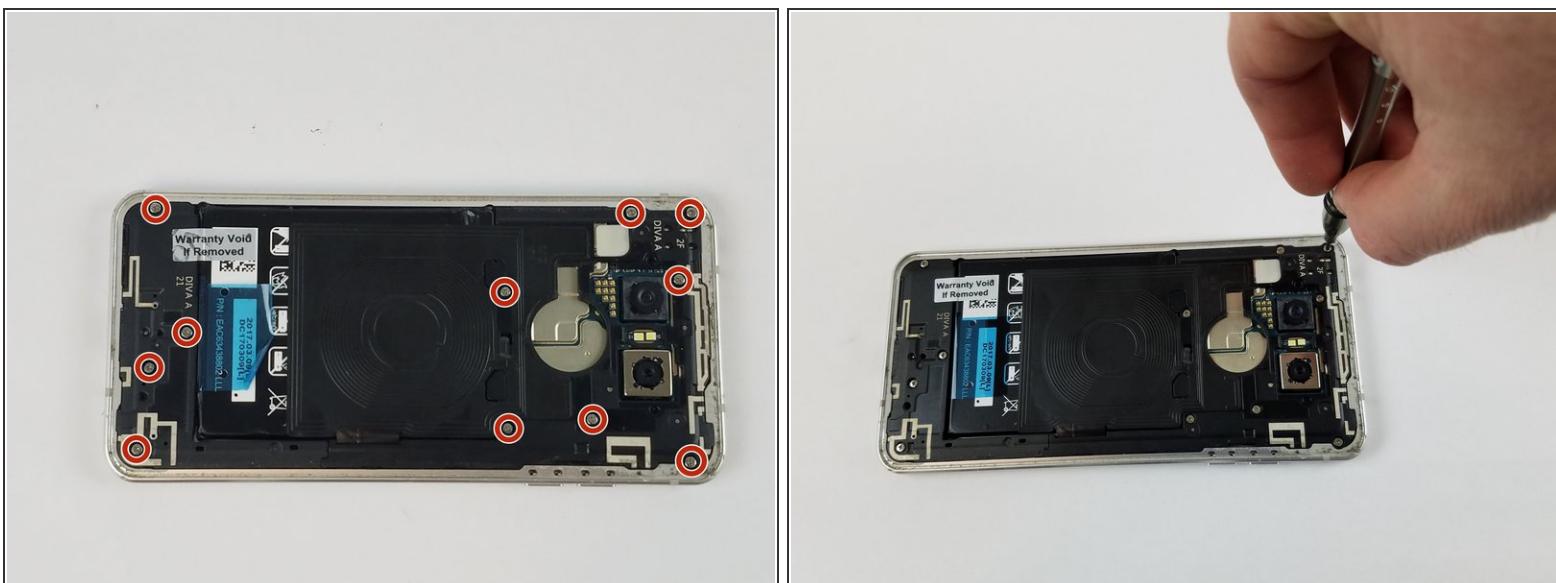


- Using a Philips 000 bit, remove 11 screws from the highlighted locations.

## Step 7

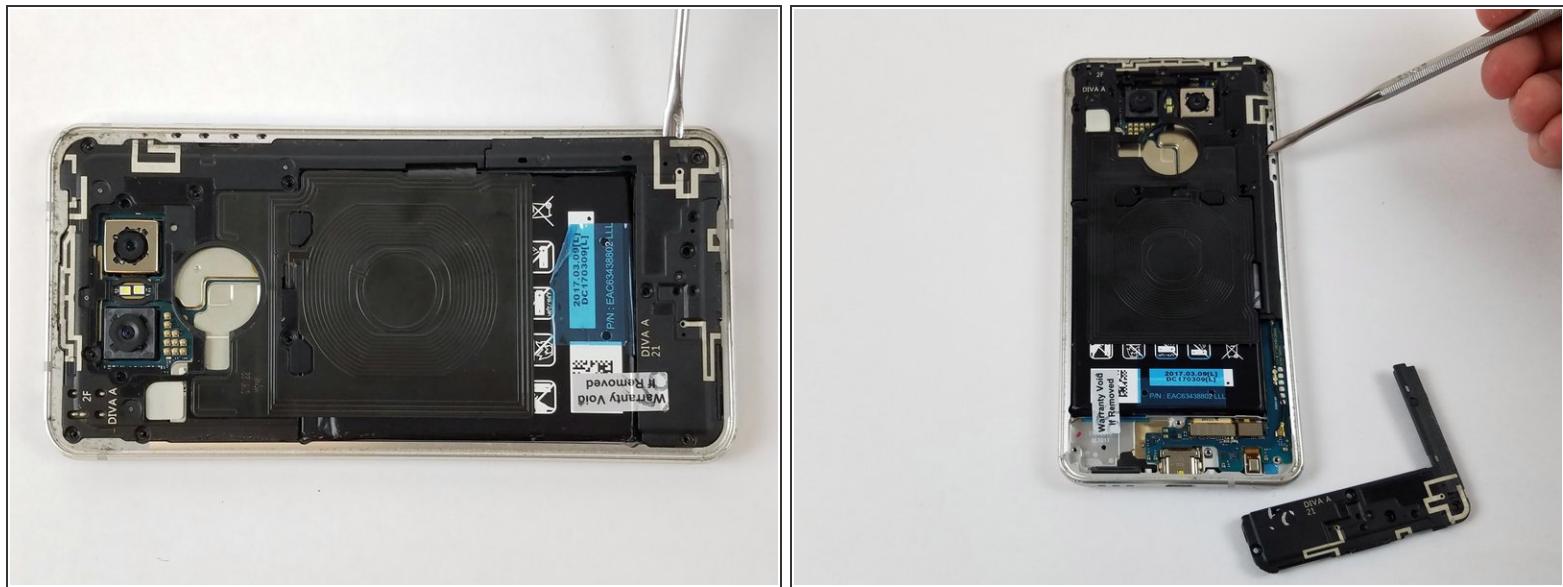


- With the screws removed, remove the lower frame components, followed by the upper mid-frame. Both components can be removed with a little prying.

## Step 8

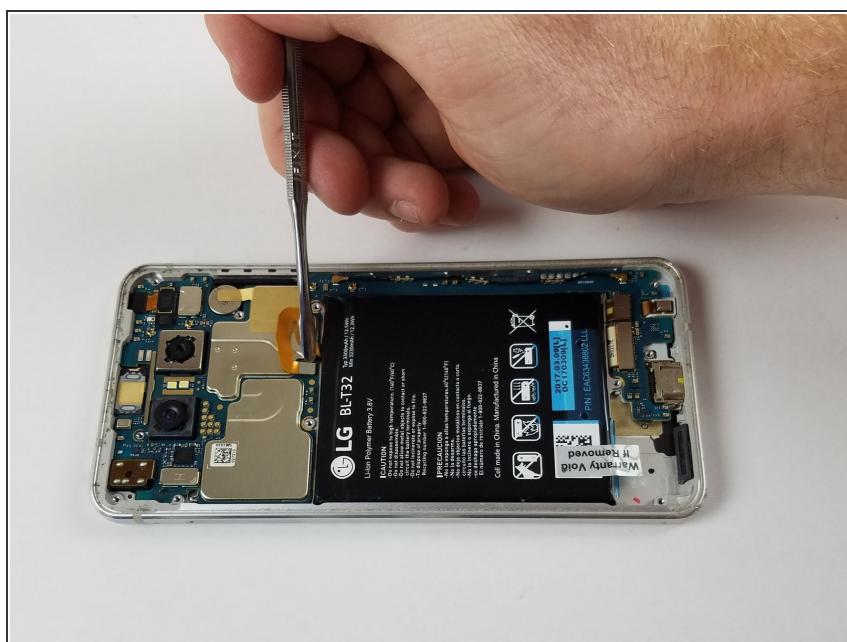

- Begin battery removal by very gently prying off the power ribbon with a plastic card or a nylon spudger.

## Step 9

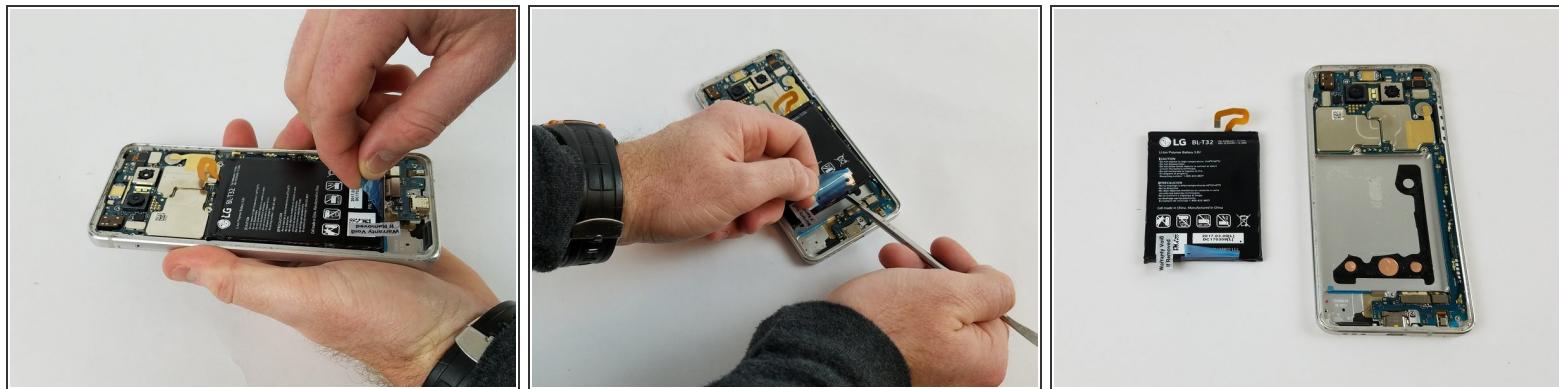

- Firmly pull the blue tab. Be careful not to bend the battery as you pull it away from the adhesive.

 Do not use a knife as you may pierce the battery.

To reassemble your device, follow these instructions in reverse order.