




LG LX150 Speakers Replacement

Written By: Harry Black

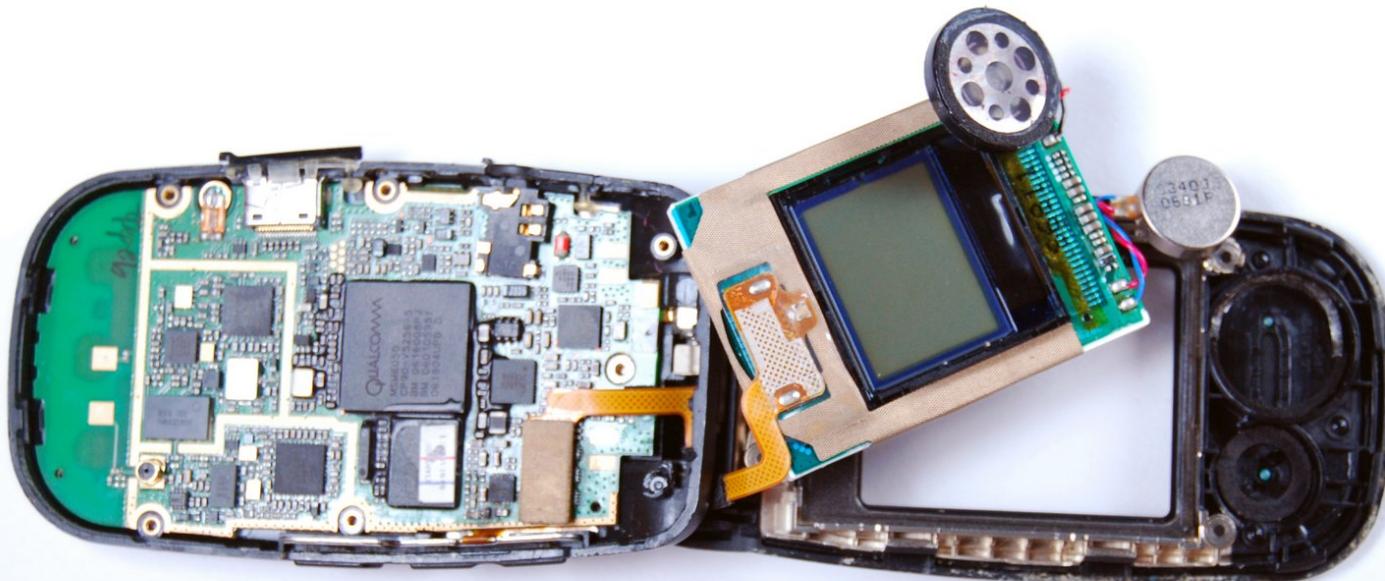

INTRODUCTION

Use this guide to remove the speakers from the device.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Front Cover



- Use the spudger to pry out the indicated rubber squares.
- Use the #0 Phillips screwdriver to take out the revealed screws.

Step 2




- Carefully lodge the spudger between the face plate and the hinge mechanism.
- Gently pry the face plate until it releases from place holders.

Step 3 — Speakers



- Using a spudger, detach the speakers from their place holders.

Step 4

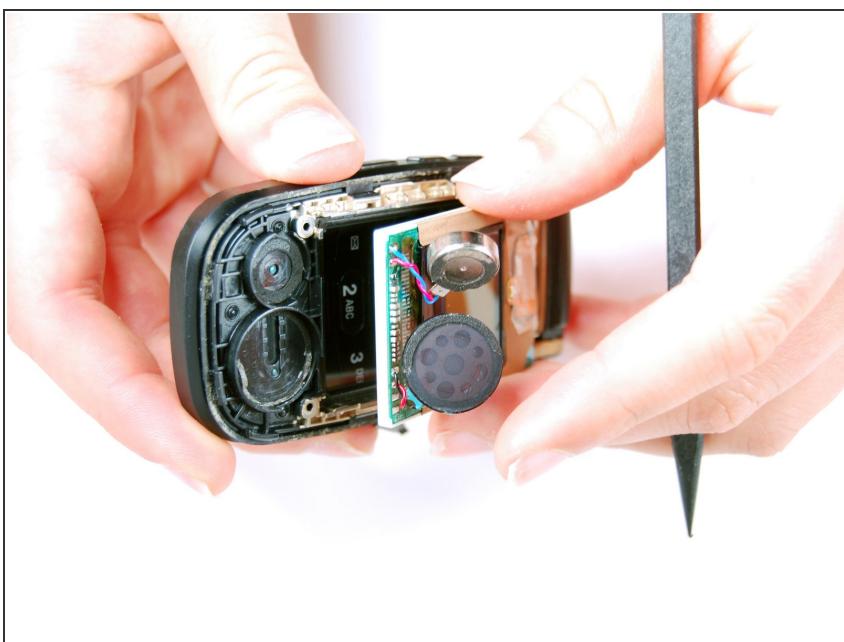

- Using the spudger, pry between the speaker circuit board and base to detach with ease.

To reassemble your device, follow these instructions in reverse order.