


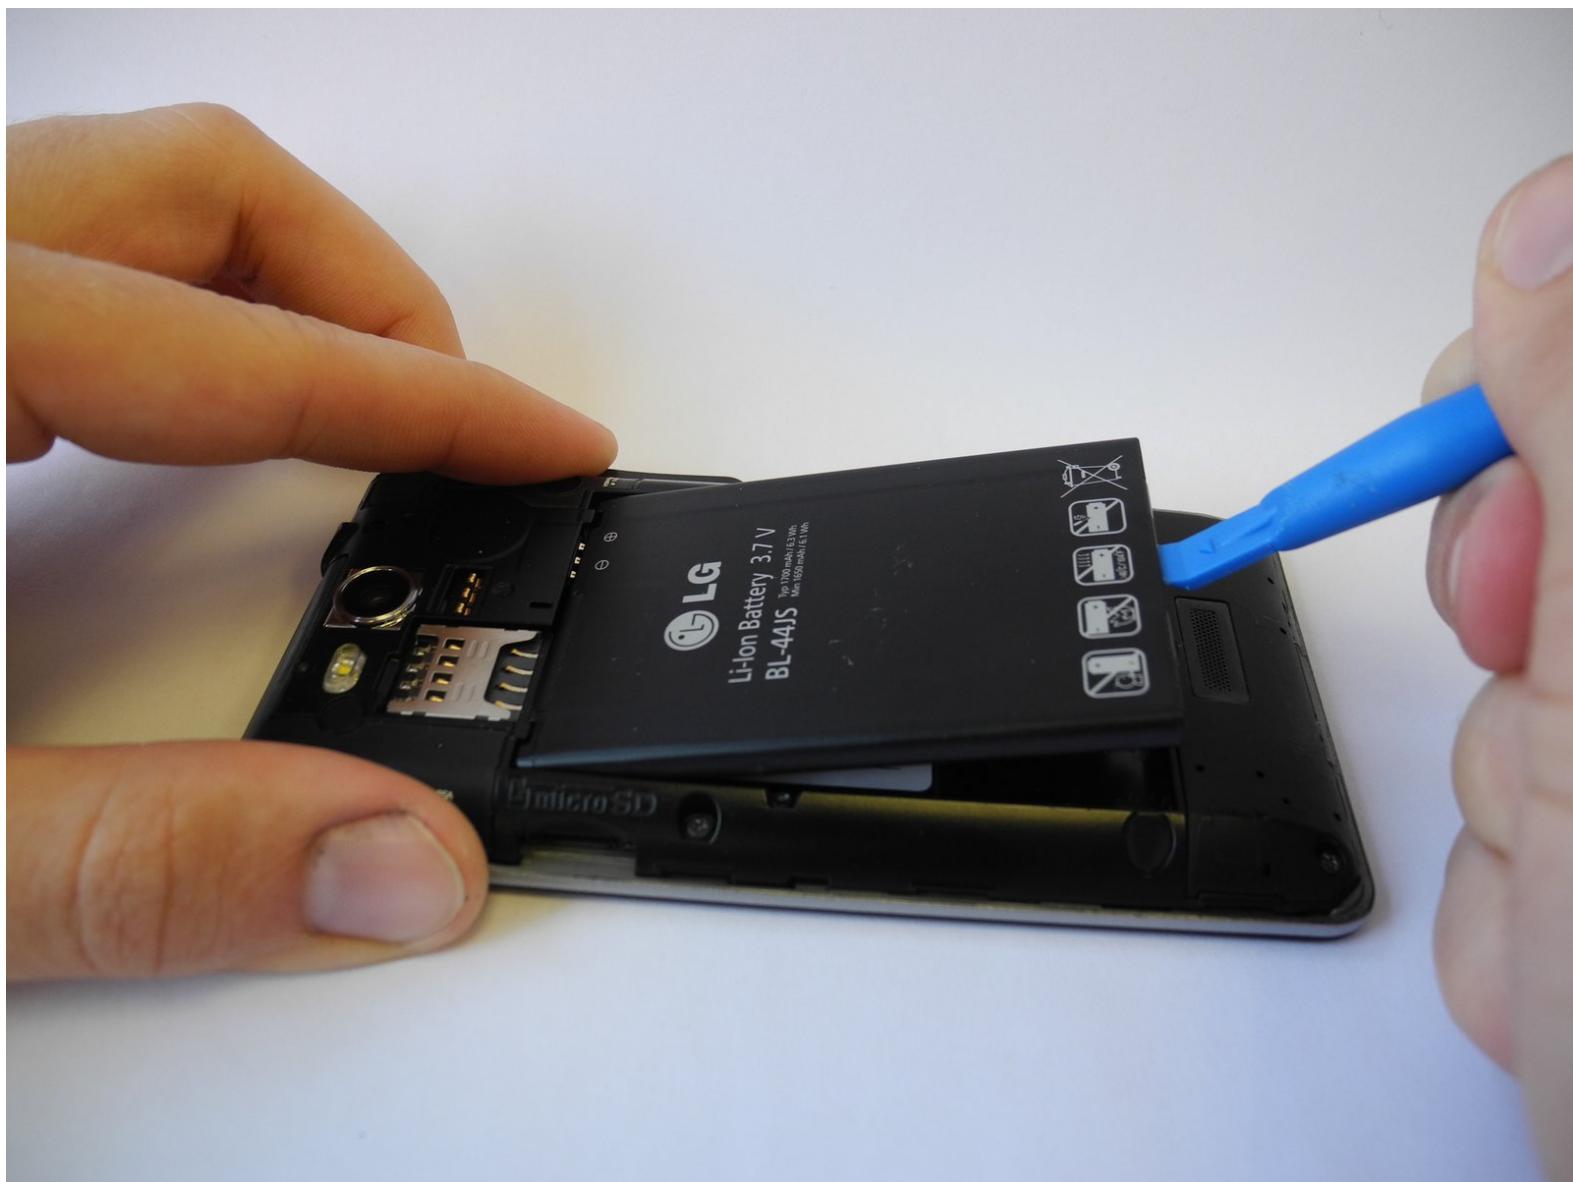

# LG Lucid 4G Battery Replacement

This guide provides easy instructions for how to replace the LG Lucid 4G battery.

Written By: Margaret Huck



## INTRODUCTION

The battery is likely to malfunction if exposed to water, if it is overused, or if it was faultily made in the factory. If the phone refuses to turn on or is having other power-related issues, follow this guide to replace the battery.


### TOOLS:

- iFixit Opening Tools (1)

### PARTS:


- [LG BL-44JS Battery](#) (1)

## Step 1 — Battery

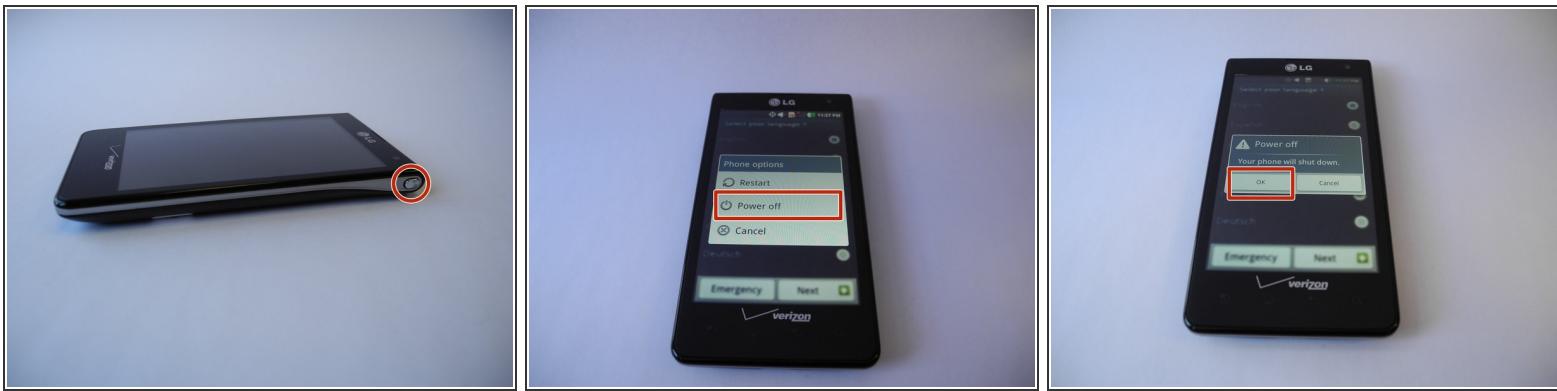


- Turn off the phone by pressing the power button, then press "Power Off", then press "OK" when notified that your phone will shut down.

## Step 2

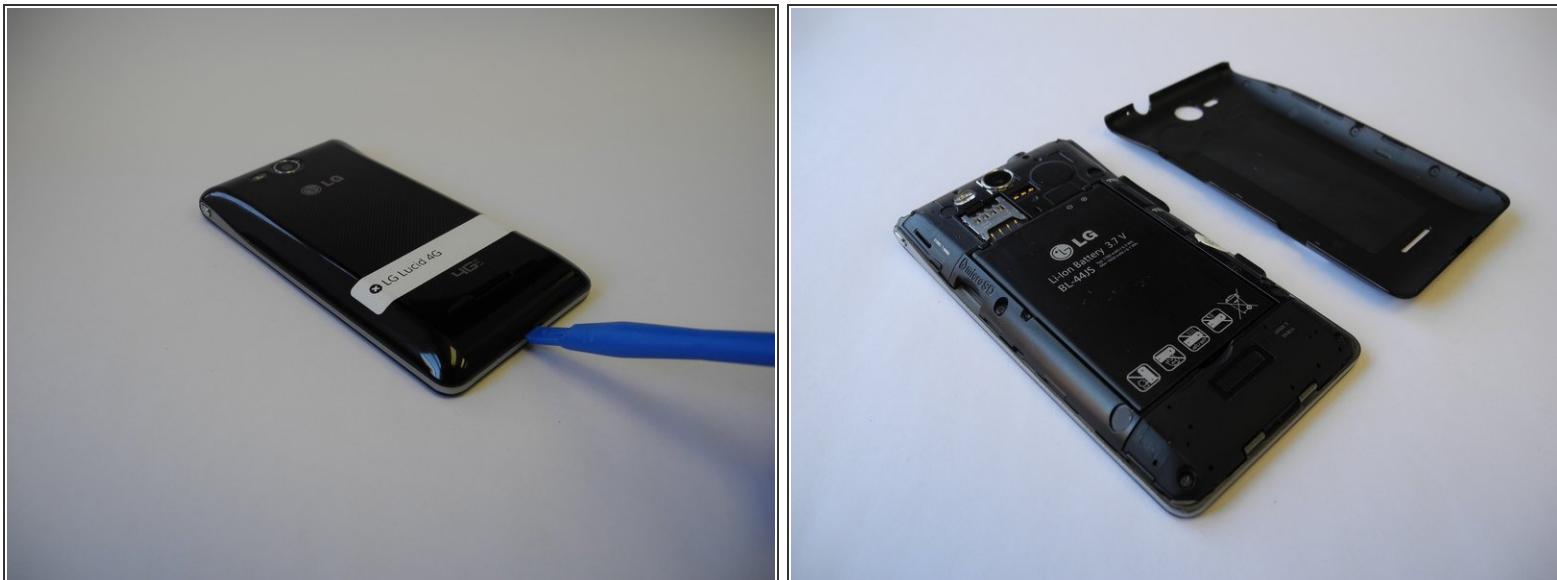

- Flip the phone so that its back plate is facing upward.
- Use your fingernail or prying tool to lift the back plate of the phone open by using the notch at the bottom.

## Step 3

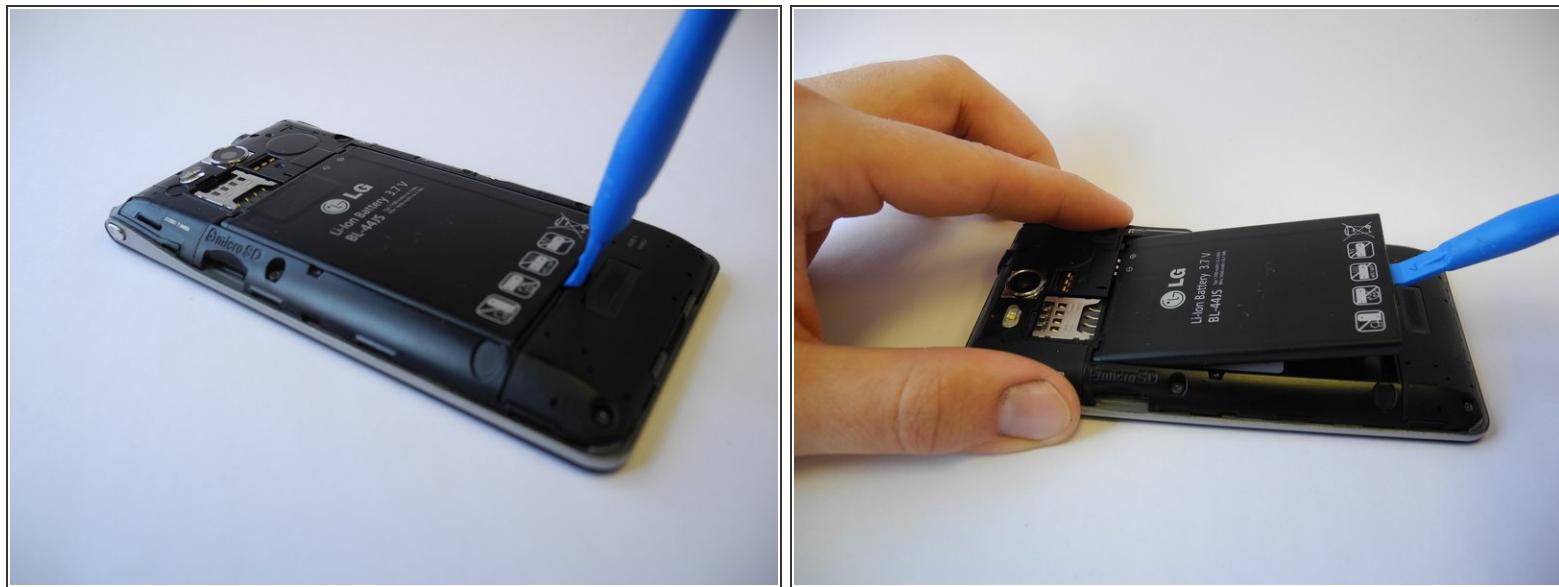

- Using the notch located near the bottom center, remove the battery with a prying tool or your fingernail.

To reassemble your device, follow these instructions in reverse order.