



# LG Motion 4G MS770 Volume Buttons Replacement

This guide will show you how to replace faulty volume buttons.

Written By: Daniela Allbright



## INTRODUCTION

You will need to use this guide if your volume buttons are not working or are worn down.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Remove the phone's back cover.



- Use a plastic opening tool to remove the back cover.

## Step 2 — Remove the battery.



- Use a plastic opening tool to remove the battery, lifting from the bottom right corner.

## Step 3 — Remove screws.





- Use a Phillips #00 Screwdriver to remove all eight 4mm screws.

## Step 4



- Use a plastic opening tool to remove the back trim by working around all of the edges.

## Step 5

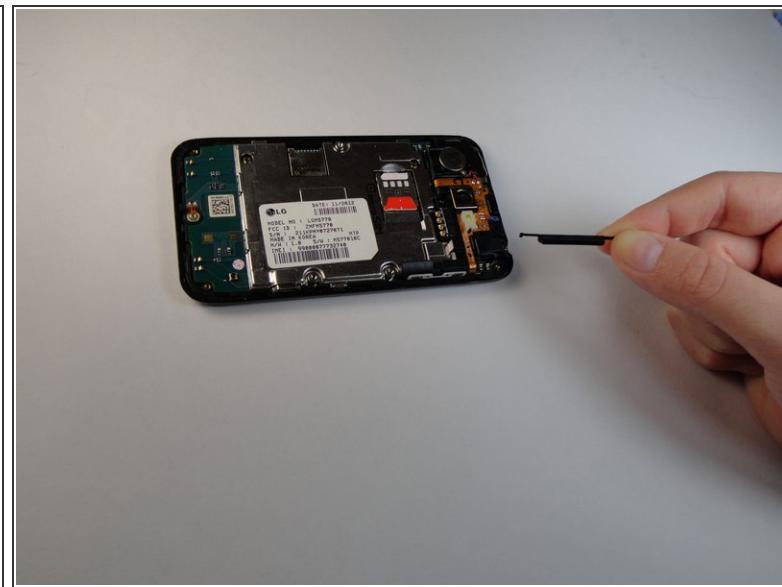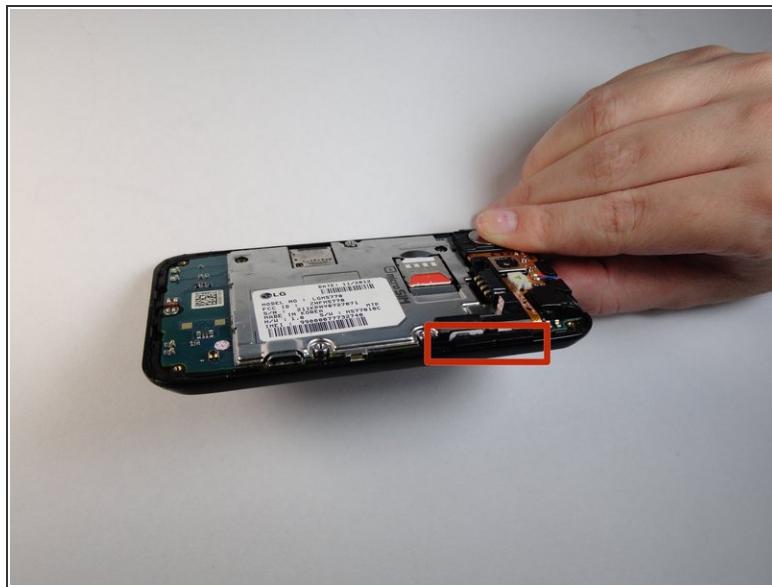

- Remove the volume buttons from the side.

To reassemble your device, follow these instructions in reverse order.