



LG Neon GT 365 Speaker Replacement

Use this guide to replace speaker.

Written By: kristie



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

Step 1 — Speaker




- With one hand, push the rectangular button located on the back top-side of the phone.
- With your other hand, remove the rear cover.

Step 2




- Remove 5 screws, 1 from each corner of the phone and 1 from the center-right of the phone.

Step 3

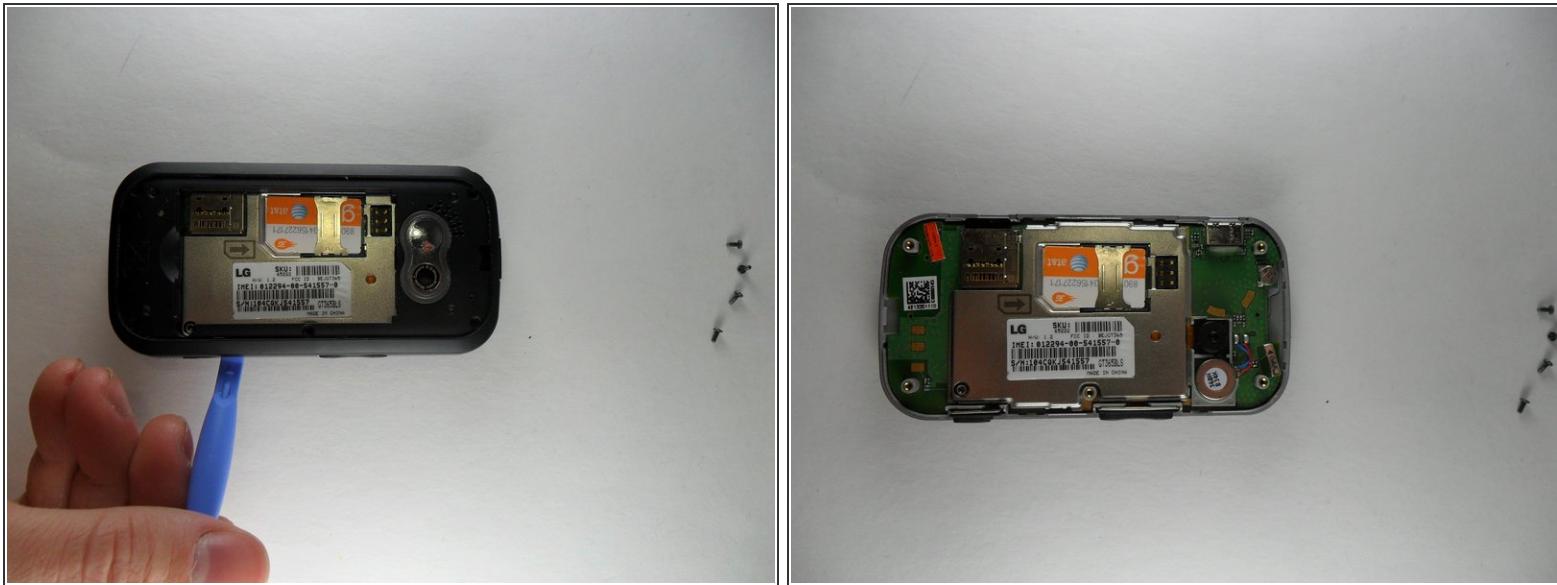

- Now pull off the rear casing, using an opening tool. **Buttons for volume and pictures may fall out**

Step 4

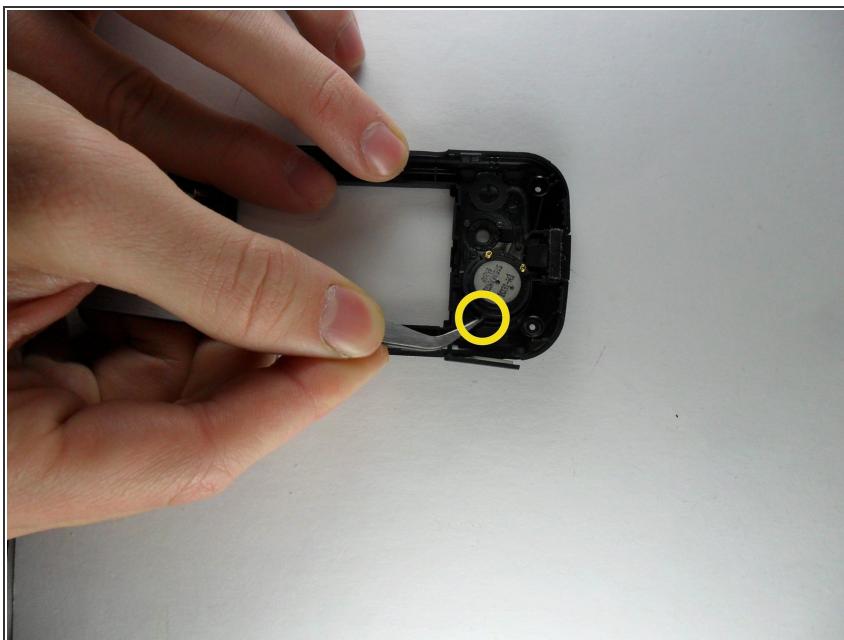

- Once you have removed the rear casing flip it over to see a small circular metal piece with 2 gold springs sticking out of the bottom. That is the speaker.
- Opposite the 2 small gold springs there will be a small black tab attached to the speaker sitting in a groove. Using tweezers or a small tipped screwdriver lift up on the tab to pop the speaker out.

Step 5



- Replace the broken speaker with a new one (make sure to line up the tab with the groove). Push firmly into place. Follow reverse instructions to put the rear casing and back cover on.

To reassemble your device, follow these instructions in reverse order.