



LG Optimus Dynamic II L39C Screen Replacement

Replace a damaged or malfunctioning screen.

Written By: Patrick Barron




INTRODUCTION

For trouble with touch feedback or if your screen is cracked and you want to replace it.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Remove the back case

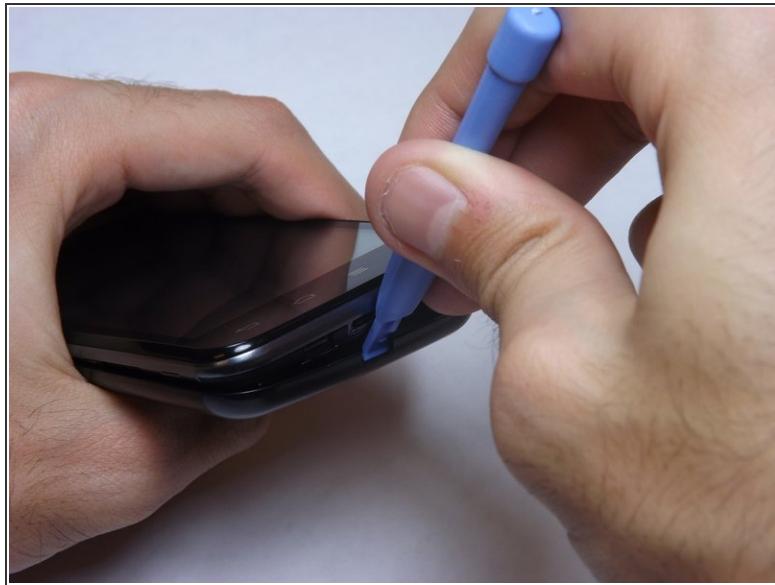

⚠ Make sure not to push the tool into the USB port. Doing so may cause damage to your phone.

- Hold the blue plastic opening tool at the edge of the USB opening. Push down and pry the case off the phone gently.

Step 2 — Remove the Battery



- Lift the battery out of the phone and replace with your new one.

Step 3 — Remove the SD Card



- Grab the end of the SD Card and pull it out of the phone.

Step 4 — Remove the screws from the midframe



- Use the PH #000 screwdriver to remove the six screws from the midframe

Step 5 — Remove the midframe




- Using the plastic opening tool, work gently to go around the perimeter of the phone and remove the midframe.

Step 6 — Disconnect the screen from the motherboard



- Use the plastic opening tool to disconnect the small orange tab from the motherboard.
- Next disconnect the silver tab slightly above where the orange tab was.

Step 7 — Separate the screen and motherboard

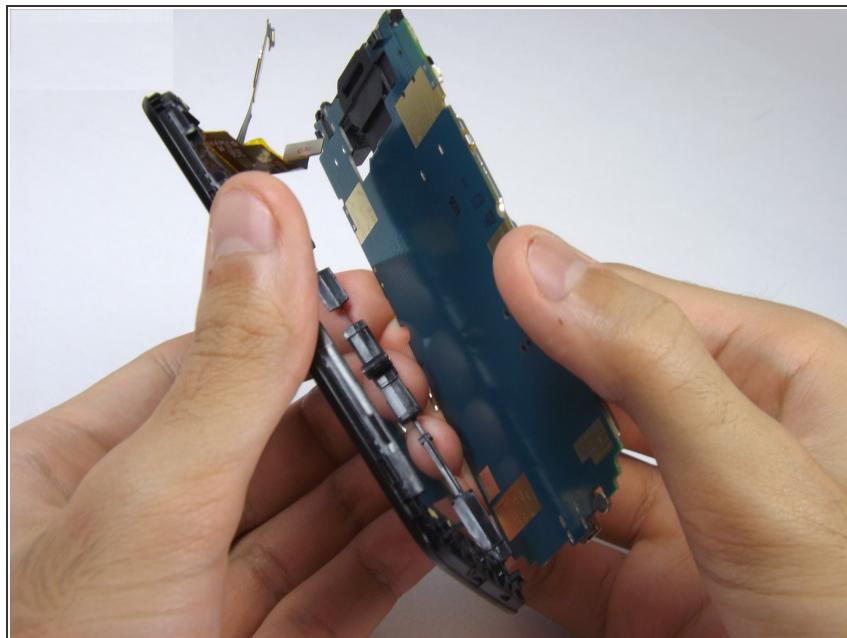

- Gently feed the orange and silver tabbed ribbons through the hole in the motherboard and the screen will be free.

To reassemble your device, follow these instructions in reverse order.