



LG Optimus F3 Speaker Replacement

Guide for replacing the speaker.

Written By: Ryan McDermott



 **TOOLS:**


- [64 Bit Driver Kit \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Speaker




- Remove rear battery cover and battery.

Step 2

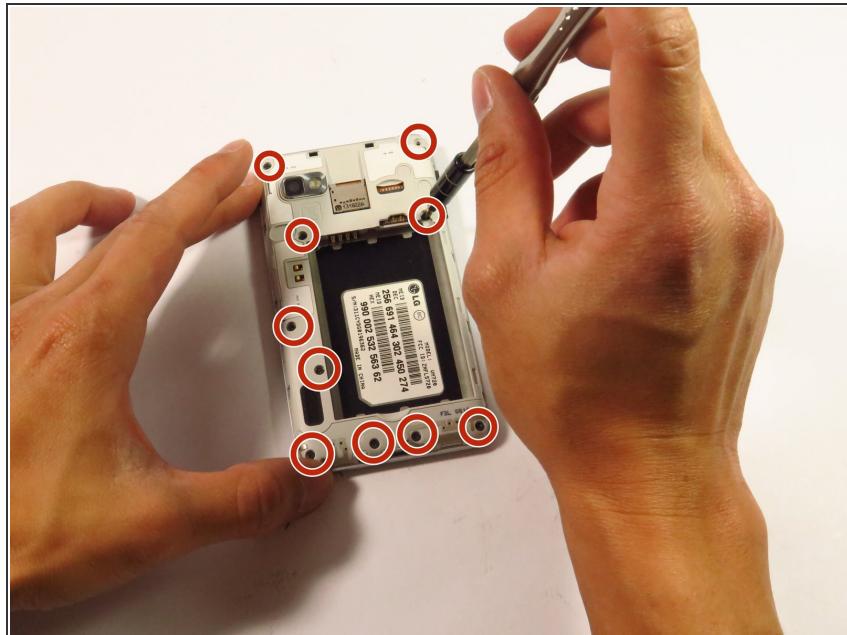


- Remove the 10 screws on the rear case.

Step 3

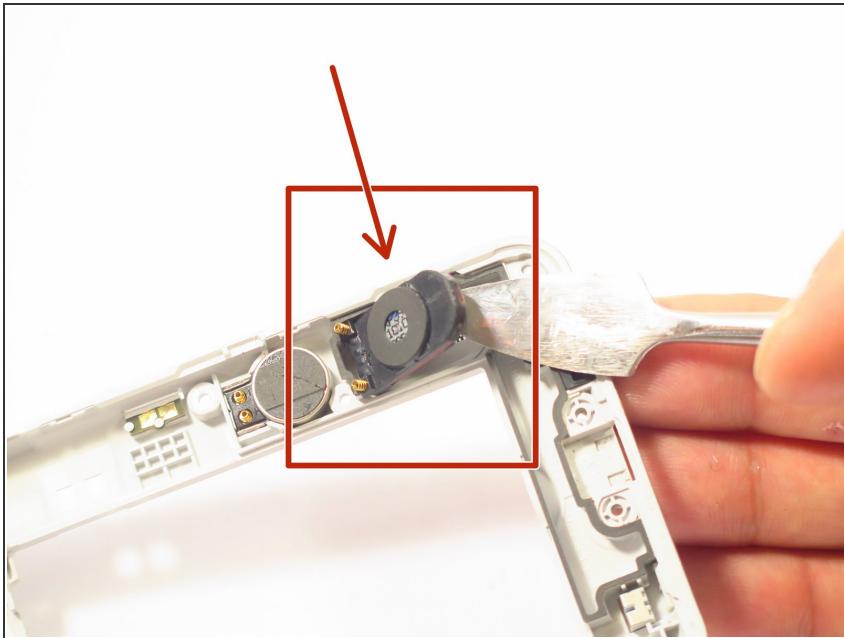

- Locate the speaker on the rear case.

Step 4

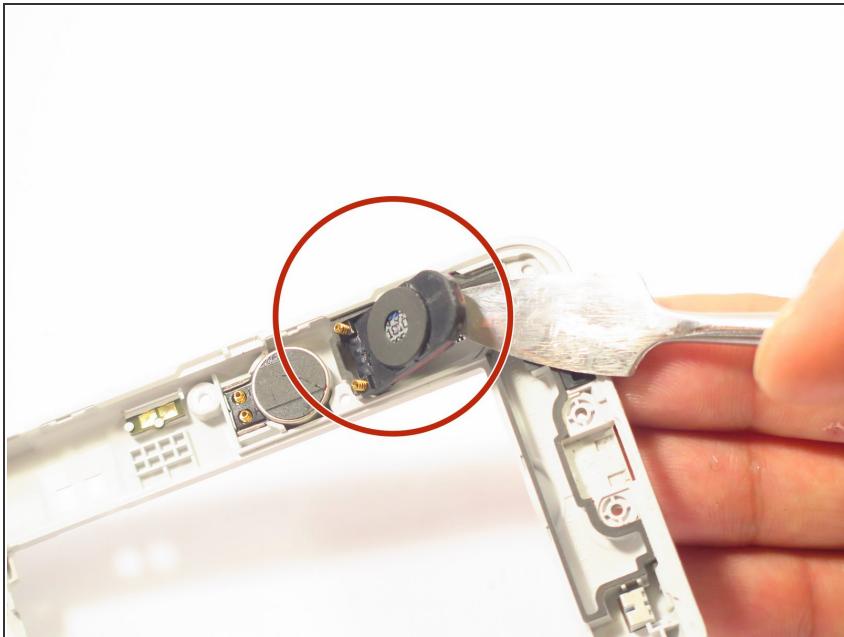

- Remove the speaker with a spudger.

To reassemble your device, follow these instructions in reverse order.