



LG Optimus F3 digitizer screen glass replacement

Replace digitizer glass in LG Optimus F3 LS720. Also demonstrates almost complete teardown.

Written By: Rita Snodgrass



INTRODUCTION

Replace digitizer glass in LG Optimus F3 LS720. Also demonstrates almost complete teardown.

TOOLS:

- Small Phillips Head Screwdriver (1)
- iFixit Opening Picks set of 6 (1)
- Plastic Cards (1)

Optional

PARTS:

- Digitizer glass for Optimus F3 LS720 (1)
- Glass adhesive
- Glass adhesive of some sort (1)

Step 1 — Digitizer Glass



- Remove Back Cover
- Remove SD Card (if you have one)
- Remove SIM Card
- Remove Battery

Step 2



- Remove 10 Philips Head screws

Step 3




- Using a pry took, pry the back plate off of the phone. Work your way around, prying the tabs as you come to them.

Step 4




- Use pry tool to disconnect camera cable and then remove the camera

Step 5

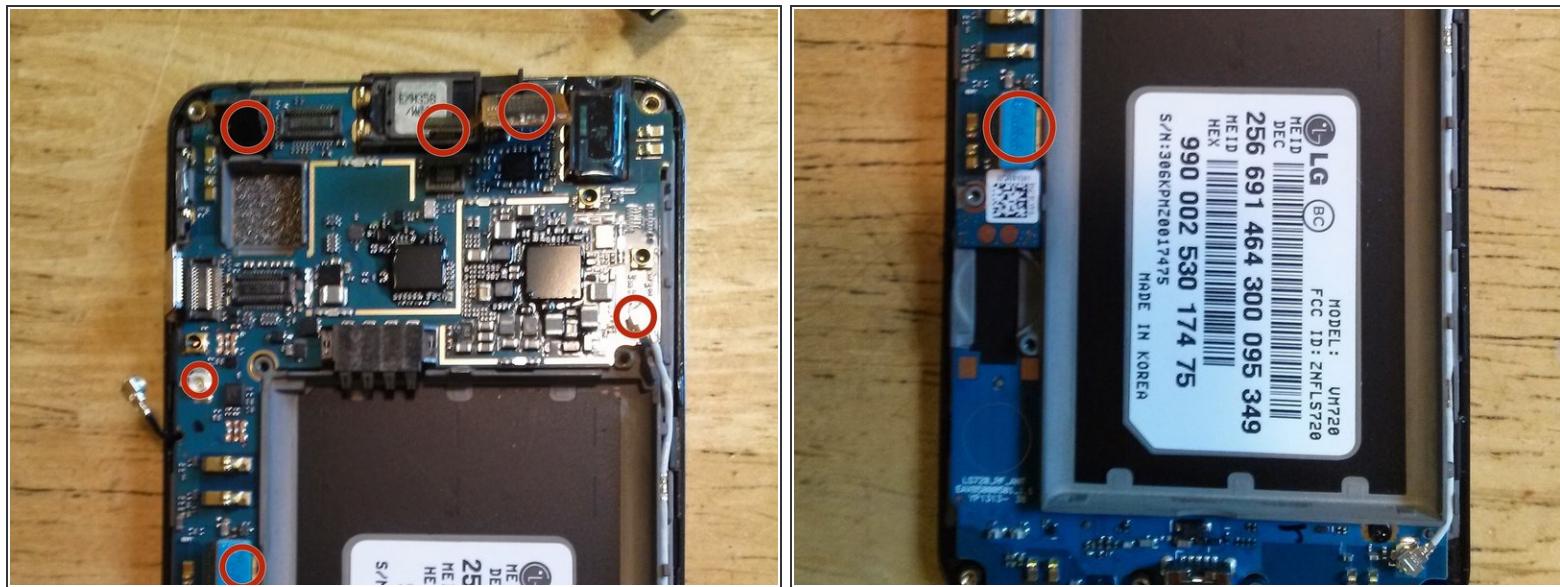


- Use pry tool to disconnect 4 ribbon cables and two antenna wires.

Step 6

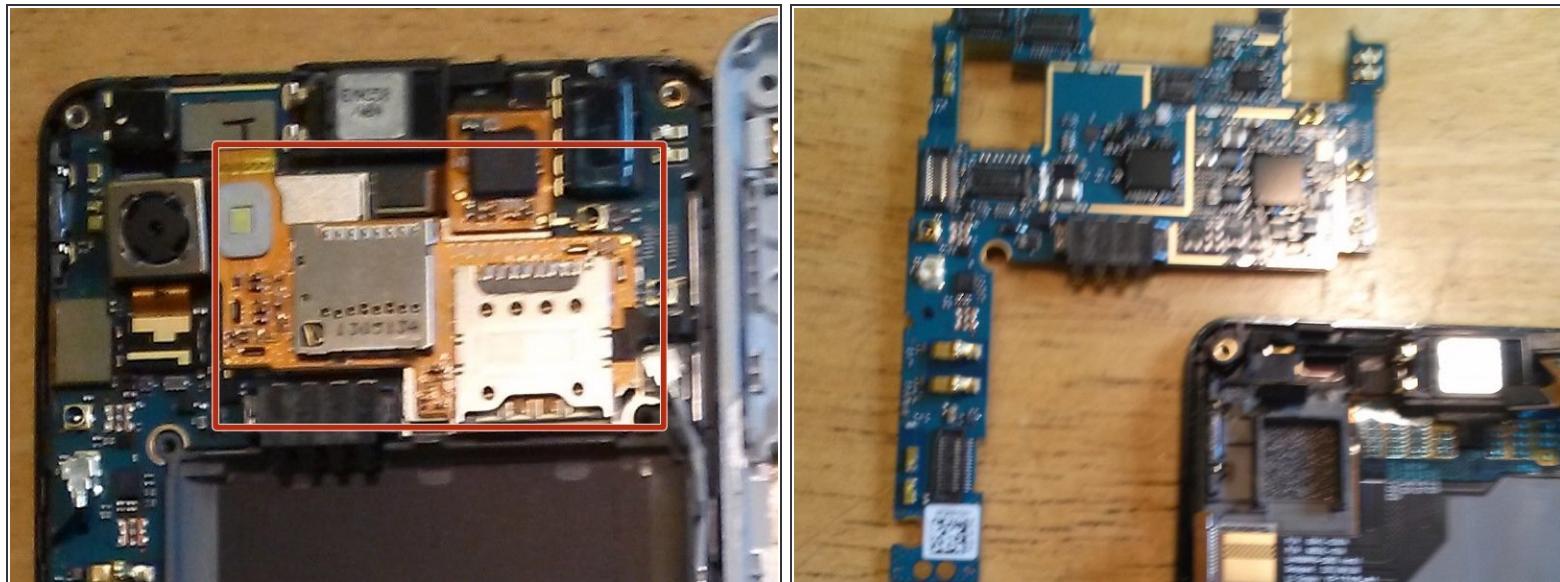


- Use pry tool to gently remove the logic board.

Step 7

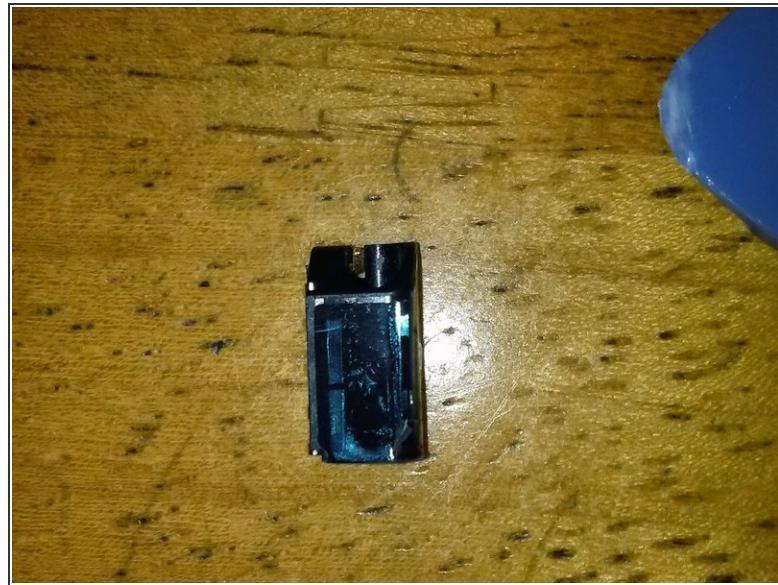


- Use pry tool to remove headphone jack.

Step 8

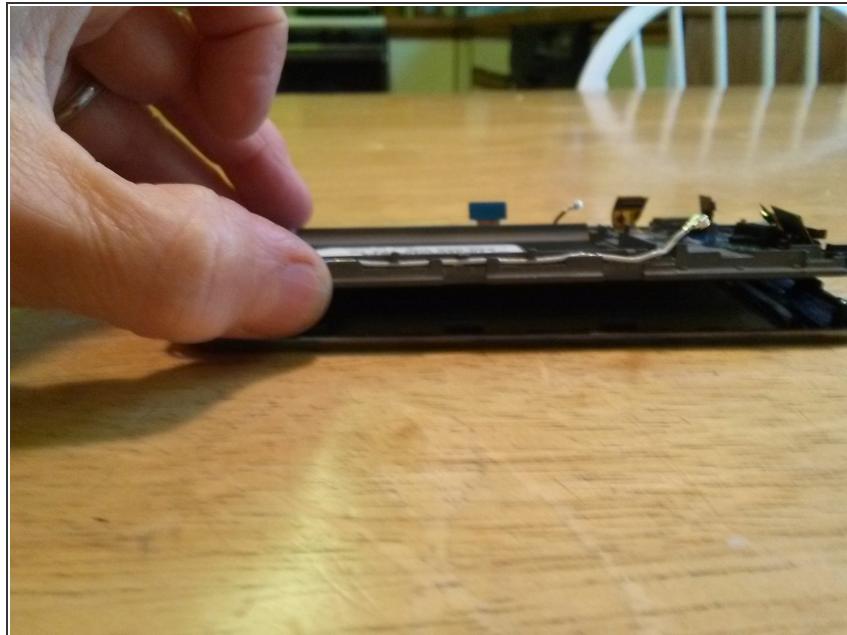

- Use the pry tool to pry the front frame off of the main body of the phone.

Step 9

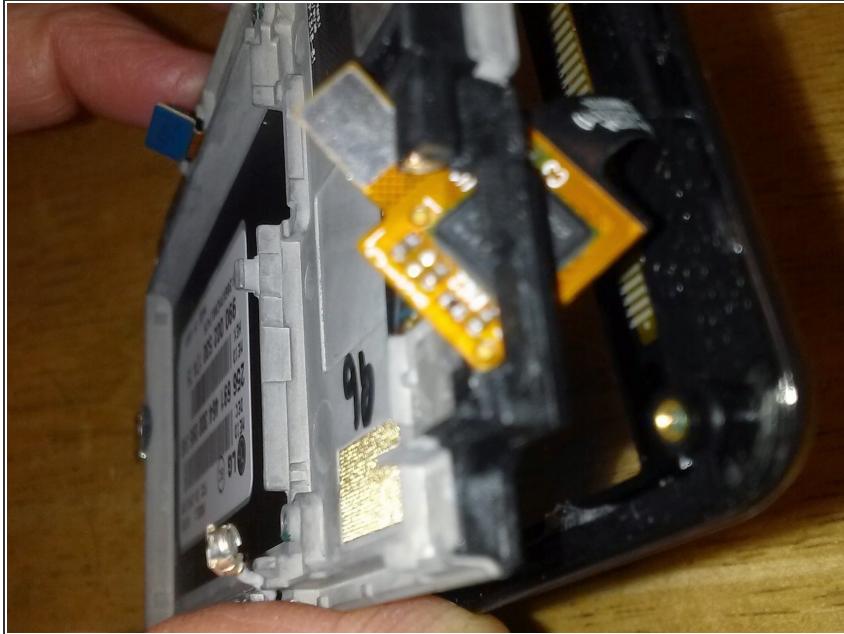

- Carefully pull the digitizer cable through the slot. There will be a small piece of rubber blocking the opening. You may remove it, or just pull through it.
- Note: If the slot is not wide enough, make sure that you removed the headphone jack, as described in step 7.

Step 10



- Use a heat gun or blow dryer to heat up the adhesive holding the glass in the frame. Carefully remove the glass using a pry tool.

Step 11



- Clean existing adhesive off of frame, or reuse it if you managed to keep it intact.
- Apply new adhesive if not reusing existing adhesive.

Step 12



- Insert new glass.
- Ensure that speaker cover at top of phone is in place.
- Reverse steps to reassemble phone.

To reassemble your device, follow these instructions in reverse order.