


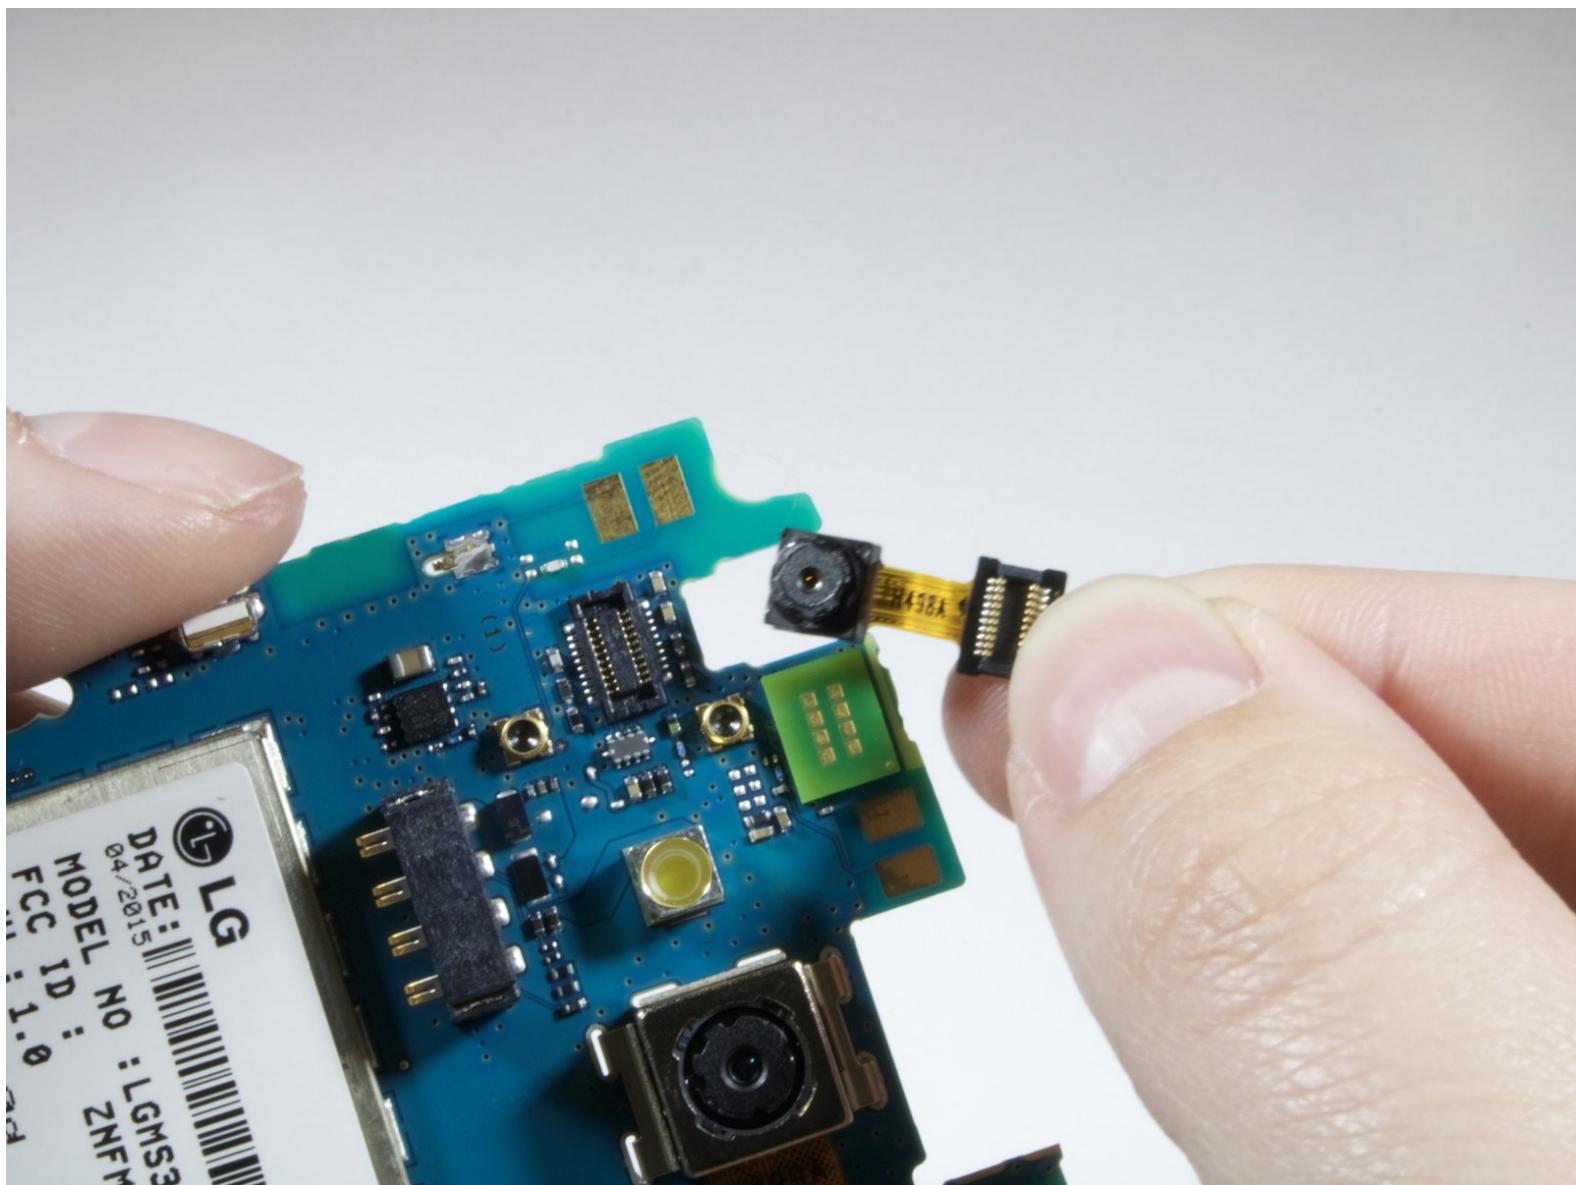

# LG Optimus F60 Front Camera Replacement

This guide will help you replace a faulty, cracked, or broken front camera for a LG Optimus F60.

Written By: Austin Johnson



## INTRODUCTION

This guide will take you through the process of replacing the front camera in an LG Optimus F60. This task should take about 7minutes to complete.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Battery




- Hold the phone in your hand and position the small plastic opening tool or your finger under the lip of the phone by the USB port.
- Pry or lift up on the indent with the opening tool.
- Remove the back panel.

## Step 2



- Place the small plastic opening tool or your finger at the indentation at the base of the battery.
- Pry upwards or lift with your finger and remove battery.

## Step 3 — Front Camera

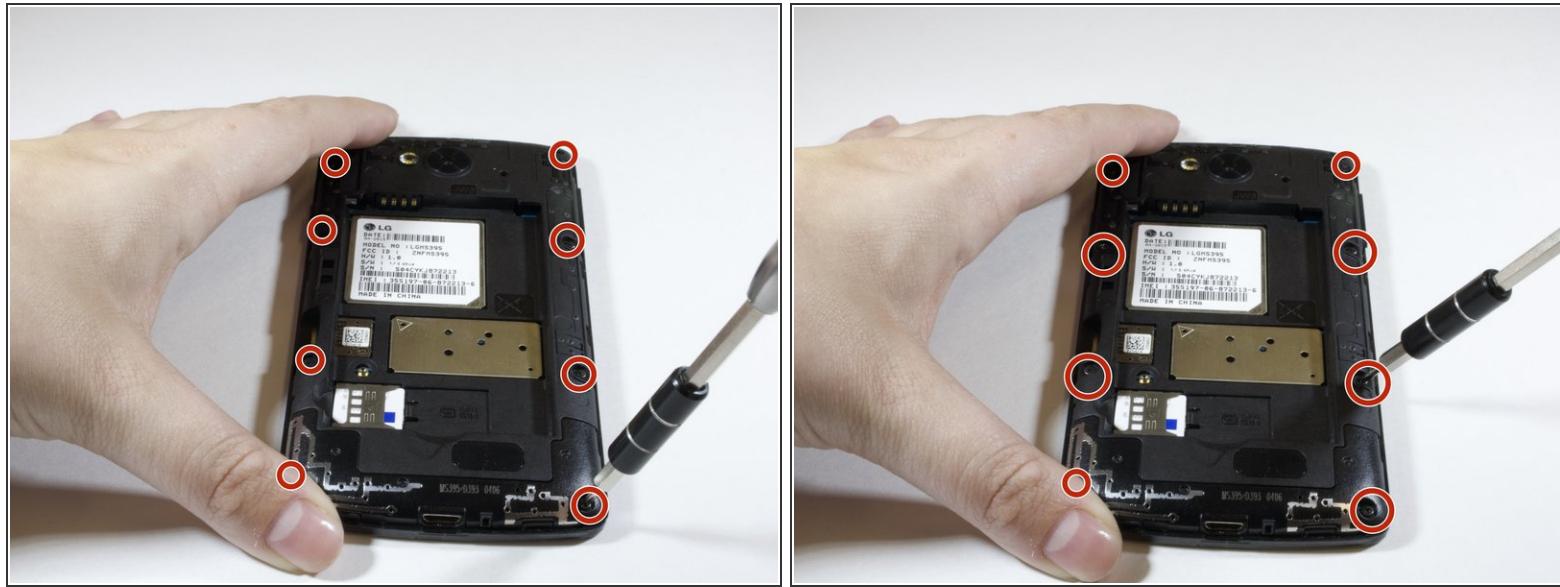

- Use the phillips #000 Screwdriver to unscrew eight 4mm screws.

## Step 4




- Insert the plastic opening tool in the indentation marked by the red square.
- Pry the plastic opening tool upwards to release the lower back panel.
- Remove the lower back panel from the device.

## Step 5




- Continue moving plastic opening tool around device until back panel is loose enough to remove.
- Remove the back panel

## Step 6

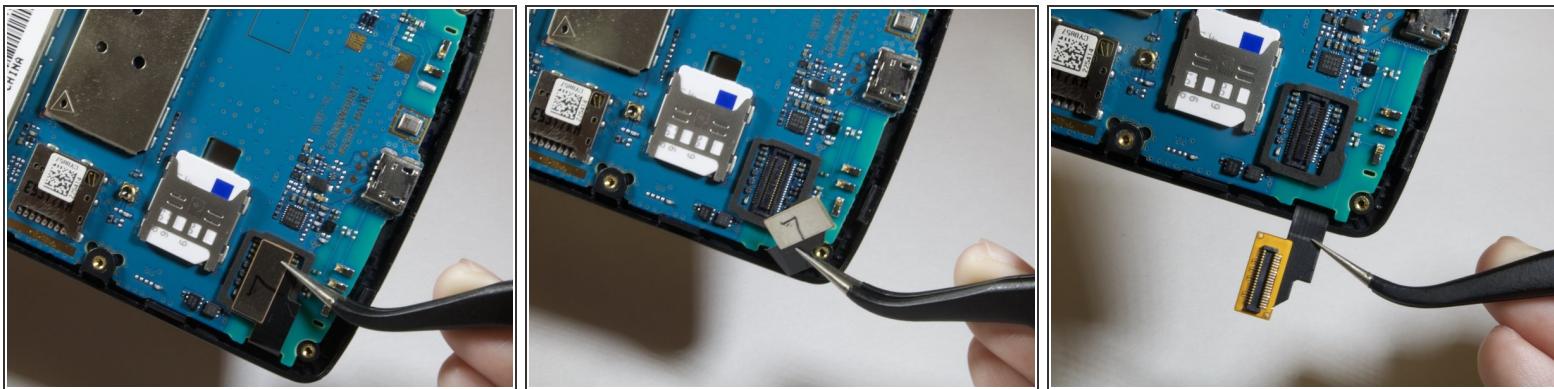

- Locate the digitizer connection on the lower left hand side of the device.
- Use the tweezers to lift up and gently remove the connector.

## Step 7

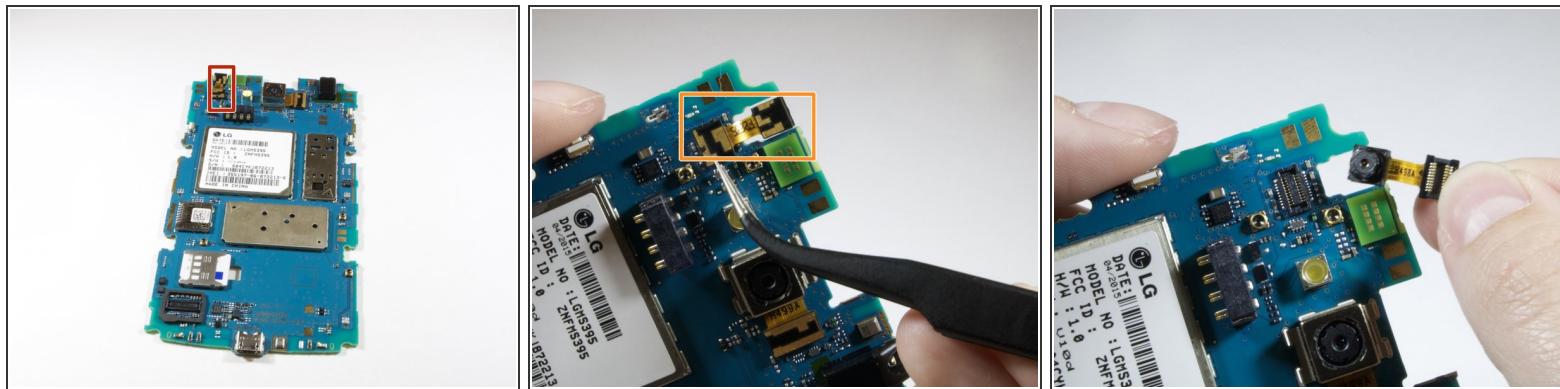

- Locate the front camera on the upper left hand side of the device. The camera is marked in red.
- Use the tweezers to remove the front camera from the connector marked in orange.
- Remove and replace front camera.

To reassemble your device, follow these instructions in reverse order.