




# LG Optimus Fuel Speaker Replacement

Replace the speaker on your phone if you're having trouble hearing while talking on your phone.

Written By: Jason Owen

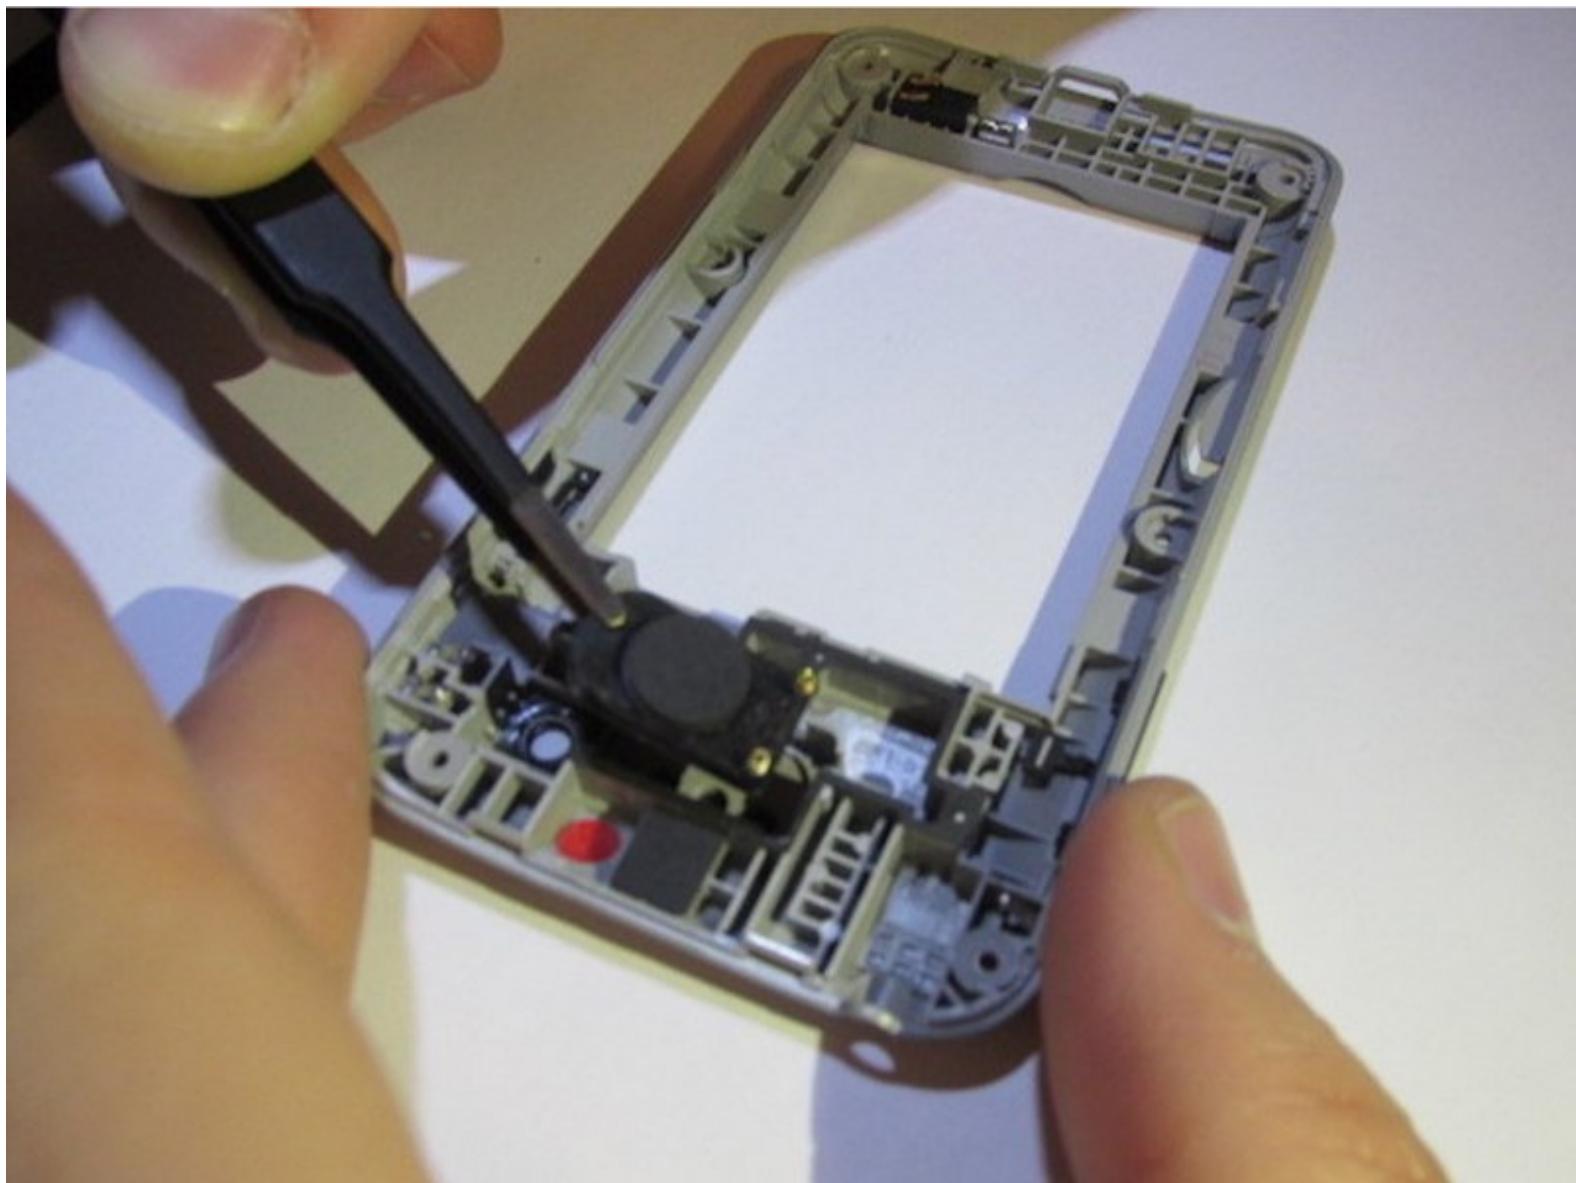

## INTRODUCTION

You may need to replace your speaker if you notice a decrease in sound quality while using your phone or while listening to music.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Precision Tweezers Set](#) (1)

## Step 1 — Battery



- Use the opening on the right side of the phone to pull off the plastic back cover.

## Step 2




- Use the curved opening at the center-bottom of the battery to carefully remove the old battery.

## Step 3 — Speaker



- Remove the six 1.4mm screws using a Phillips head screwdriver with a size PH00 bit. Then fully remove the back panel with a plastic opening tool.

## Step 4

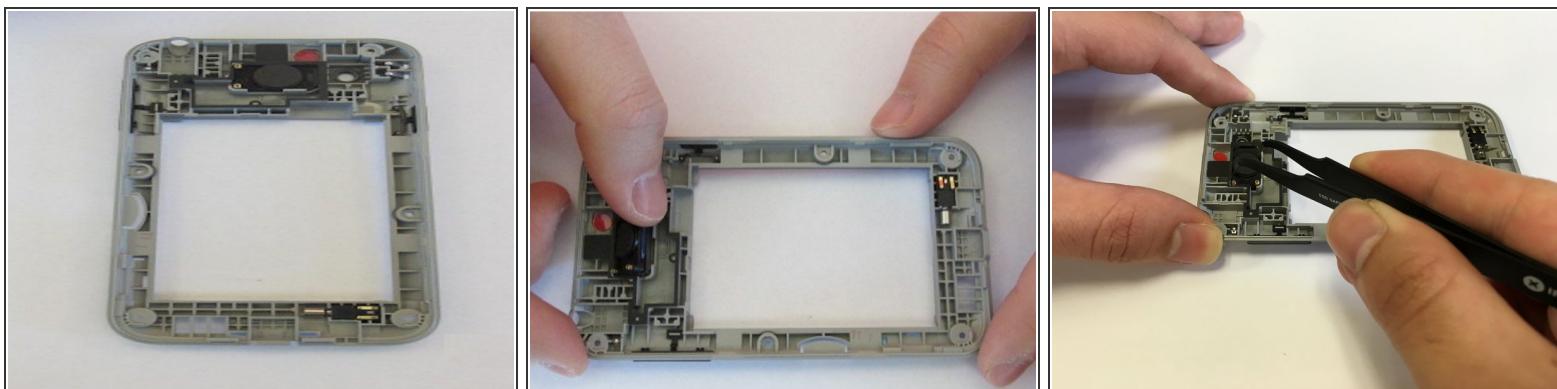

- Remove the speaker from the back panel. You may have to use some tweezers if you are having a hard time grabbing the speaker with your fingers.

*ⓘ Remember to take note of where the two springs on the speaker are positioned before removing it. Install the new speaker with the springs in this same position.*

To reassemble your device, follow these instructions in reverse order.