



LG Optimus L7 P705 Home Button Replacement

Replacing the LG Optimus L7 Home Button.

Written By: Bruna




INTRODUCTION

The following guide explains how to replace the home button.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Home Button

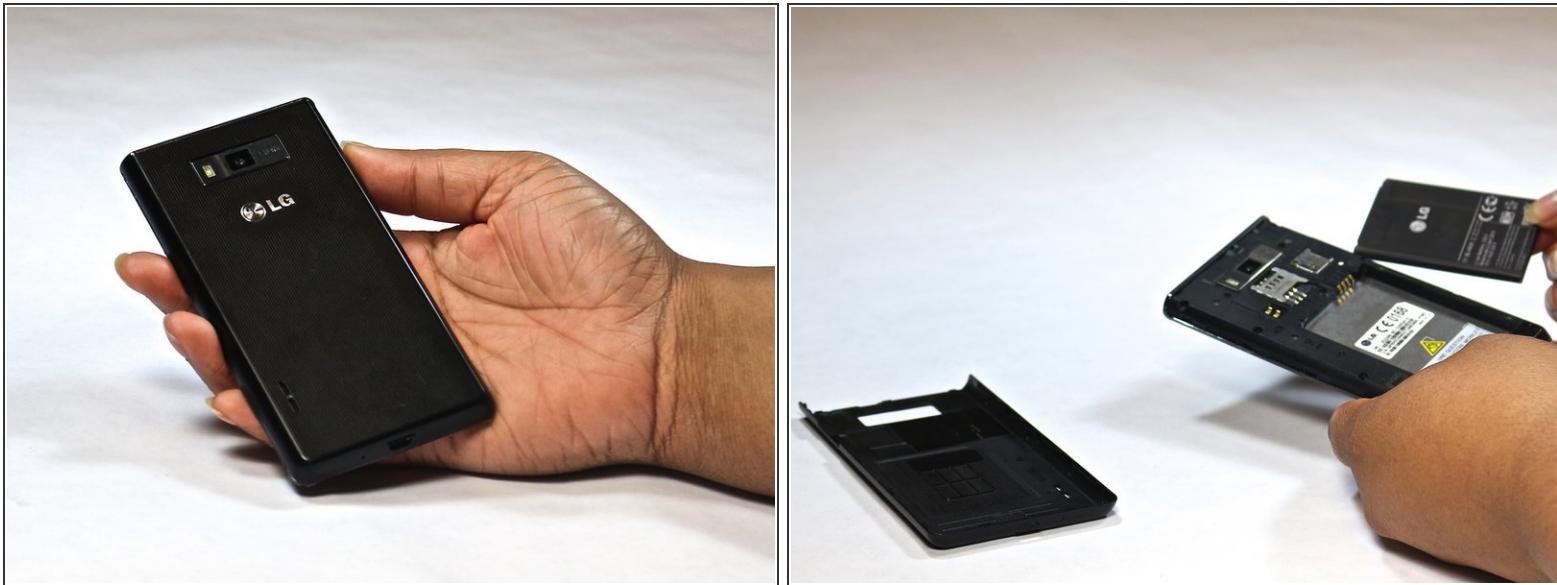


- Insert a plastic opening tool between the seams of the device and pry the back cover away from the phone.
- Remove the battery and SIM card.

Step 2




- Remove the twelve screws using the Phillips 000 screwdriver.

Step 3

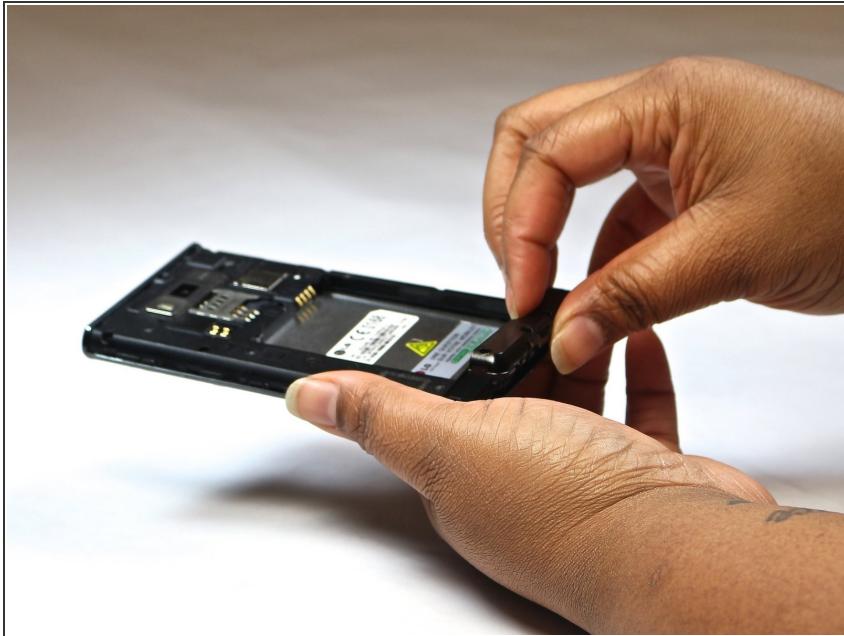

- Remove bottom plate where the charger port is located.

Step 4

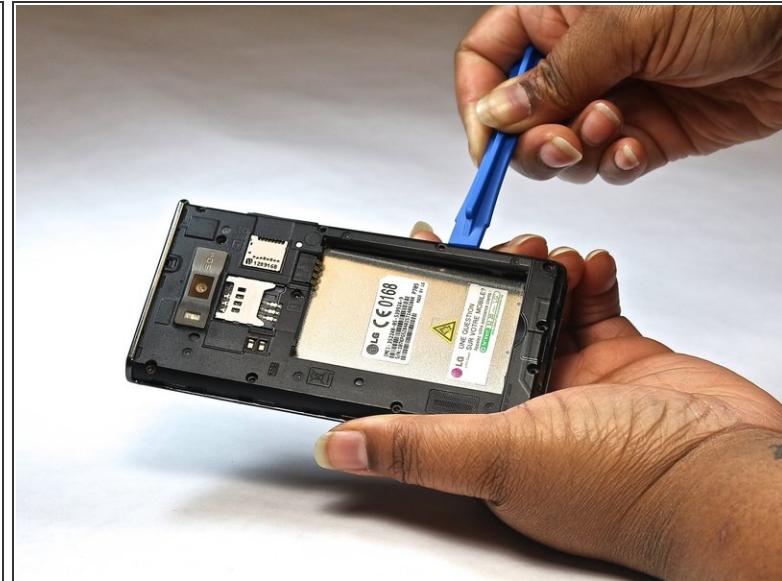

- Insert a plastic opening tool between the seams of the device and apply some pressure to lift off the cover.

Step 5



- Flip over to the face of the device.
- Lift off the glass screen (display).

Step 6



- Remove the home screen button.
Replace as needed.

To reassemble your device, follow these instructions in reverse order.