



LG Optimus V Camera Replacement

This guide will show how to replace the camera in the LG Optimus V.

Written By: Joseph Pasquantonio



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Turn the LG Optimus V over so that the back cover is facing upward.

Step 2



- Locate the opening right above the camera.
- Use a spudger to detach the back cover.

Step 3




- Gently remove the battery with your spudger.

Step 4 — Camera




- Remove the six screws on the silver casing.
- Use the plastic opening tool to remove the silver casing.

Step 5

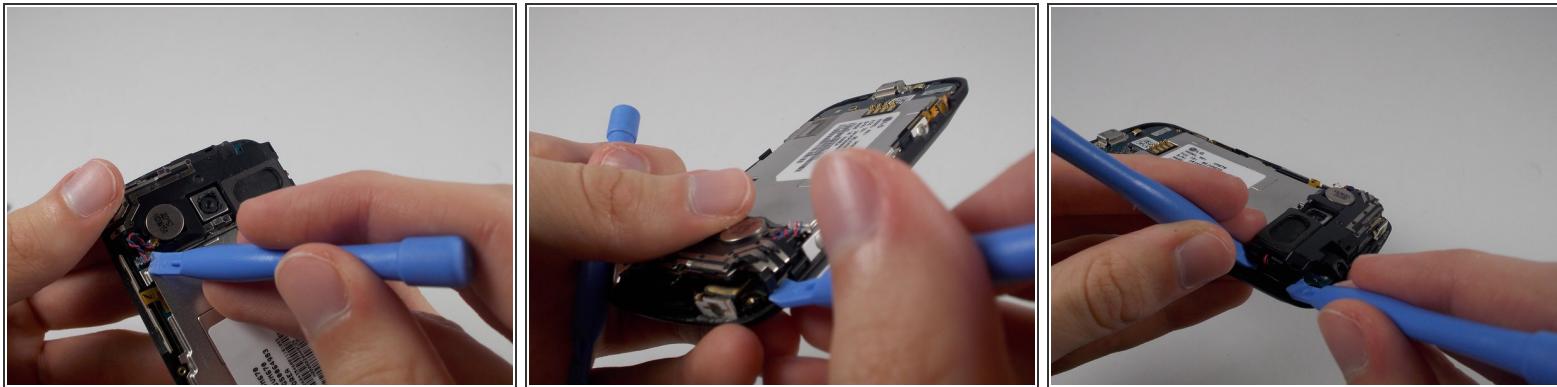

- Use a plastic opening tool to remove each area holding the parts together.

Step 6

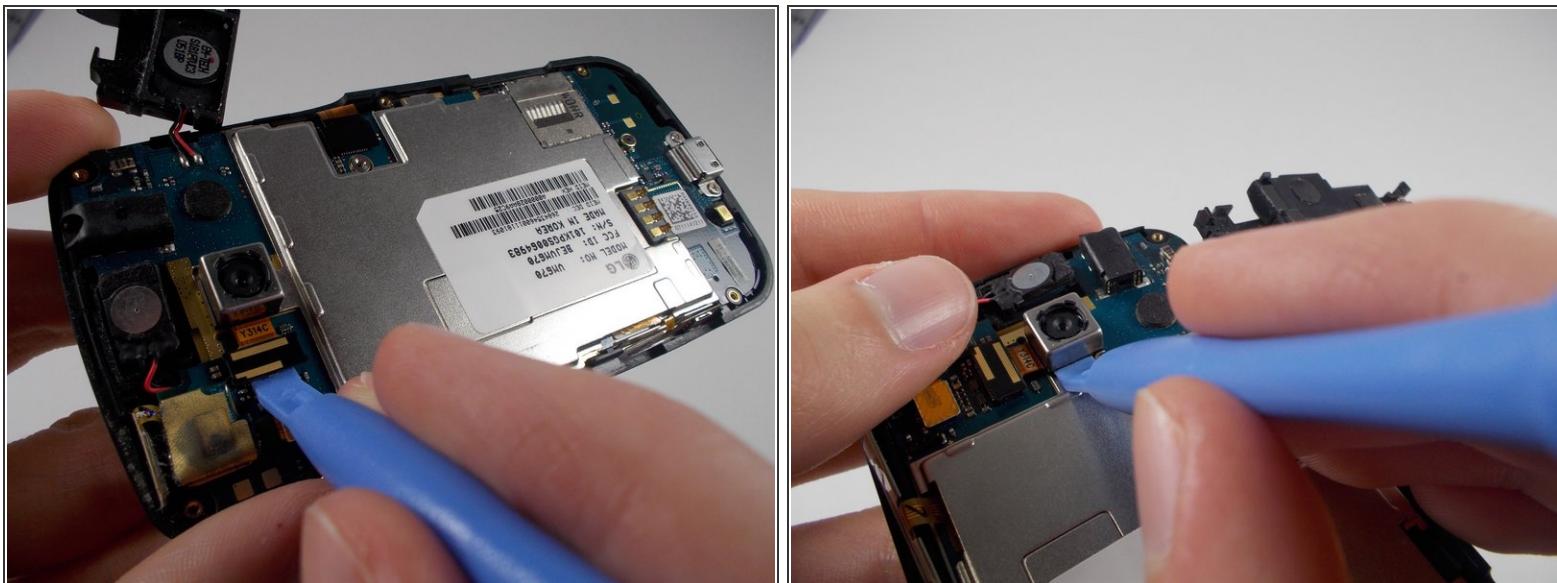

- Use a plastic opening tool to remove the small black and yellow piece that reads Y3114C.
- Use a plastic opening tool to pry off the camera.

To reassemble your device, follow these instructions in reverse order.