



# LG Optimus Zone 3 Micro SD Card Replacement

Use this guide to help you replace the Micro SD Card on you LG Optimus Zone 3.

Written By: Cooper Parnell



## INTRODUCTION

Micro SD cards are removable flash memory cards, and can be inserted to expand the memory on your phone. Micro SD cards store information and are sold in various capacity sizes. You may be having a problem with your Micro SD card if you are experiencing difficulty sending or receiving texts, indicating that your memory is full.

### TOOLS:

- **Tweezers (1)**

## Step 1 — Battery



- Insert fingernail into the slot on the back left side of the phone and pry open.

## Step 2



- Remove faulty battery.

***i*** The battery is missing from our device, however, it would be located in the section in-between the fingers.

## Step 3 — Micro SD Card



- Locate Micro SD Card Slot.

*(i)* In our device shown, there is not currently a micro SD card in the device. However, it would be located in the slot where the finger is pointing.

## Step 4



- Using Tweezers grab onto the Micro SD Card and remove.

To reassemble your device, follow these instructions in reverse order.