



# LG Phoenix 2 Outer Trim Replacement

Replace the outer trim on your LG Phoenix 2 if it is damaged.

Written By: Sarah Popp



## INTRODUCTION

If you need to install a new outside trim on your LG Phoenix 2, use this guide to disassemble and replace the damaged outer trim. For this guide you will need a plastic opening tool and a Phillips #000 screwdriver head. These steps will be straightforward and easy to follow, but the pieces should be handled with care, so as to not damage or misplace any needed components.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Outer Trim Casing



- Insert a fingernail in the notch on the bottom right corner of the phone.
- Pop off the back cover off of your device.


## Step 2



- Insert a fingernail in the notch under the battery.
- Remove the battery.


This document was generated on 2020-04-04 10:57:01 AM (MST).

## Step 3

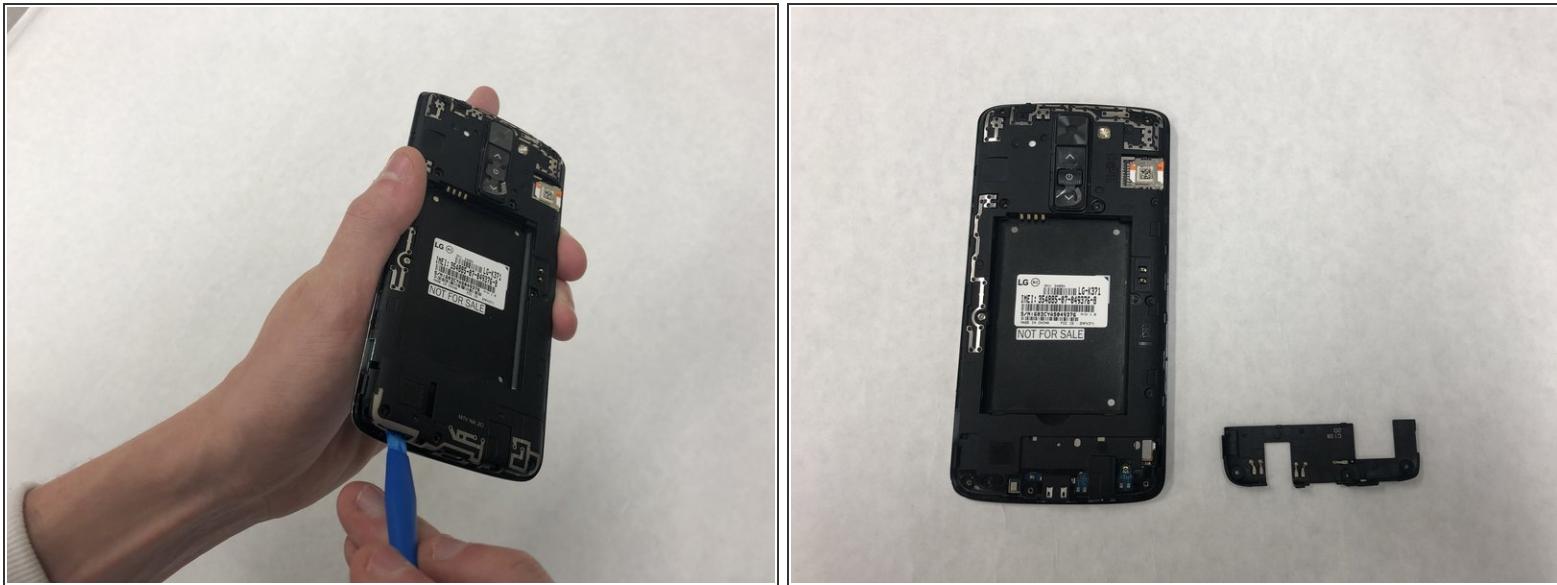


- Insert the opening tool under the bottom cover.
- Pop out the bottom cover.

## Step 4

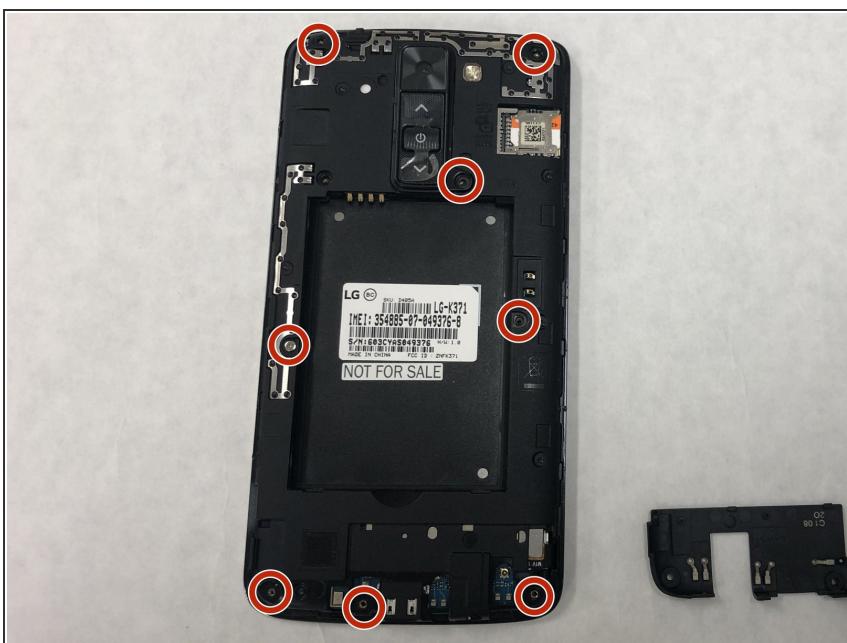

- Remove eight 3mm screws using a Phillips #0 screwdriver.

## Step 5

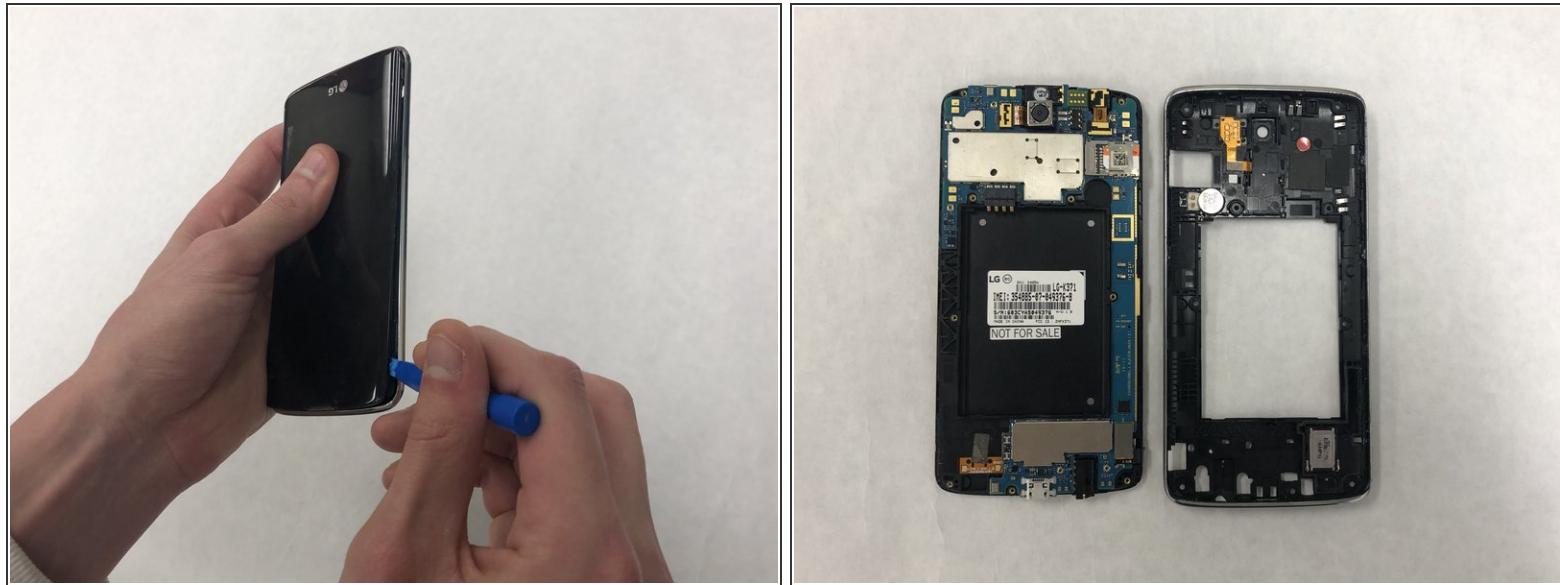

- Insert the opening tool in between the silver trim and the screen.
- Pop off the trim.

To reassemble your device, follow these instructions in reverse order.