


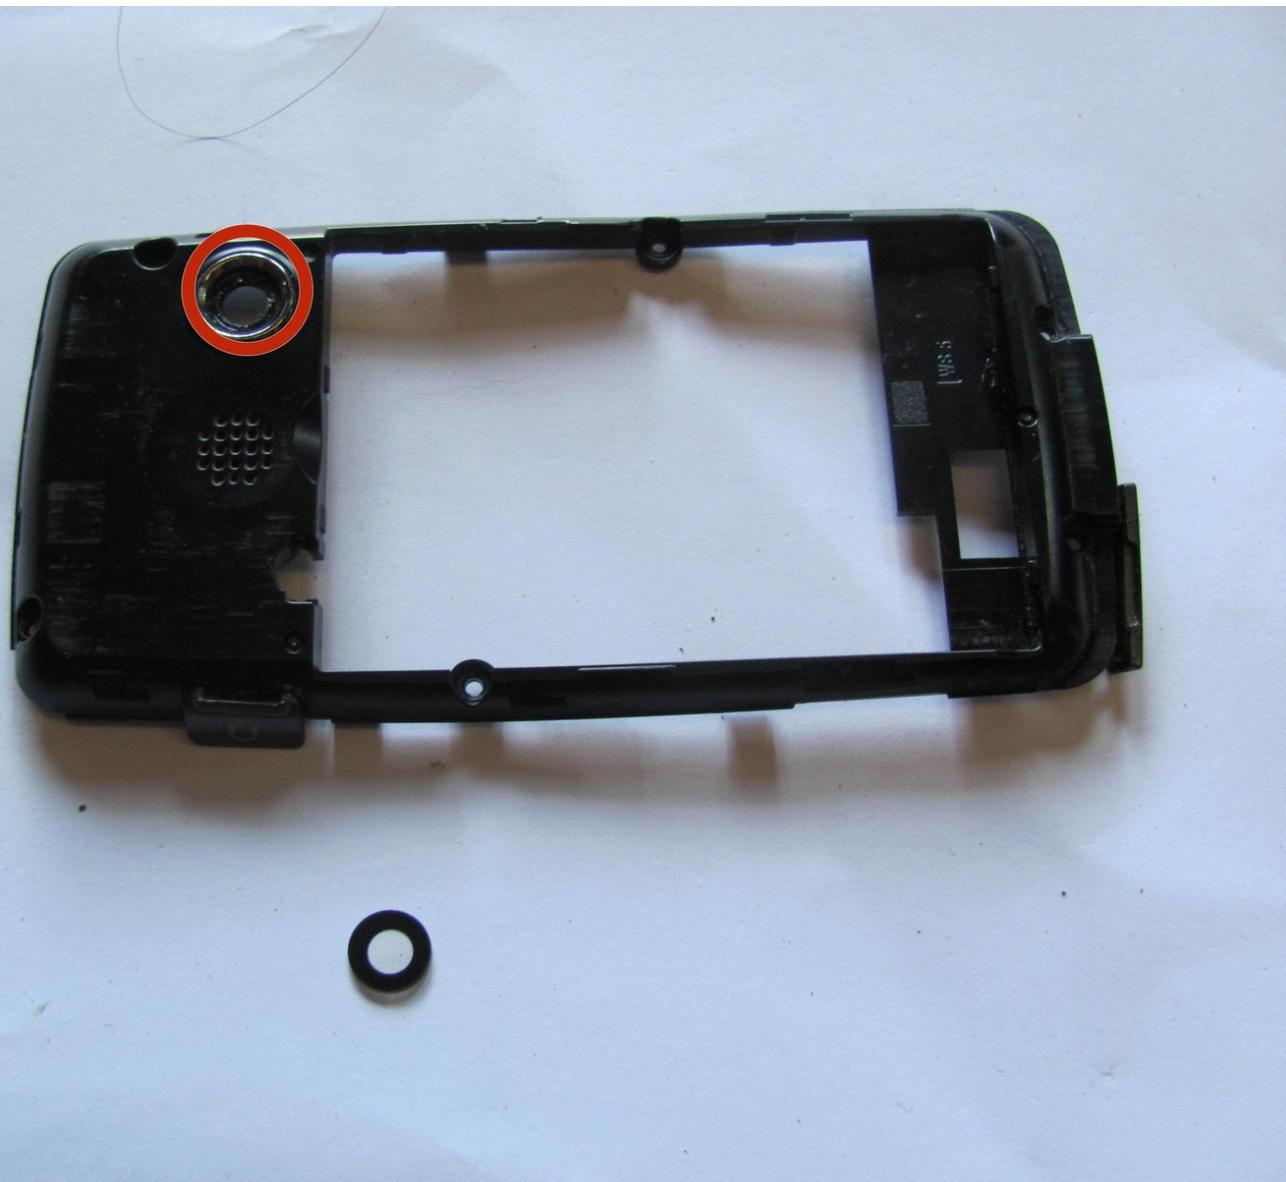

# LG Rumor Touch Camera Lens Replacement

By following these procedures, you will successfully be able to replace the camera lens in your LG Rumor Touch cell phone.

Written By: Andrew Hodges



## INTRODUCTION

If your LG Rumor Touch needs a camera lens replacement, these are instructions to safely remove the camera lens.

### **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

### **PARTS:**

- [LG Rumor Touch Camera Lens \(1\)](#)

## Step 1 — Battery



- Remove the phone's back cover by placing your thumb the above charging port, located at the bottom of the phone, and sliding the back cover upward.

## Step 2



- Gently pry the battery out of the phone with the spudger.

## Step 3 — Inner Shell



- Unscrew the 5 #1 5mm screws.

## Step 4



- Lift the inner shell from the phone.

## Step 5 — Camera Lens



- Push the camera lens through its socket, from the inside out.

To reassemble your device, follow these instructions in reverse order.