



LG Stylo 3 Plus Display Assembly Replacement

A step-by-step guide to replacing the screen/display assembly in your LG Stylo 3 Plus.

Written By: Dillon Cooper



INTRODUCTION


The screen is a component that is one of the most susceptible to malfunctioning in a cellphone. In many cases, the screen is prone to breaking and cracking when dropped from various heights. In addition, you may notice that certain images may not be properly appearing due to dead pixels or other impurities in the screen. If your screen is cracked or if you're experiencing any problems with your screen, the screen needs to be replaced. Follow this guide to replace the display assembly in your LG Stylo 3 Plus.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



 Power off the phone before beginning disassembly.

- Place the phone face down.
- Insert a fingernail or a plastic opening tool into the gap on the side of the phone.
- Carefully slide your finger or the tool throughout the edge of the phone to ease the back case off.

Step 2 — Battery



- Place the back cover off to the side.
- Insert the opening tool into the small gap below the battery.
- Carefully pop the battery out to prevent damage.

Step 3 — Rear Camera



- Remove the twelve 4mm screws using the Phillips #000 screwdriver.
- Use the plastic opening tool to remove the inner case.
- Carefully remove the inner case.

Step 4



- Use your fingernail or the plastic opening tool to flip the flex cable.
- Use the precision tweezers to carefully grasp and pull out the camera.

Step 5 — Front Camera





- Carefully flip open the flex cable box with the plastic opening tool.
- Using precision tweezers, carefully lift the front camera off the device.

Step 6 — Motherboard



- Gently flip open the flex cable box using a blue plastic opening tool.
 - Carefully remove the motherboard with your hands or a blue plastic opening tool.
- ⚠ Make sure all parts are secure while taking out motherboard.

Step 7 — Headphone Jack

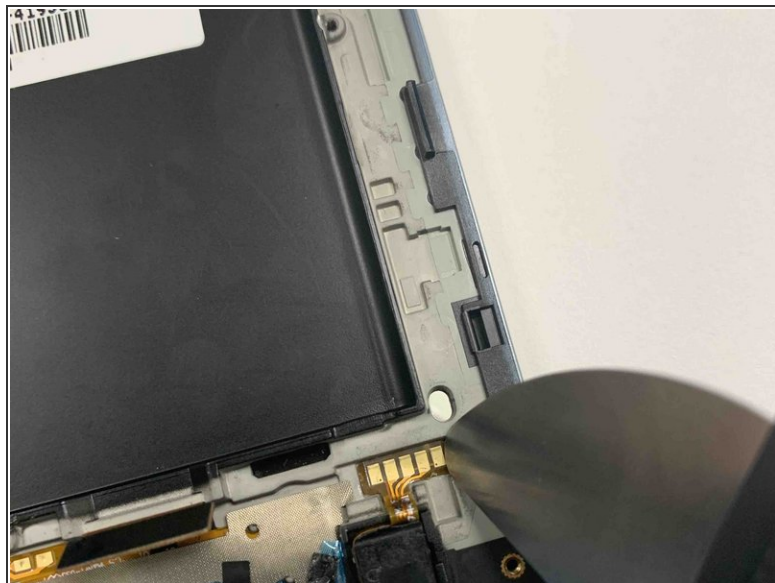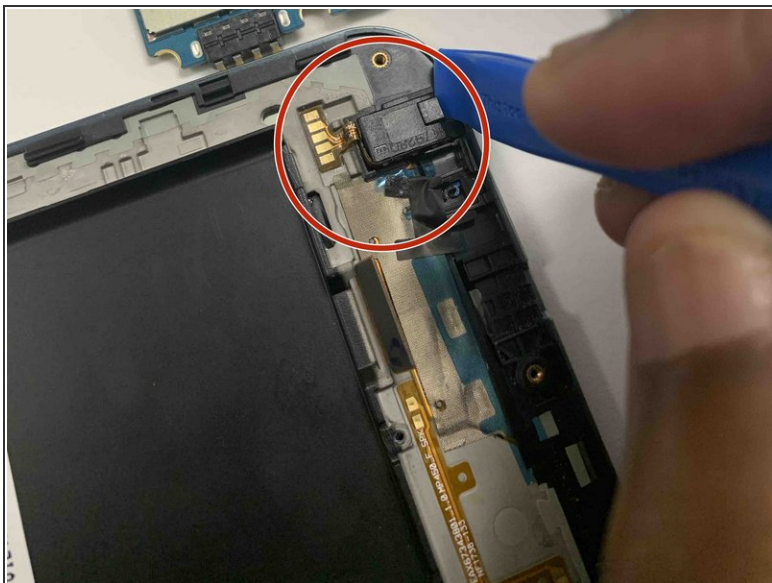

- Remove the headphone jack.

Step 8 — Display Assembly



- The remaining component is your complete display assembly.

To reassemble your device, follow these instructions in reverse order.