



# LG Stylo 3 Plus Front Camera Replacement

Replace the front-facing camera of the LG Stylo 3 Plus.

Written By: Patricia Pires Dias



## INTRODUCTION

If your phone's selfie camera is failing to take pictures, it may be time to replace the front camera. This guide will take you step by step on how to replace the camera of your LG Stylo 3 Plus in about 5 minutes.

### TOOLS:

- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — Back Cover



ⓘ Power off the phone before beginning disassembly.

- Place the phone face down.
- Insert a fingernail or a plastic opening tool into the gap on the side of the phone.
- Carefully slide your finger or the tool throughout the edge of the phone to ease the back case off.

## Step 2 — Battery



- Place the back cover off to the side.
- Insert the opening tool into the small gap below the battery.
- Carefully pop the battery out to prevent damage.

## Step 3 — Rear Camera




- Remove the twelve 4mm screws using the Phillips #000 screwdriver.
- Use the plastic opening tool to remove the inner case.
- Carefully remove the inner case.

## Step 4



- Use your fingernail or the plastic opening tool to flip the flex cable.
- Use the precision tweezers to carefully grasp and pull out the camera.

## Step 5 — Front Camera

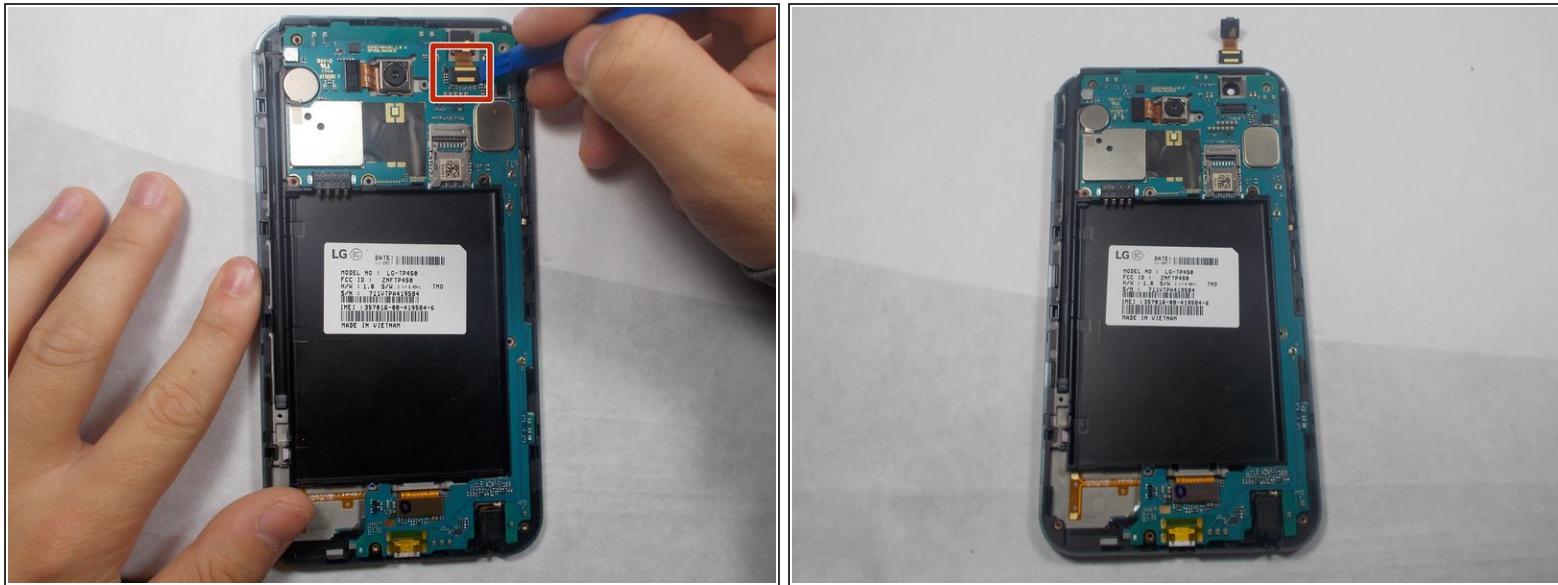

- Carefully flip open the flex cable box with the plastic opening tool.
- Using precision tweezers, carefully lift the front camera off the device.

To reassemble your device, follow these instructions in reverse order.