



LG Thrill 4G Speaker Replacement

This guide will show you how to remove and replace the speaker for the LG Thrill 4G.

Written By: Kenny Richmond



INTRODUCTION

Make sure your phone is turned off.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Cover Removal



- Use your fingernail or a plastic opening tool to remove the back cover of the phone.
- There is a notch located at the bottom of the phone that can be used for opening leverage.

Step 2 — Battery Removal



- ⓘ The battery is located at the bottom half of the phone with the LG logo on it.
- ⓘ There is a semi-circular notch at the bottom edge of the battery with the silver screw in it.
- Place a finger in the notch and push up against the battery to pop it out.

Step 3 — Screw Removal



- Remove the three screws from the bottom of the phone. These three screws are located on the speaker itself:
 - Two 5.5 mm Phillips #00 screws
 - One 4 mm Phillips #00 screw

Step 4 — Speaker Removal



- There is a notch located at the bottom of the speaker. Insert a fingernail in to the notch and pull up.

To reassemble your device, follow these instructions in reverse order.