




LG VX3100 Logic Board Replacement

Written By: Mark Cabaj

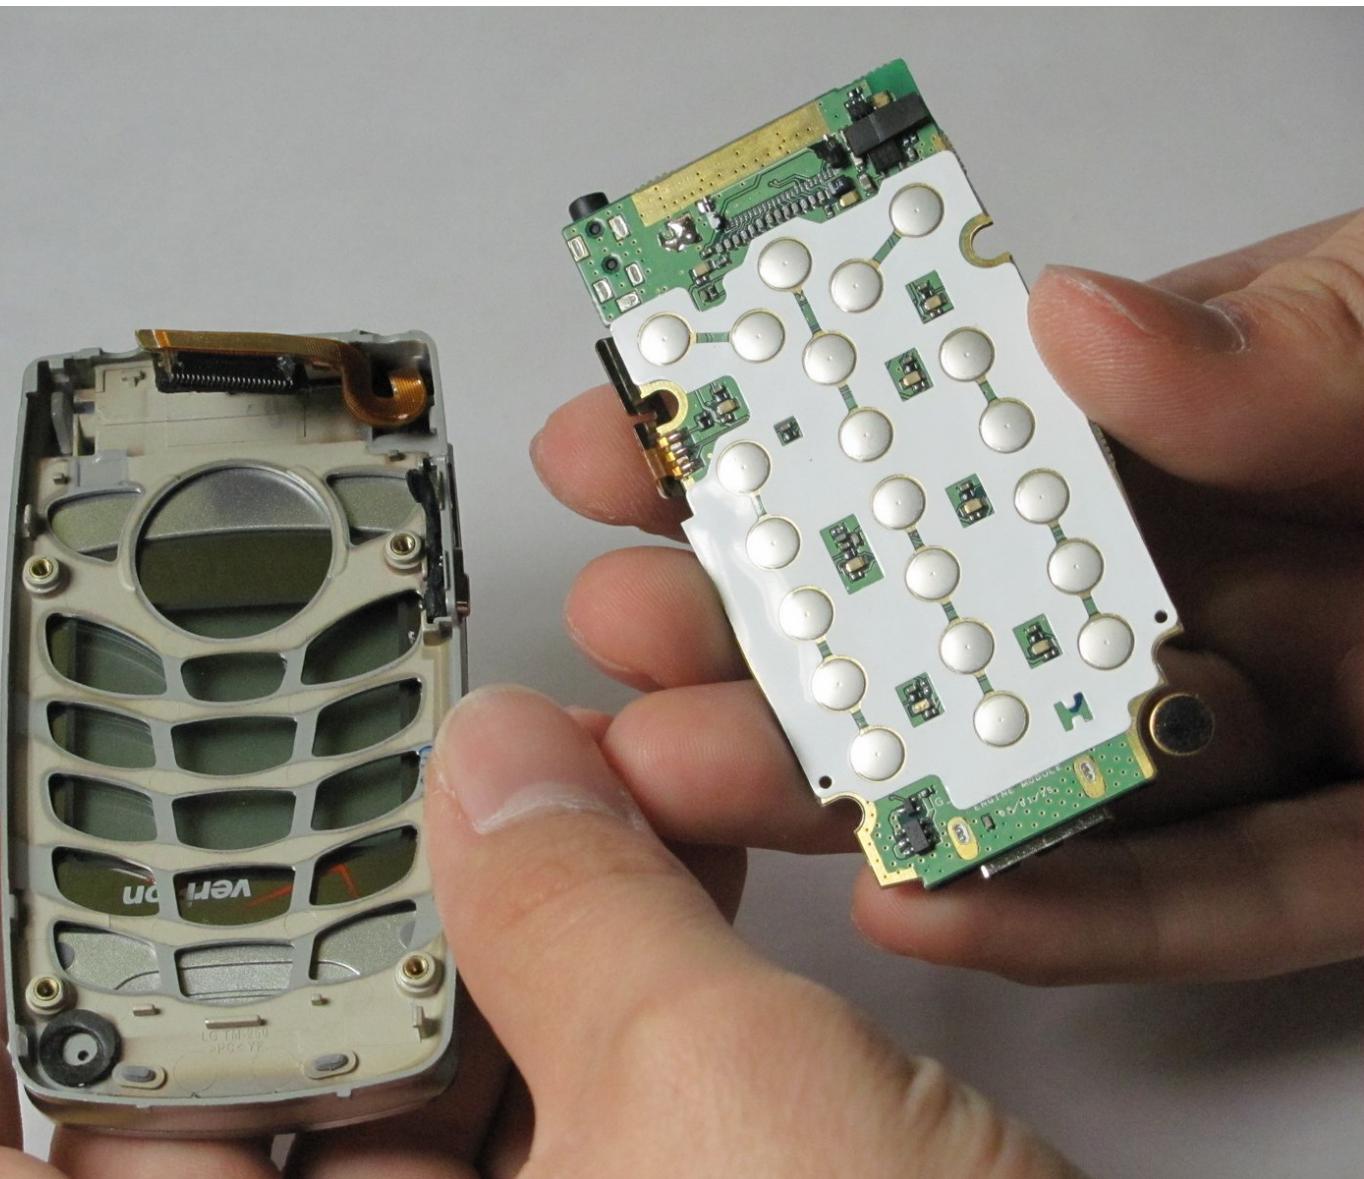

INTRODUCTION

BEFORE STARTING, note that this repair guide requires soldering experience!


TOOLS:

- [Desoldering Braid](#) (1)
- [Tweezers](#) (1)
- [Solder](#) (1)
- [Soldering Iron](#) (1)
- [Spudger](#) (1)
- [T7 Torx Screwdriver](#) (1)

PARTS:

- [LG VX3100 logic board](#) (1)

Step 1 — Battery

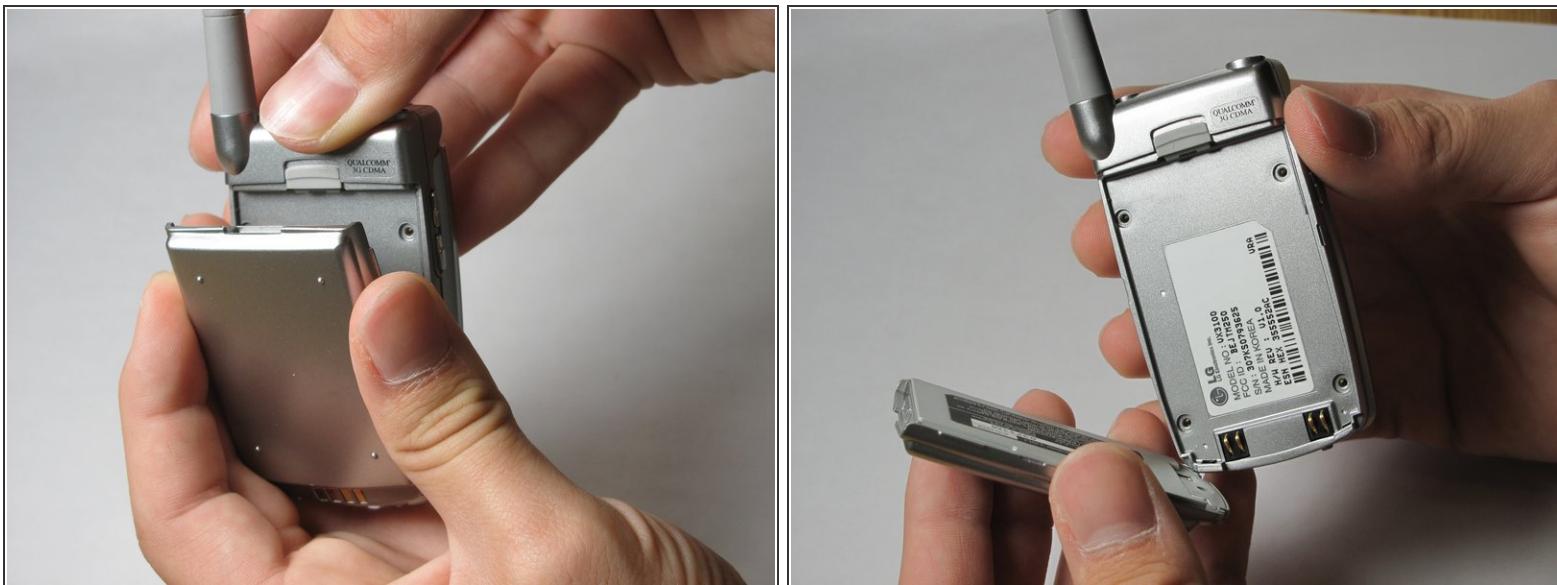


- Turn off the cellphone by pressing down on the red "END" button for 3 seconds.
- Flip cellphone over and press up on the gray sliding mechanism towards the top of the phone. At the same time, pull on the large silver battery and it should come right off.

Step 2 — Logic Board



- Use the T7 Torx screwdriver to remove the four screws that are in the cavity where the battery was.


Step 3

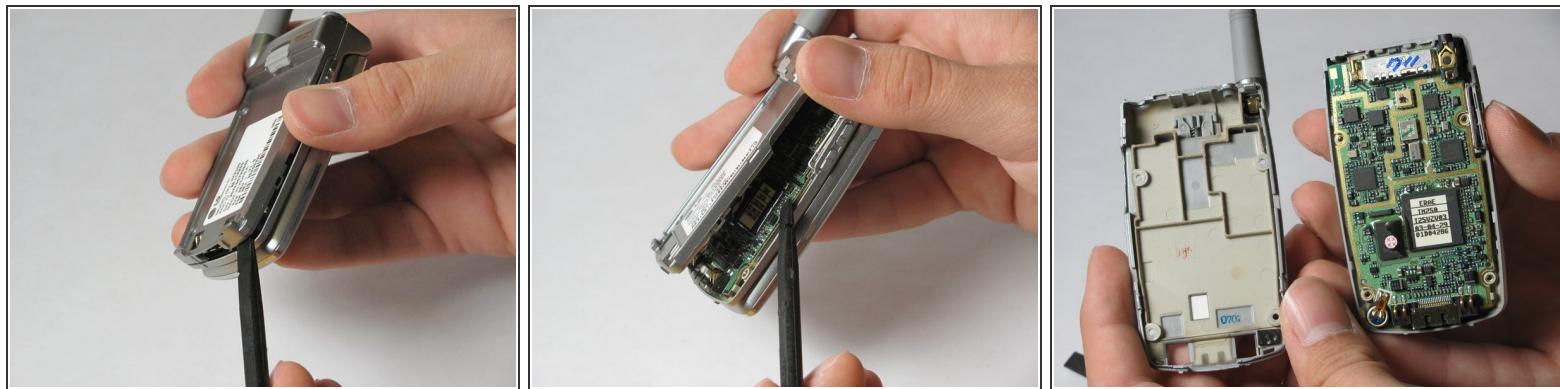

- Carefully wedge the spudger around the sides of the plastic casing and pry off the back side of the phone.

 Be careful when prying off the case. The spudger can damage the phone case.

Step 4

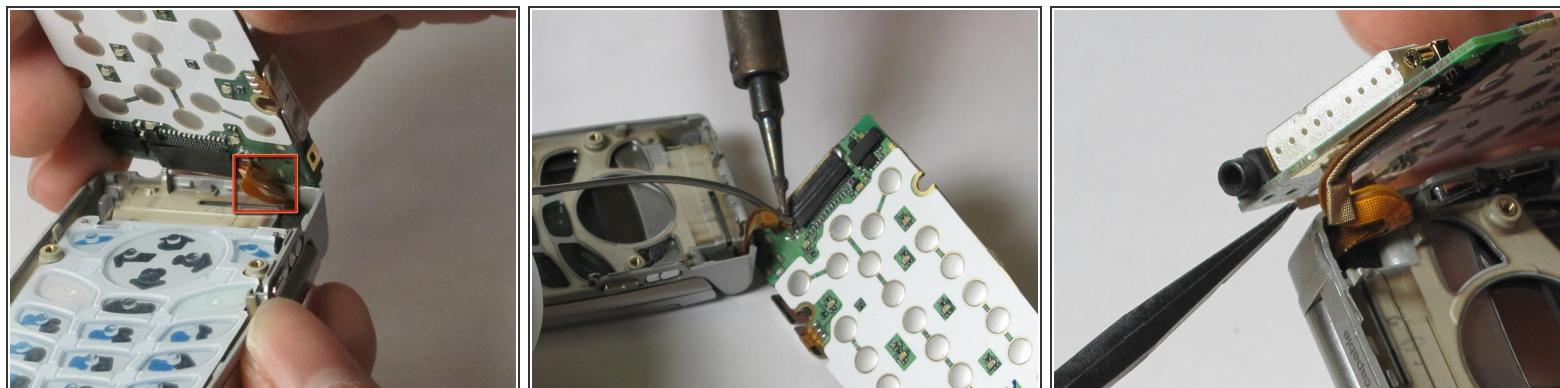

- Gently pry off the logic board with the spudger; notice the gold strip that connects the logic board to the rest of the phone.

 Prying the logic board off too quickly may damage the strip.

- Desolder the part of the gold strip that is attached to the logic board.
- Use the spudger to carefully lift up the small latch that holds the gold strip onto the logic board.

To reassemble your device, follow these instructions in reverse order.

