



LG VX4500 screen replacement (duplicate)

Written By: iDeleted



INTRODUCTION

To replace the internal and/or external screen on your LG VX4500 flip phone, read this guide.



TOOLS:


- [Flathead Screwdriver](#) (1)
- [Soldering Iron](#) (1)



PARTS:



- [internal and external screen circuit board assembly](#) (1)

Step 1 — Speaker

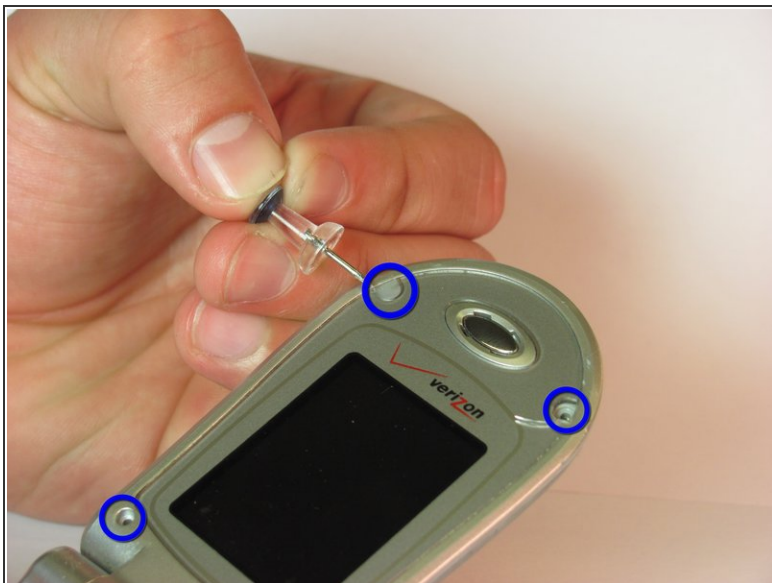



- Remove grey rubber caps from the four corners of the internal screen.
- Remove the four 1.3 mm screws, which are directly underneath the grey caps, with a Phillips head screwdriver.

Step 2

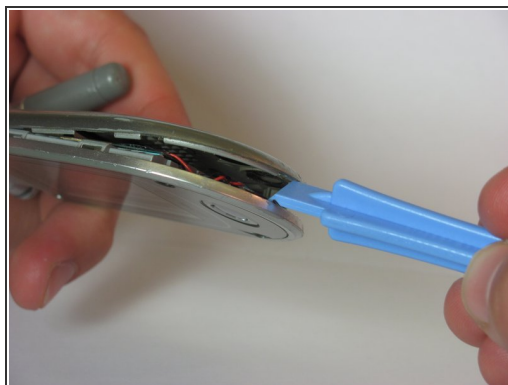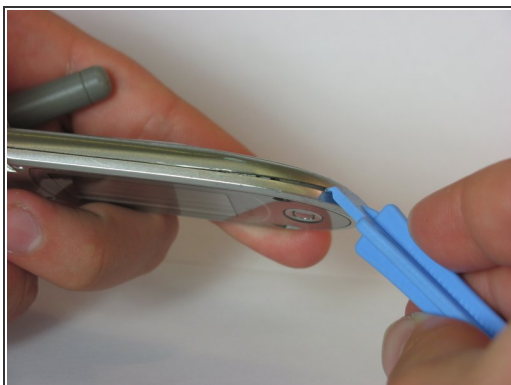



- Run a pry bar along the seam of the edge of the phone to separate the top screen casing.
- Work the bar around the edge until the entire top section with the LG logo is removed.

Step 3

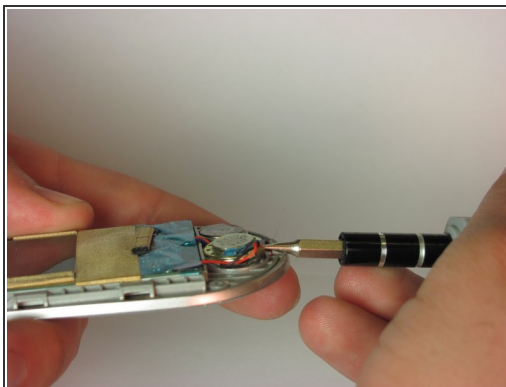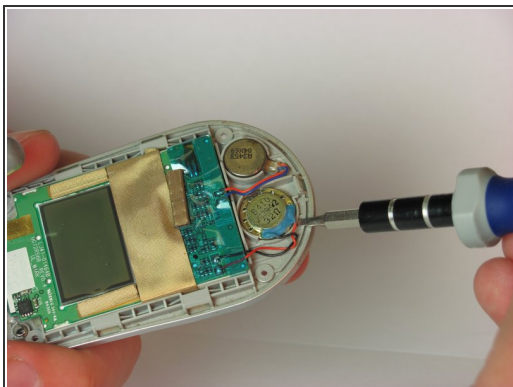



- With a flathead screwdriver, lift the speaker from the device.

Step 4 — Internal and External Screen

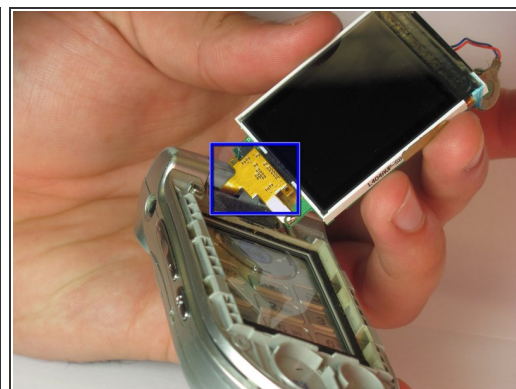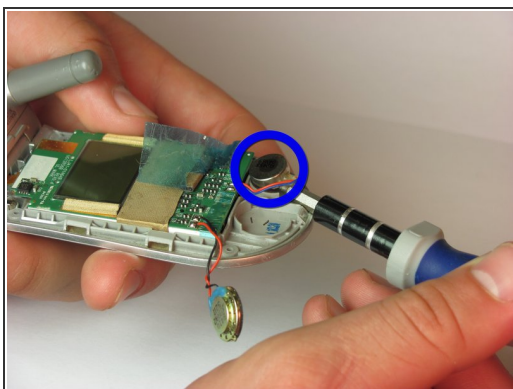

- Ensure that the metal capacitor next to the speaker is removed in the same way that the speaker was removed.
- Gently lift the entire circuit board assembly up.
- Note: the entire assembly is still connected to the phone.

Step 5

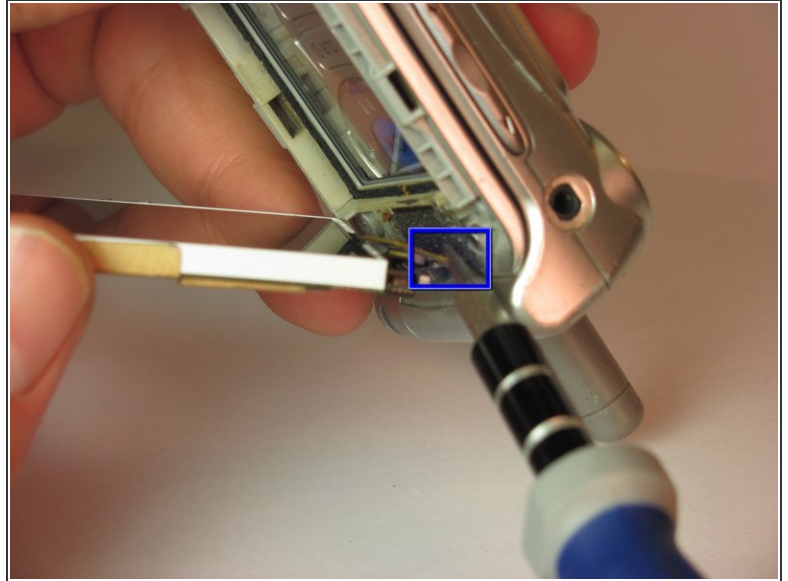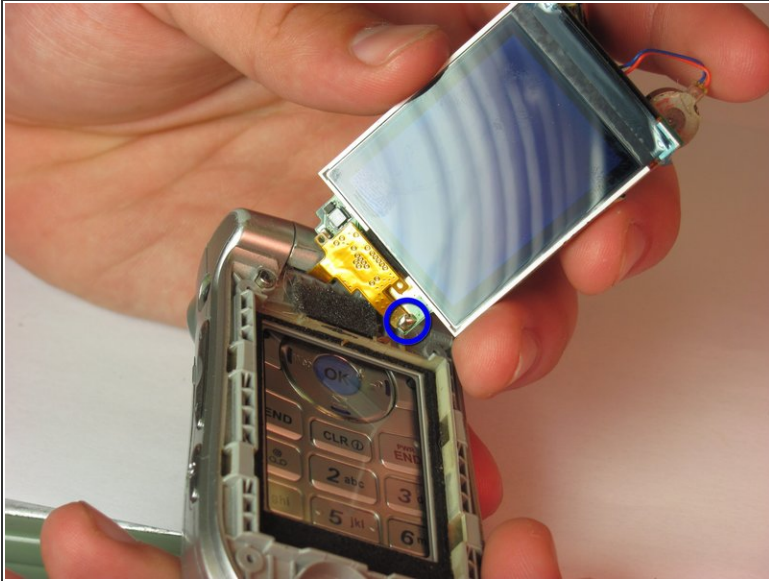

- Desolder the contact point shown.
- Gently pry the entire gold connector away from the screen with a spudger

To reassemble your device, follow these instructions in reverse order.