




LG VX5300 outer LCD screen replacement

Written By: Ashley

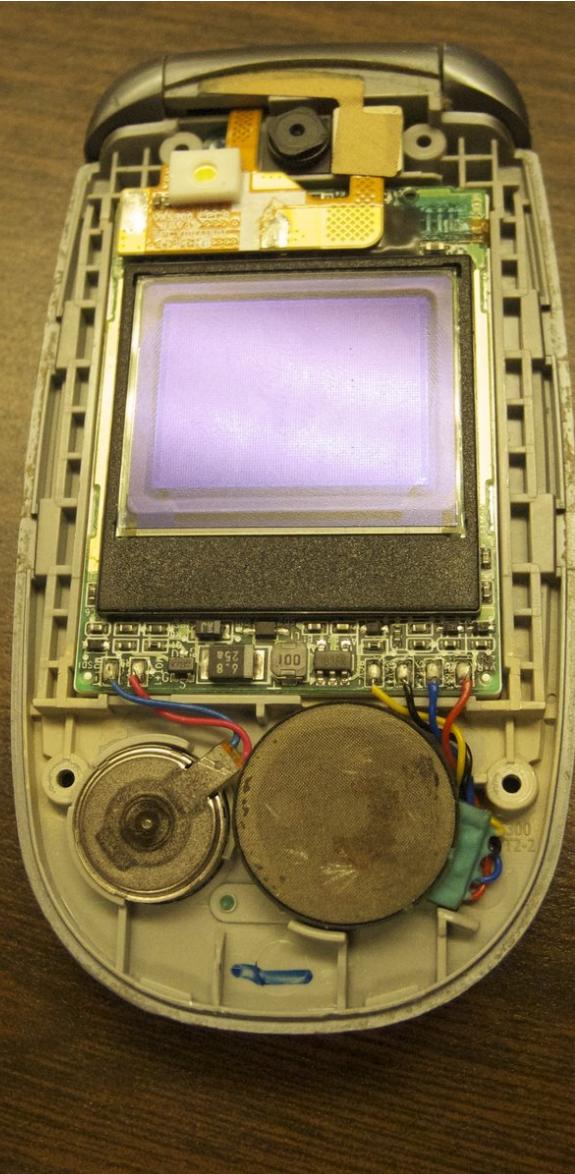

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Front LCD Screen




- Remove the rubber stoppers from the four corners of the front screen.

Step 2




- Using the Phillips screwdriver, carefully remove all four screws.

Step 3

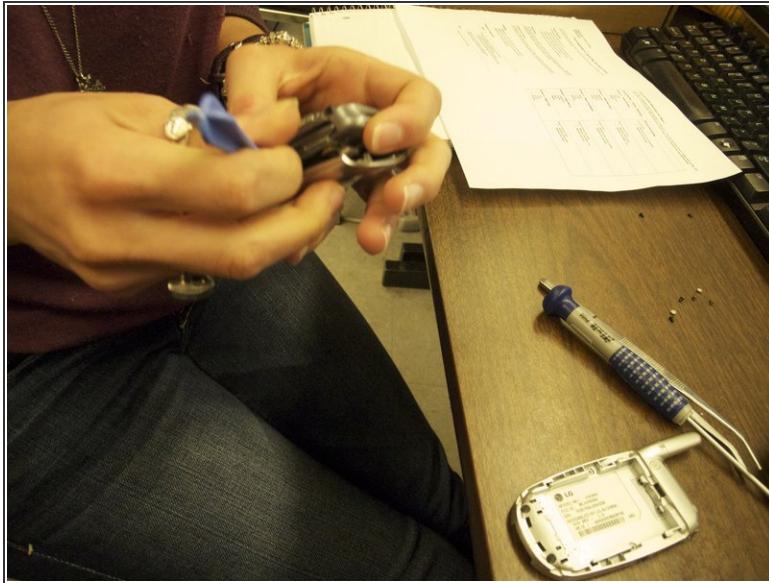


- To pry open the face plate, place the iFixit Opener tool in the crease of the phone.

Step 4 — LCD Screen

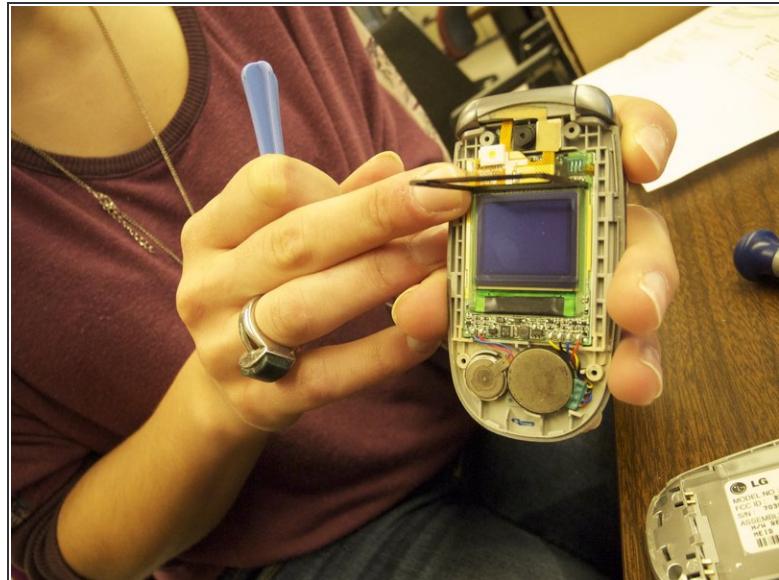


- Carefully lift off the black frame around the LCD screen and set it aside.

Step 5

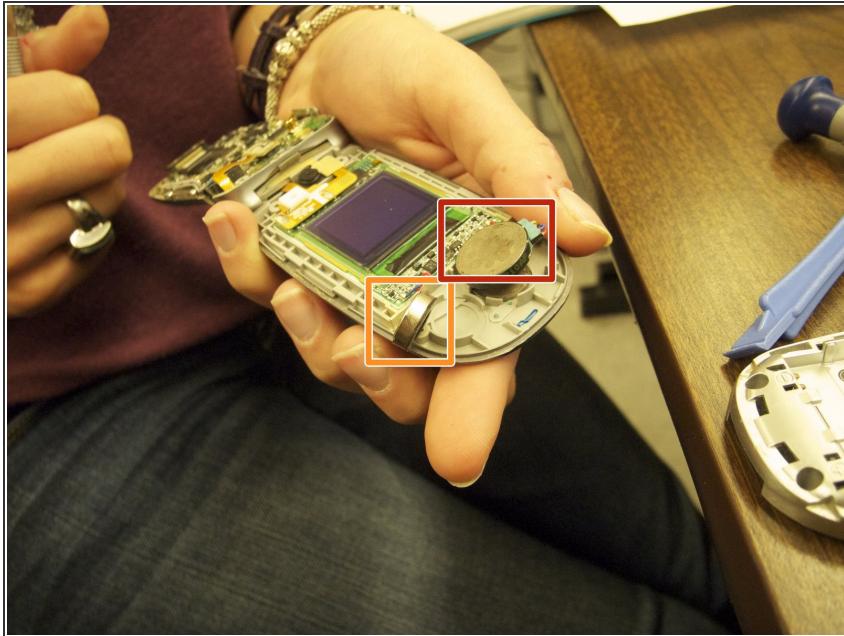

- Lift the speaker out by using tweezers.
- Next, lift the battery out using the tweezers.

Step 6

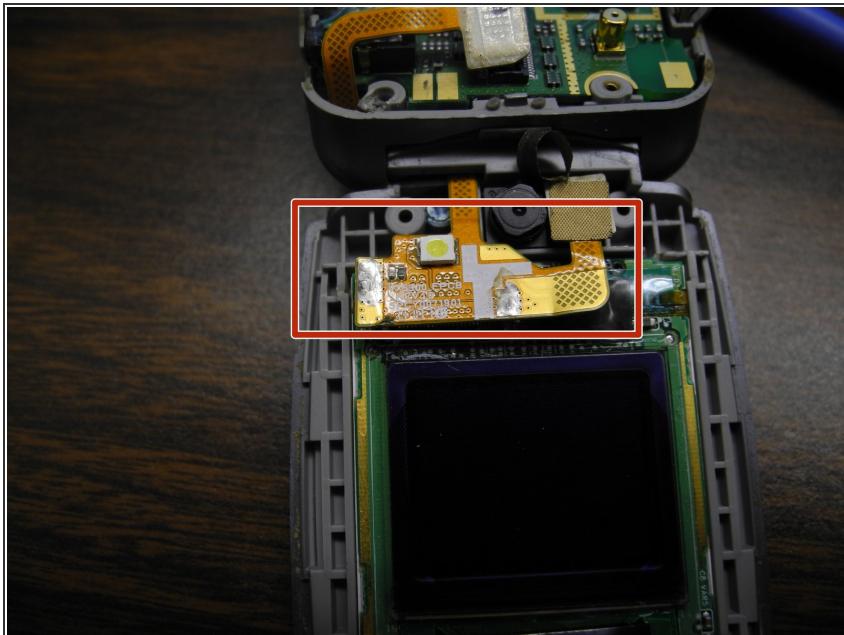

- Using tweezers, carefully disconnect the orange ribbon from the computer chip.

Step 7



- Remove the LCD screen and replace with a new one.
- Finally, replace the battery and the speaker.

To reassemble your device, follow these instructions in reverse order.