




# LG X Style Top Speaker Replacement

This is a guide to replace the top speaker on the LG X Style smart phone.

Written By: Ryan Downing

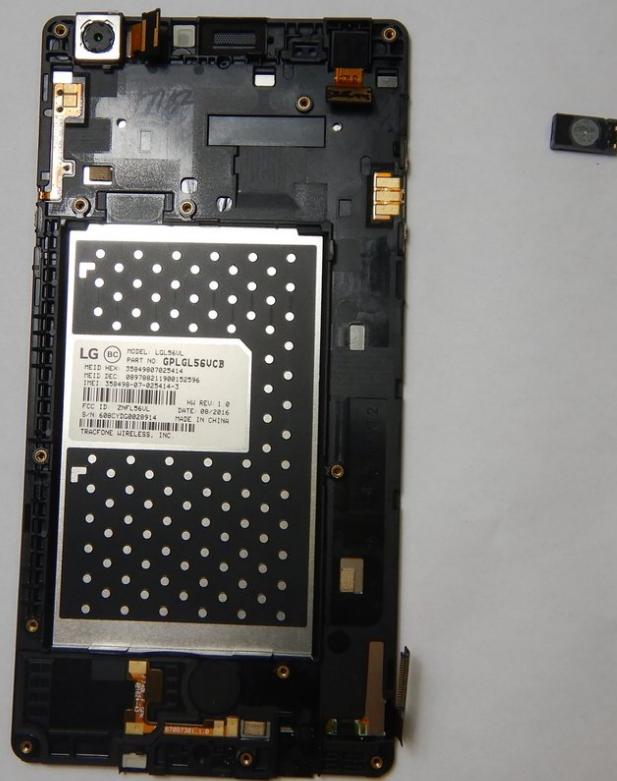


## INTRODUCTION

This guide will show you how to replace the top speaker on the LG X Style smart phone. This is used if the speaker blows out or stops working.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Nylon Tipped Tweezers](#) (1)

## Step 1 — Battery

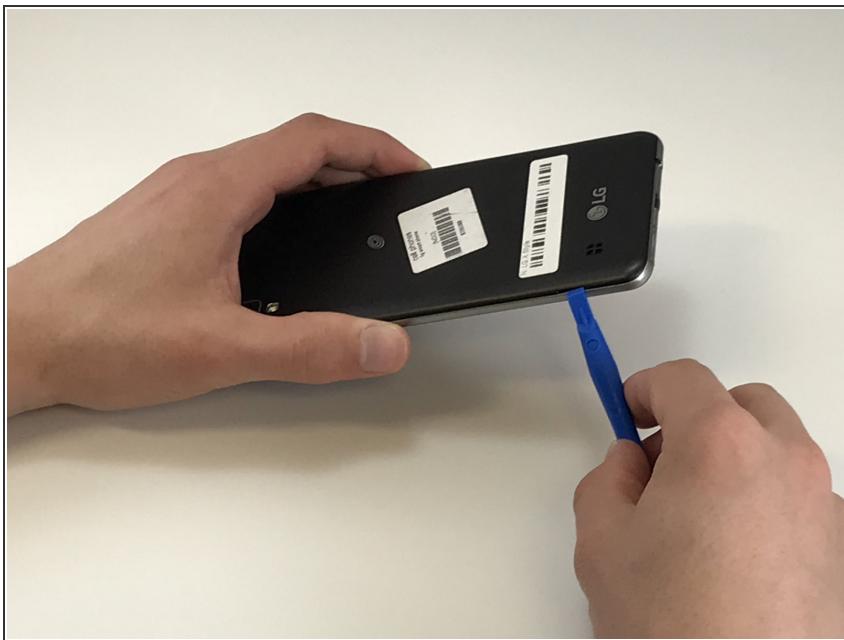

- Power down the device and make sure that it is turned off.
- Insert the plastic opening tool into the bracket space on the back bottom left of the phone.
- Gently twist tool clockwise until the back case pops open [this will create a small gap].
- Slide the tool along the gap around the entire device.

## Step 2



- Insert the plastic opening tool into the indent below the battery, and pry up to lift and remove the battery.

## Step 3 — Screen




- With a Phillips #000 screwdriver, remove the twelve 3mm screws.

## Step 4



- Create a gap with plastic opening tool by applying pressure between glass screen and plastic edge of device.
- Slide prying tool around entire device beginning toward the top.
- Lift off and remove the screen from the device.

## Step 5 — Motherboard

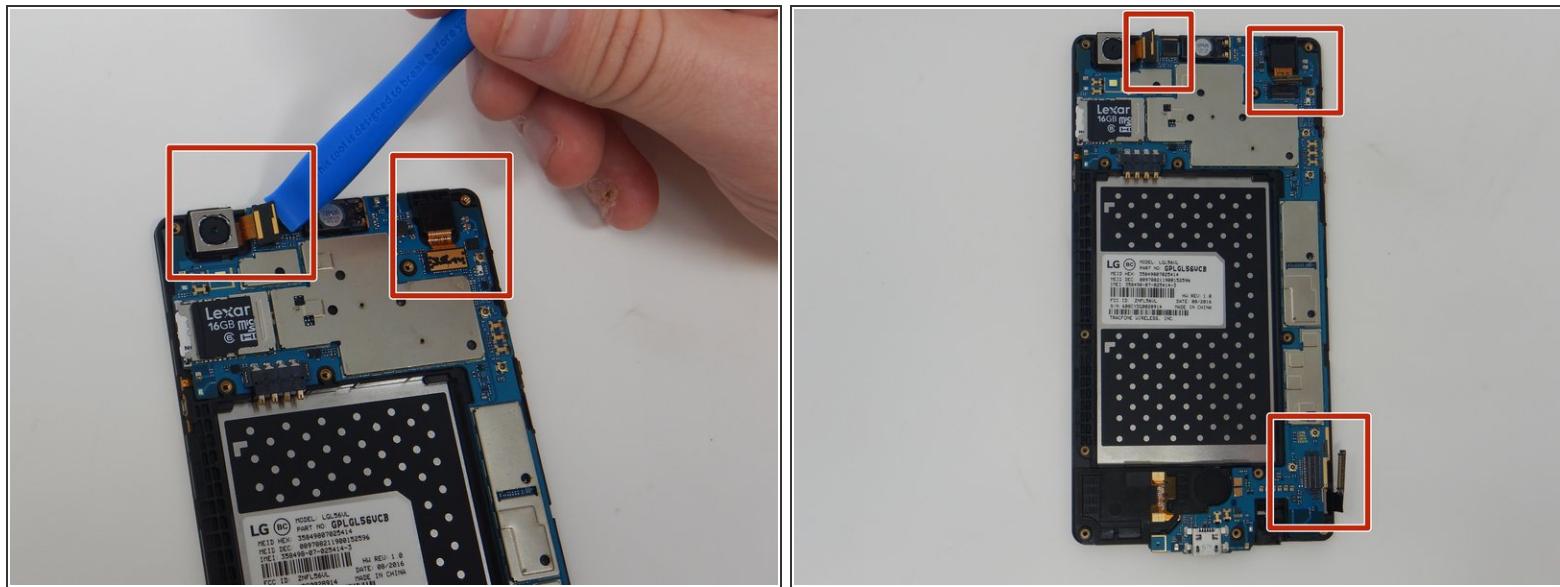


- Using the plastic opening tool, carefully slide the edge of the tool under the press fit cable connections and lift up to disconnect. Do this for all three ribbon cables.

## Step 6



- Using the iFixit opening tool, remove the motherboard from the screen by inserting the opening tool under the edge of the motherboard and lifting up.

## Step 7 — Top Speaker

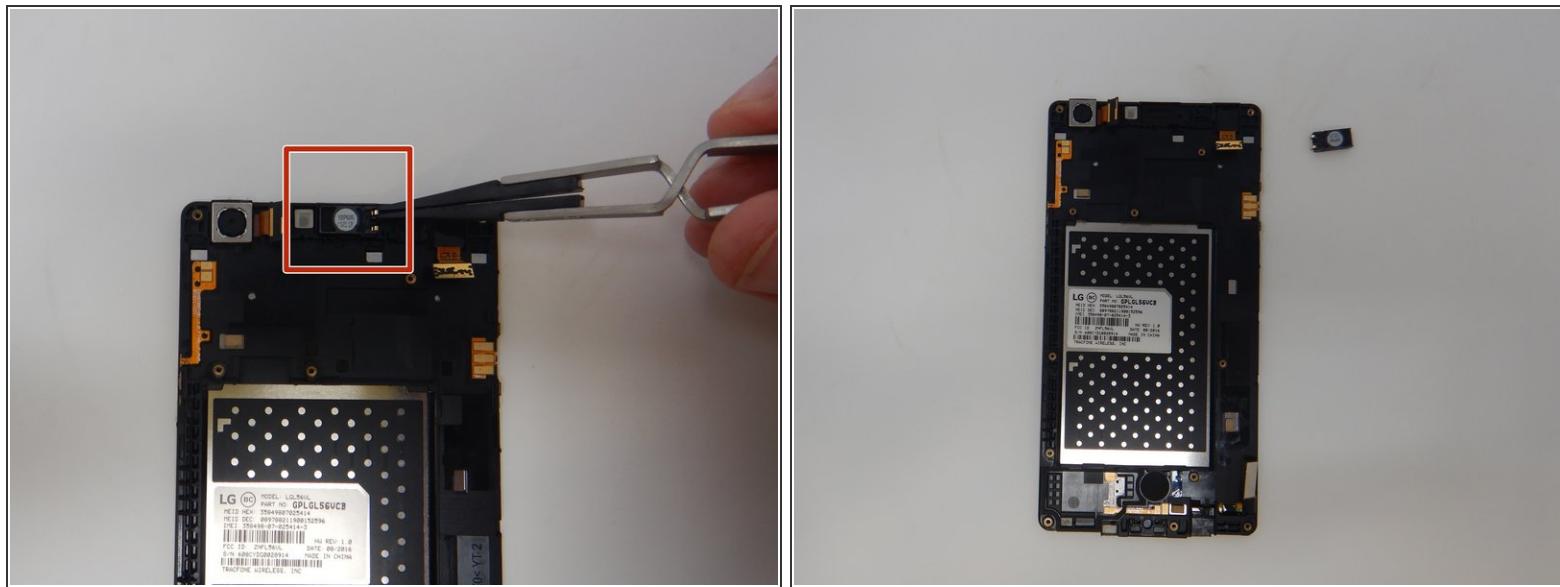

- Use the nylon-tip reverse tweezers to remove the front facing speaker.

To reassemble your device, follow these instructions in reverse order.