


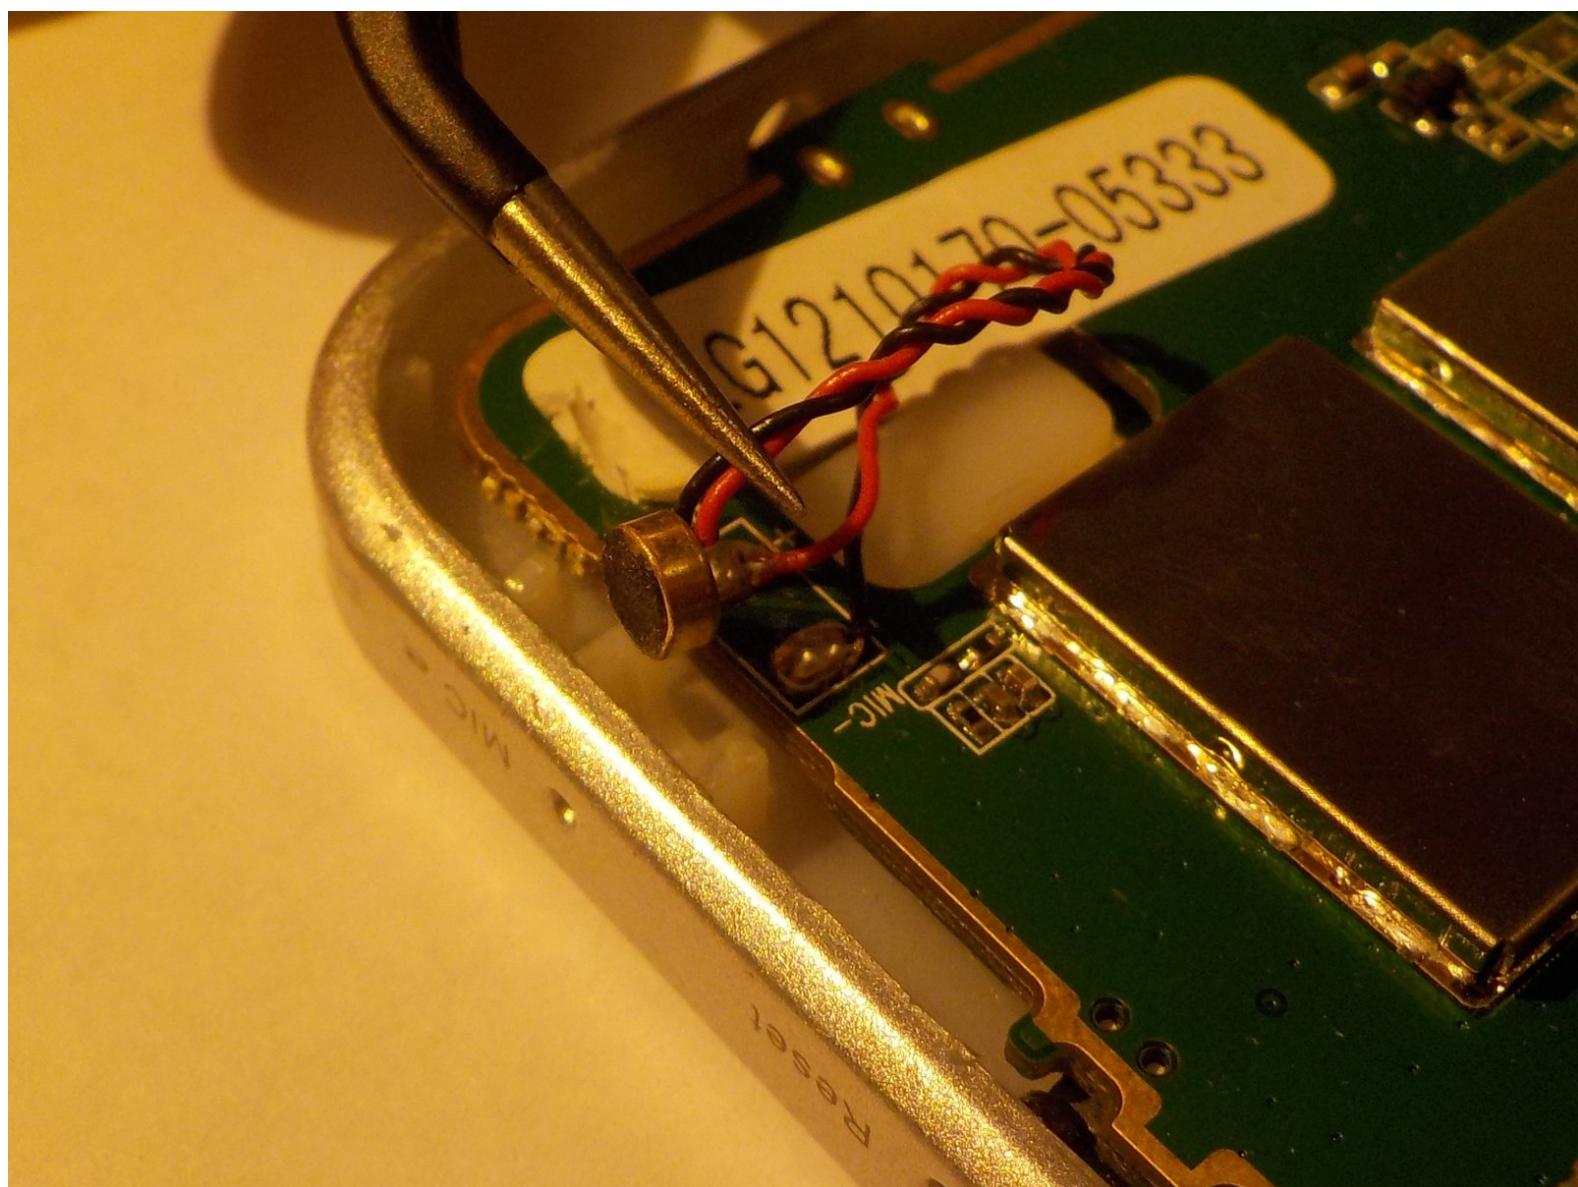

Leader Impression i10A-LE Microphone Replacement

This guide will show you how to replace a broken microphone on your Leader Impression i10A-LE.
This guide will take about 15 minutes.

Written By: riley seyffert



This document was generated on 2019-09-21 06:26:18 AM (MST).

INTRODUCTION

Removing and replacing the microphone for the Leader Impression i10A-LE.

TOOLS:


- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Soldering Iron \(1\)](#)

Step 1 — Microphone





- Orient your Leader Impression i10A-LE with the word "Impression" closest to you and the camera in the top left corner.

Step 2

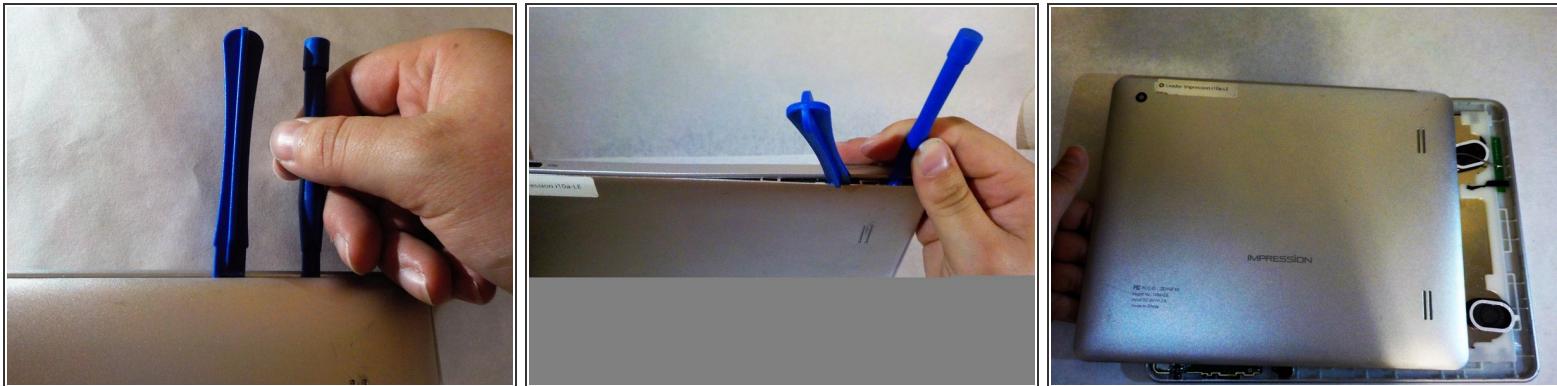

- Pry the back off by using plastic opening tools.
- Using the plastic tools slide the flat end into the device.
- Gently pry the back piece until you hear a popping noise.
- Once the back is loose, remove it from the device and set aside.

Step 3

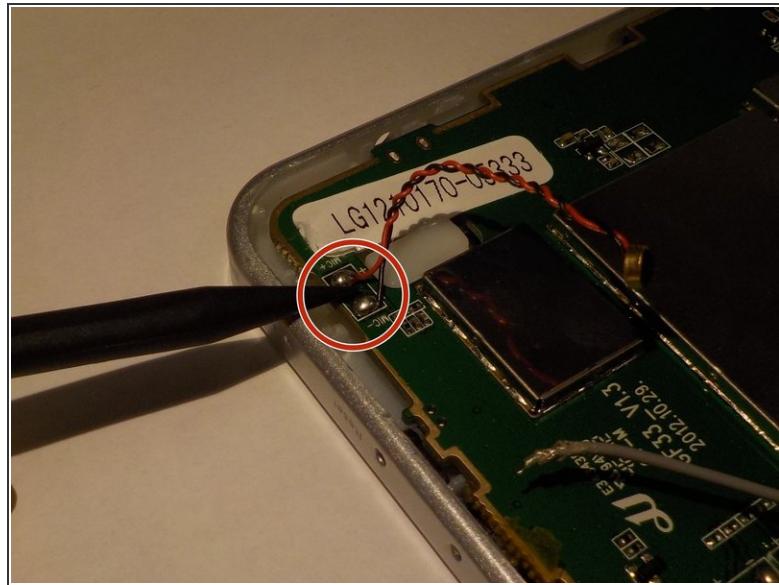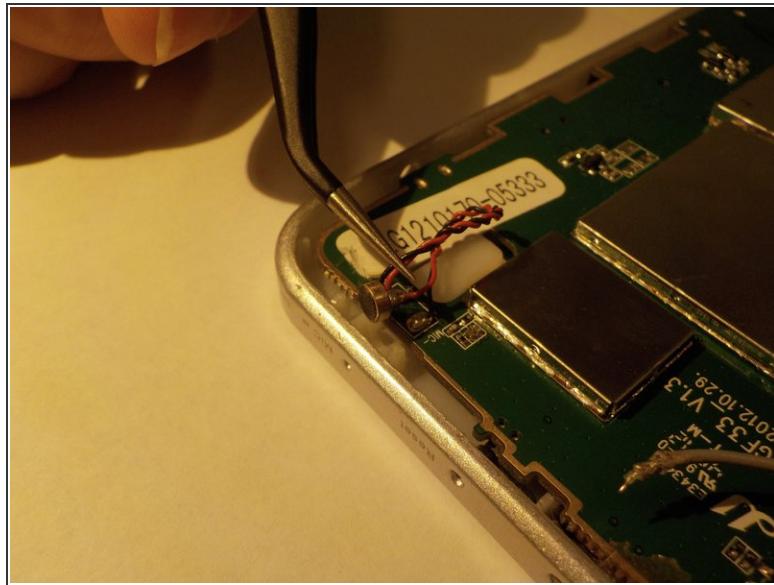

 Disconnect the positive and negative battery leads.

- Remove the microphone from plastic housing with the tweezers.
- Desolder the positive (red) and negative (black) power leads.

To reassemble your device, follow these instructions in reverse order.