




# LeapFrog LeapPad Ultimate Back Panel Replacement

Steps on how to open up the back of a LeapFrog LeapPad Ultimate.

Written By: Nabil Mustafa

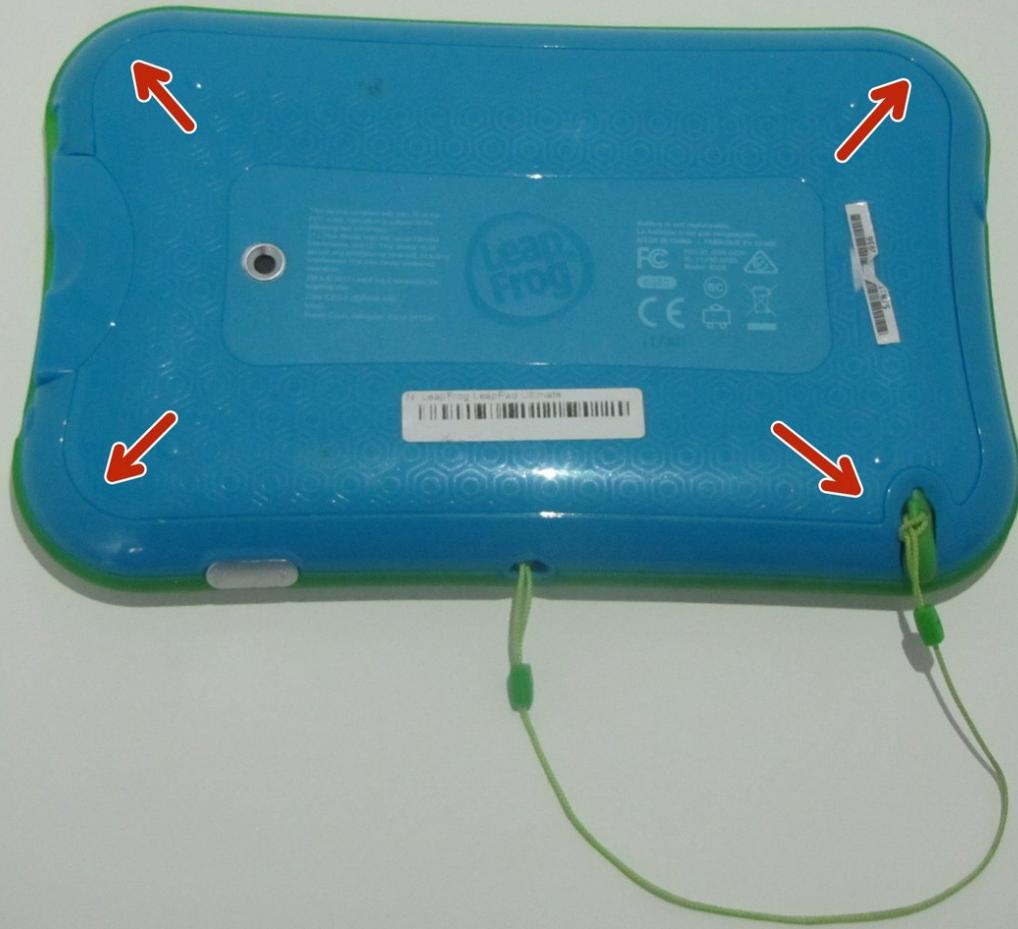

## INTRODUCTION

Steps on how to open up the back of a LeapFrog LeapPad Ultimate.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Back Panel



- Flip over the Pad to its back side to begin the removal of the back panel.
- Begin by removing the blue rim along the edge of the device. It runs along the green silicone lining.

**⚠** This is very difficult to remove, so do be patient. To help remove the seal, both a metal spudger and plastic opening tool may be used.

**ⓘ** Remove the pen from its place before starting to avoid tangling.

## Step 2



- Once the blue rim is removed, the 12 screws will be visible.
- Use the Phillips #1 screwdriver to unscrew all 12 screws.

To reassemble your device, follow these instructions in reverse order.