


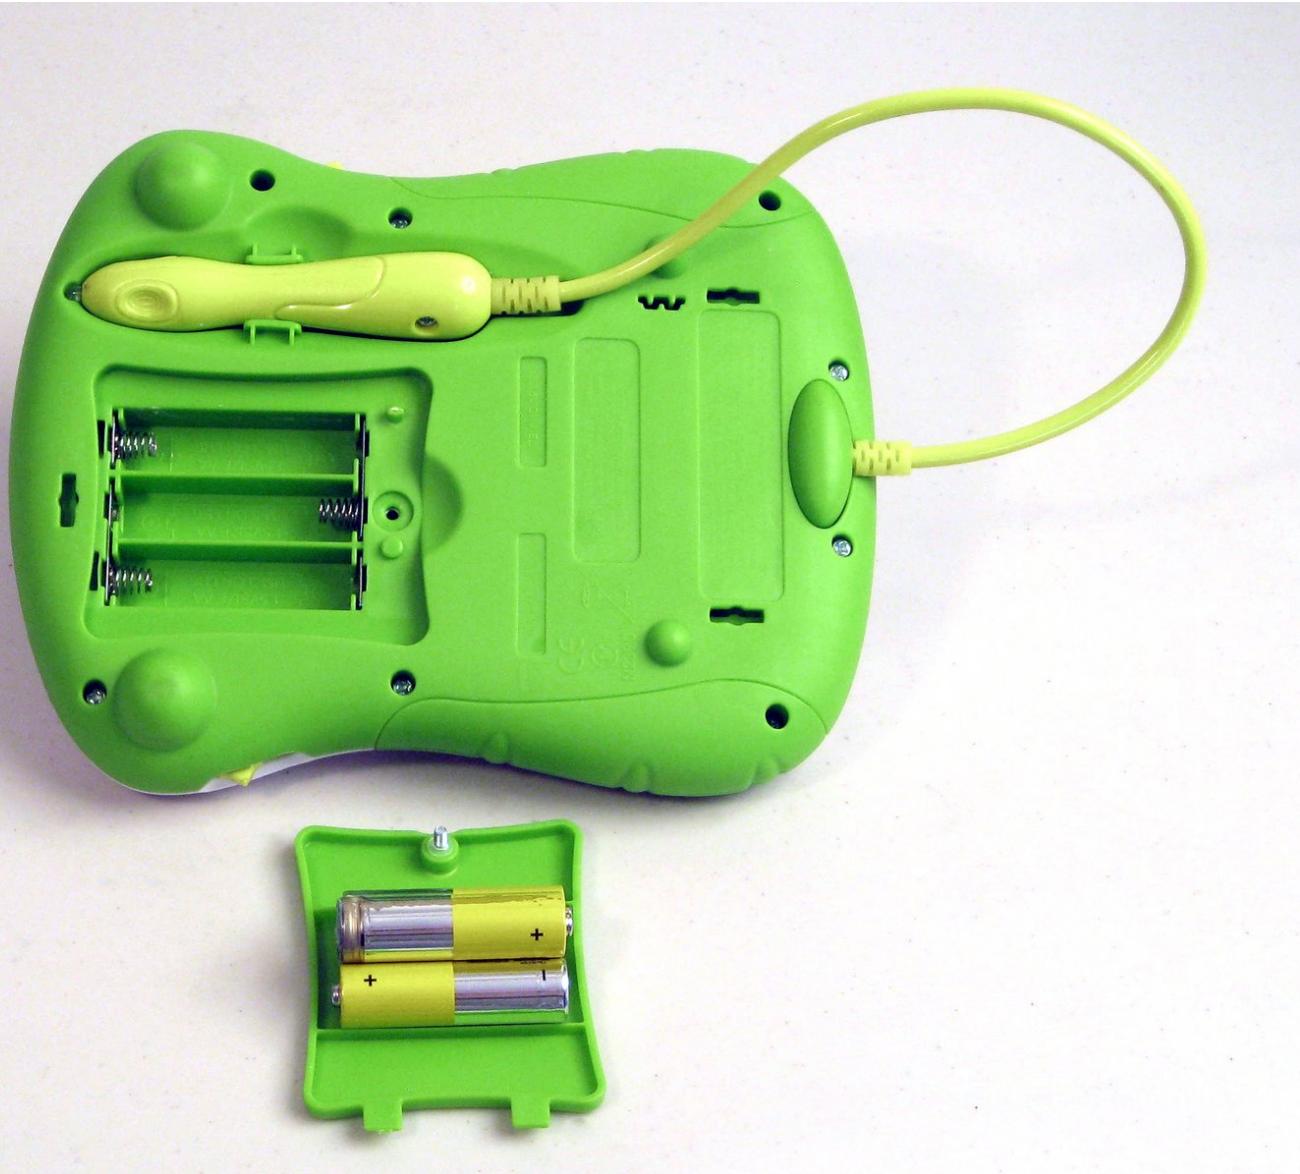

LeapFrog Scribble and Write Battery Change

Replace the batteries in your LeapFrog Scribble and Write.

Written By: Anthony Kidd



INTRODUCTION

If your LeapFrog Scribble and Write won't power on, there may be an issue with the batteries. Your batteries may be drained and in need of replacing, or the battery compartment could have a buildup of debris (dirt, dust, etc.) preventing the batteries from working properly.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Cotton Swab](#) (1)
- [Q-tip](#)
- [Baking Soda \(optional\)](#) (1)

Step 1 — Battery



- Use a Phillips head screwdriver to remove the screw from the battery compartment on the back of the toy.

Step 2

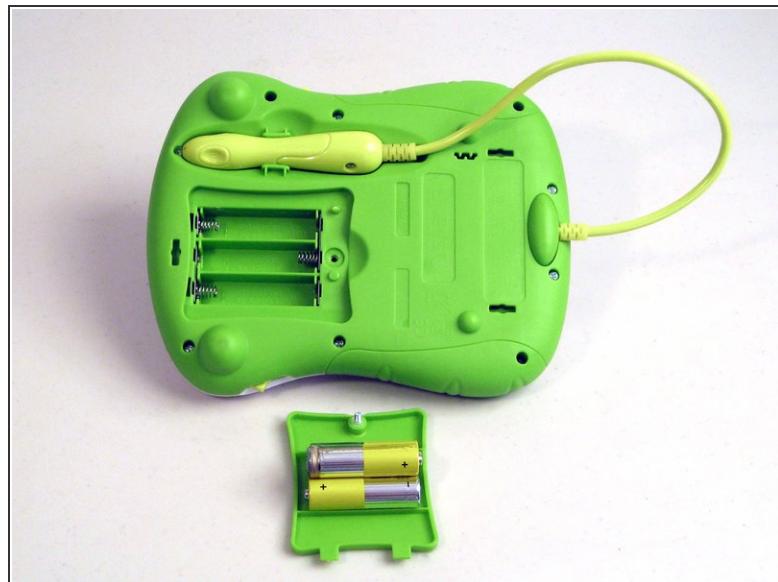


- Remove the back cover from the device.
- Remove the batteries from the toy.

Step 3



- In a small cup, combine a little baking soda and water to create a pasty solution.

Step 4

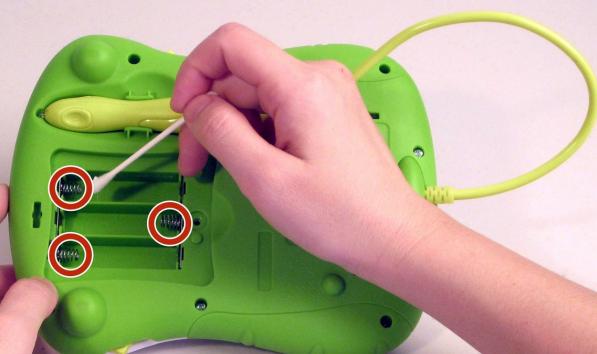

- Using the baking soda solution and a cotton swab, clean the metal terminals.

Step 5



- Wipe the metal terminals and the toy clean using a soft, dry towel.

To reassemble your device, follow these instructions in reverse order.