




LeapFrog Scribble and Write Eraser Slider Replacement

This guide will show you how to find the eraser slider and replace it.

Written By: Shang

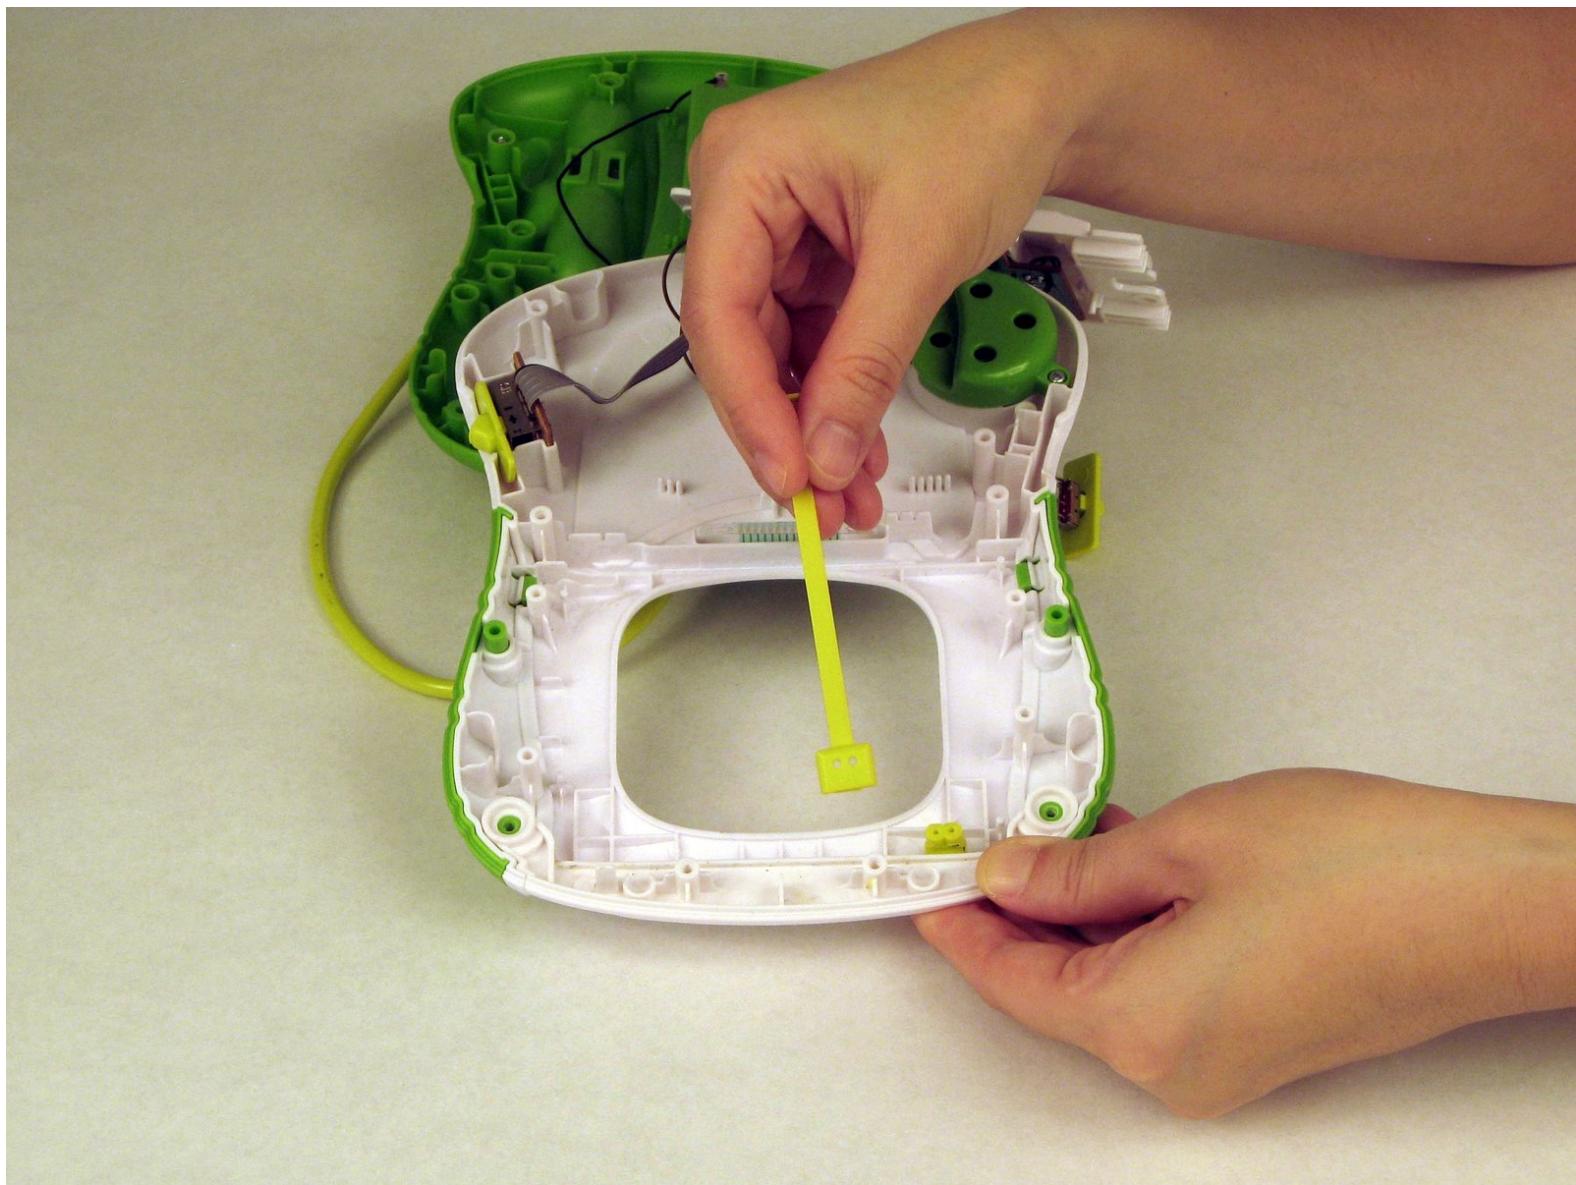

INTRODUCTION

Your toy's screen isn't being cleared by the sliding motion of the eraser. There could be some type of debris preventing it's motion or the sensor may be faulty.

TOOLS:


- Phillips #0 Screwdriver (1)

Step 1 — Eraser Slider




- Turn the toy over so the back is facing upward.

Step 2

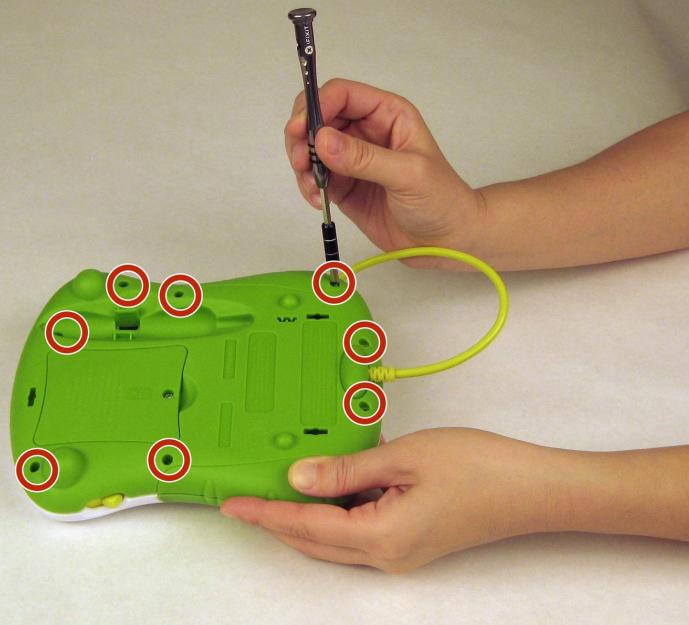



- Using a Phillips head screwdriver, carefully unscrew all 9 screws on the back of your toy. Be careful not to misplace the screws.

Step 3

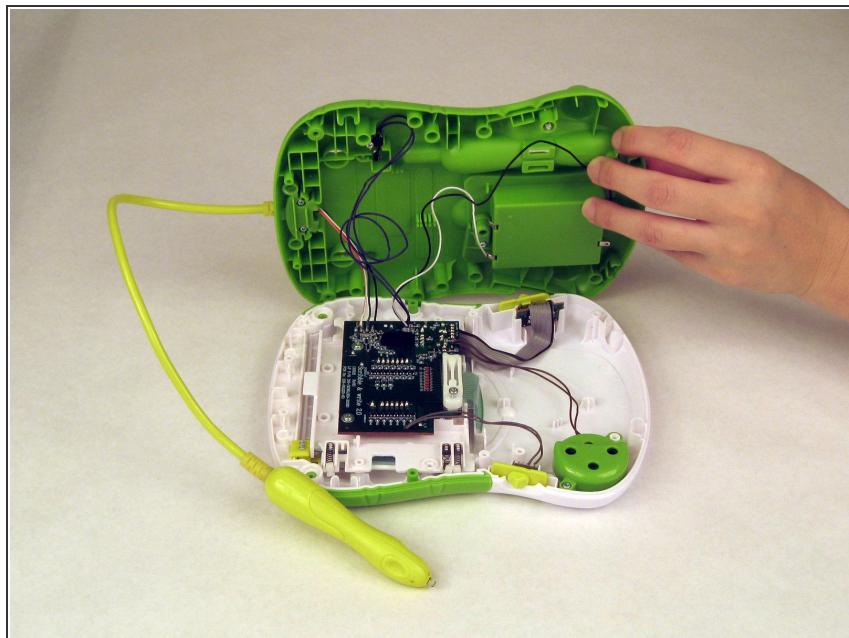


- Very carefully, remove the back of your toy.

Step 4

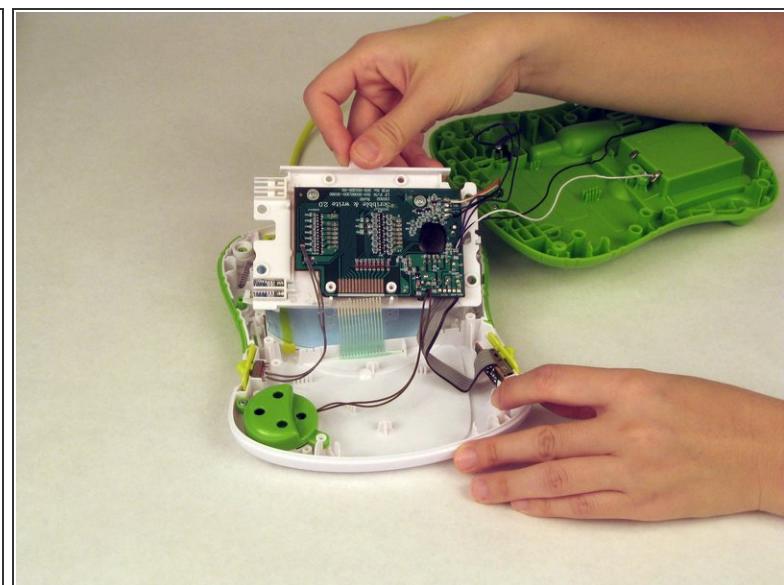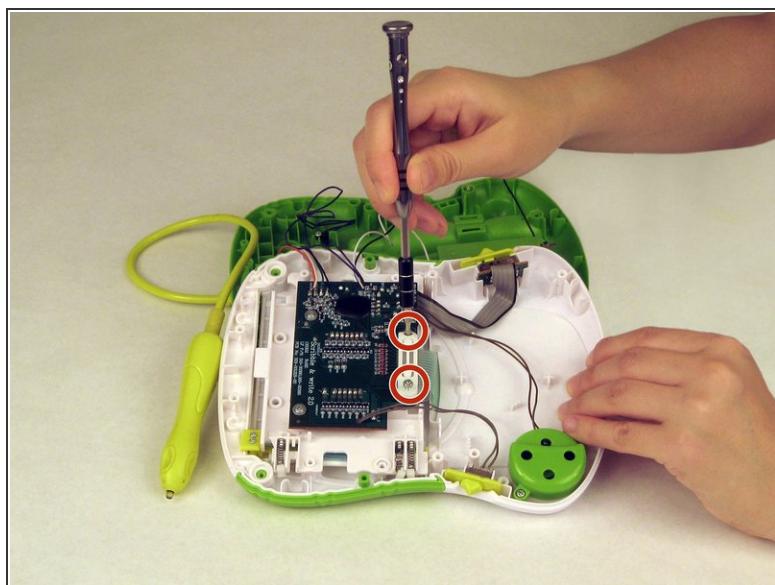


- Remove the motherboard to expose the display screen and the eraser slider by unscrewing the two screws securing the screen to the motherboard.

Step 5

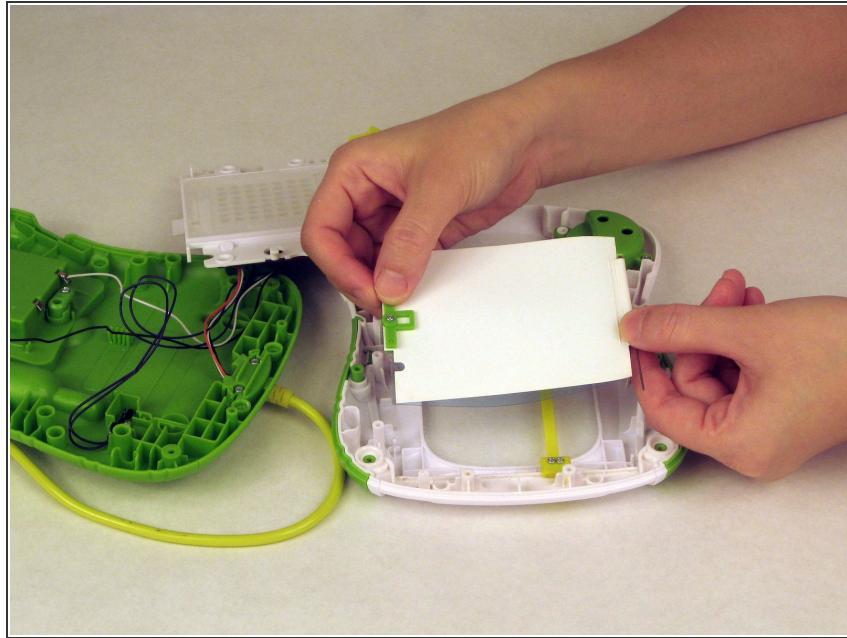


- Now, carefully remove the display screen leaving the eraser slider attached.

Step 6

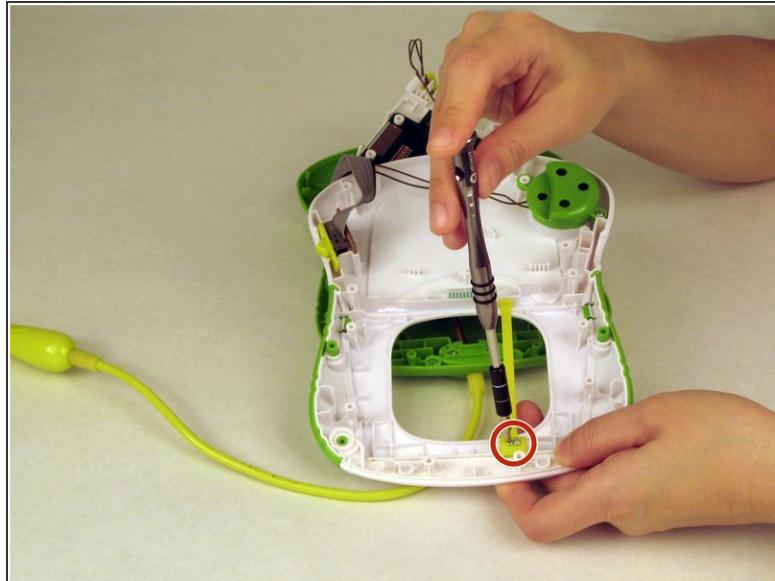

- Use a Phillips head screwdriver to remove the eraser slider.

Step 7

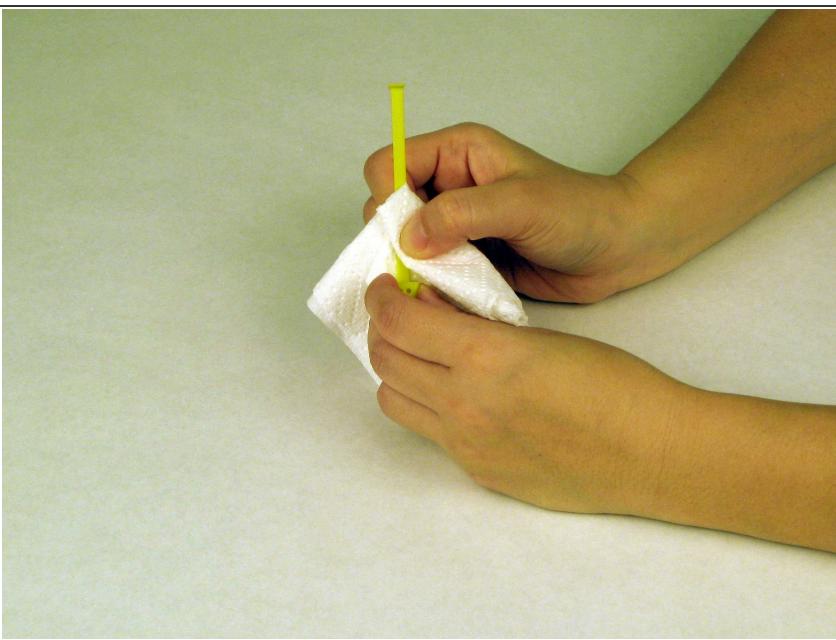

- Lastly, use a soft towel to clean the eraser slider.

To reassemble your device, follow these instructions in reverse order.