




LeapFrog Scribble and Write Speaker Replacement

Replace the speaker in your LeapFrog Scribble and Write.

Written By: Anthony Kidd

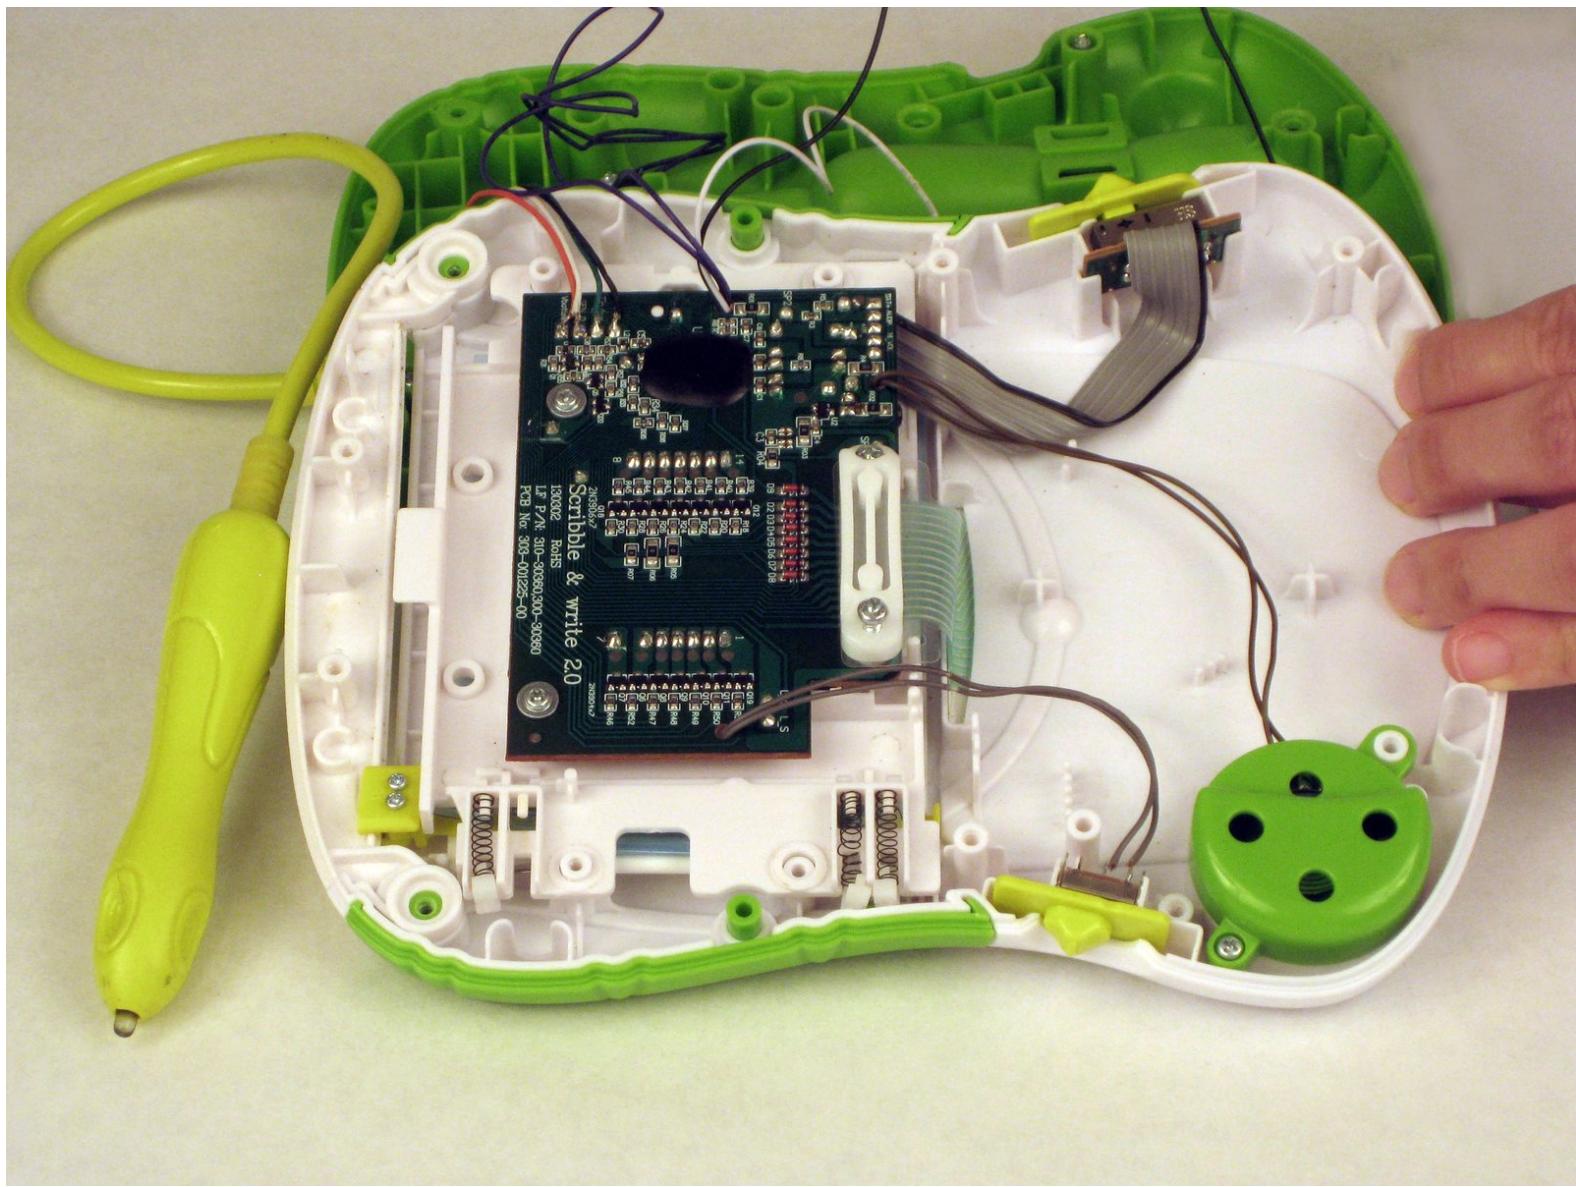

INTRODUCTION

Your toy's sound may have become muffled or distorted. This issue may be a faulty speaker that will need to be replaced. You will need to be familiar with using a soldering iron before doing this repair.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Soldering Iron](#) (1)

Step 1 — Speaker




- Turn your toy over so that the back is facing upward.

Step 2

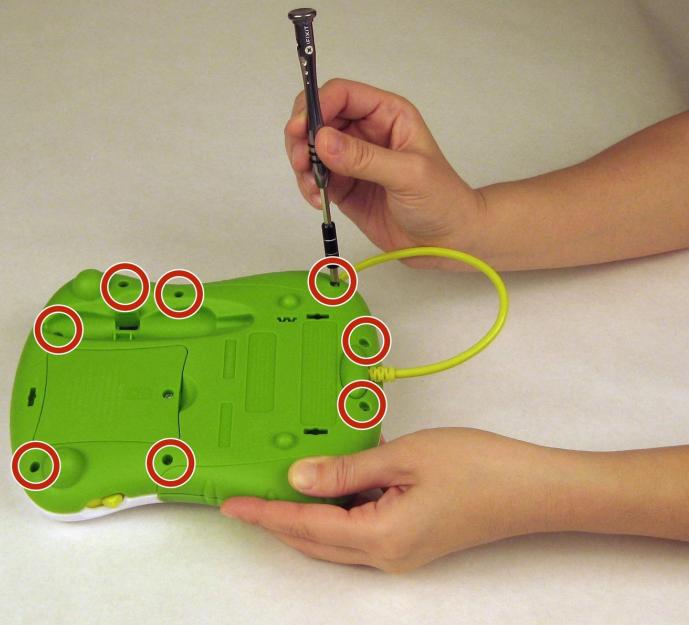


- Using a Phillips head screwdriver, carefully unscrew all 9 screws on the back of your toy. Be careful not to misplace the screws.

Step 3

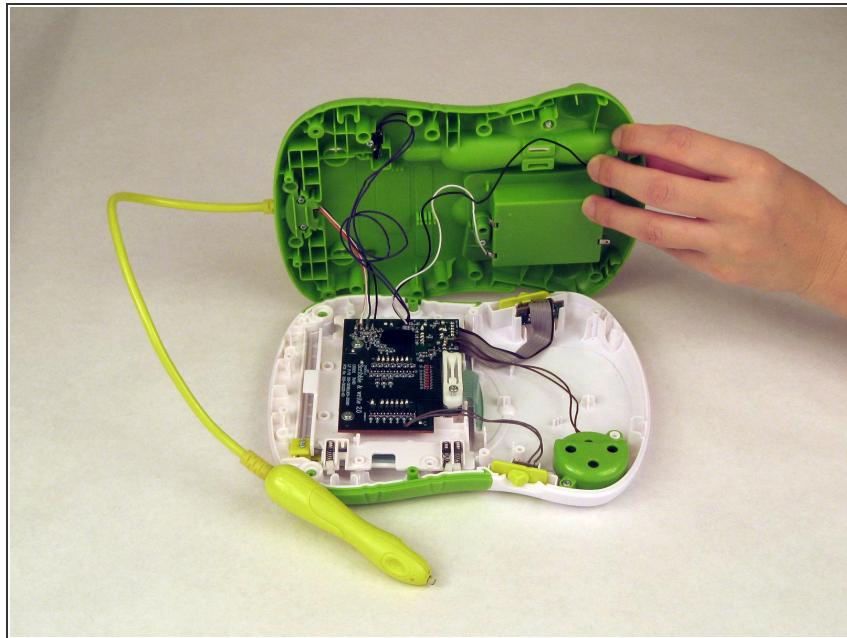


- Very carefully, remove the back of your toy.

Step 4

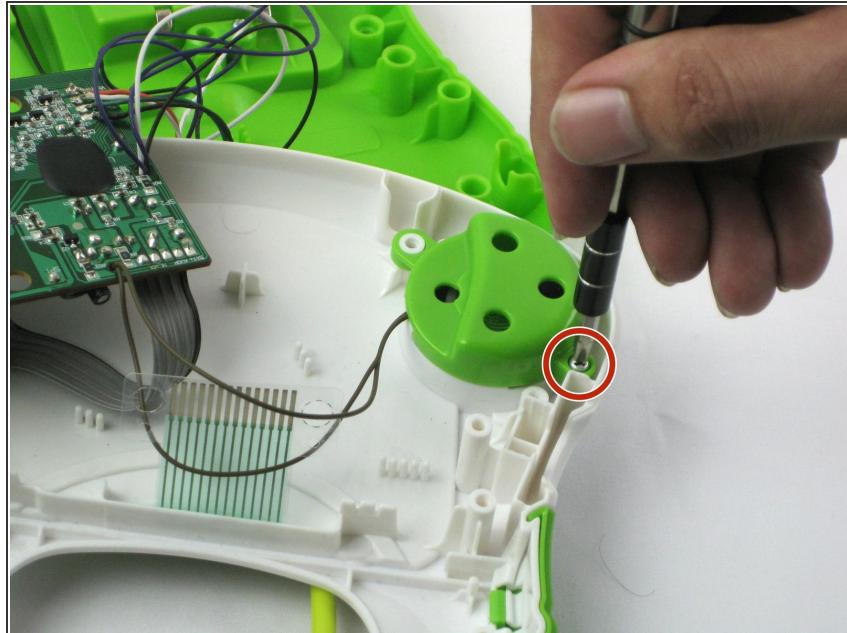

- Using a Phillips head screwdriver, unscrew the speaker. It is circular and green.

Step 5

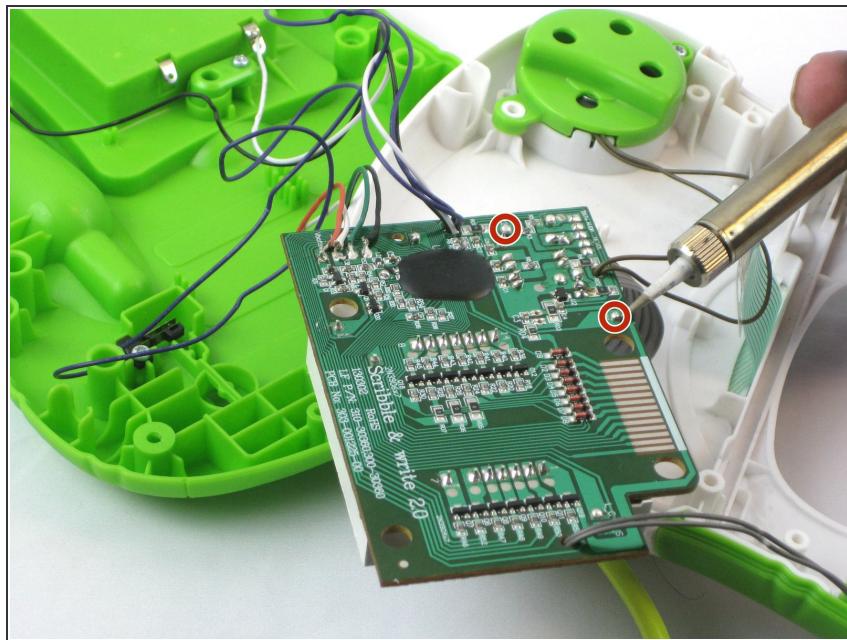

- Lastly, use a solder iron to remove the wiring from the speaker and motherboard.

To reassemble your device, follow these instructions in reverse order.