


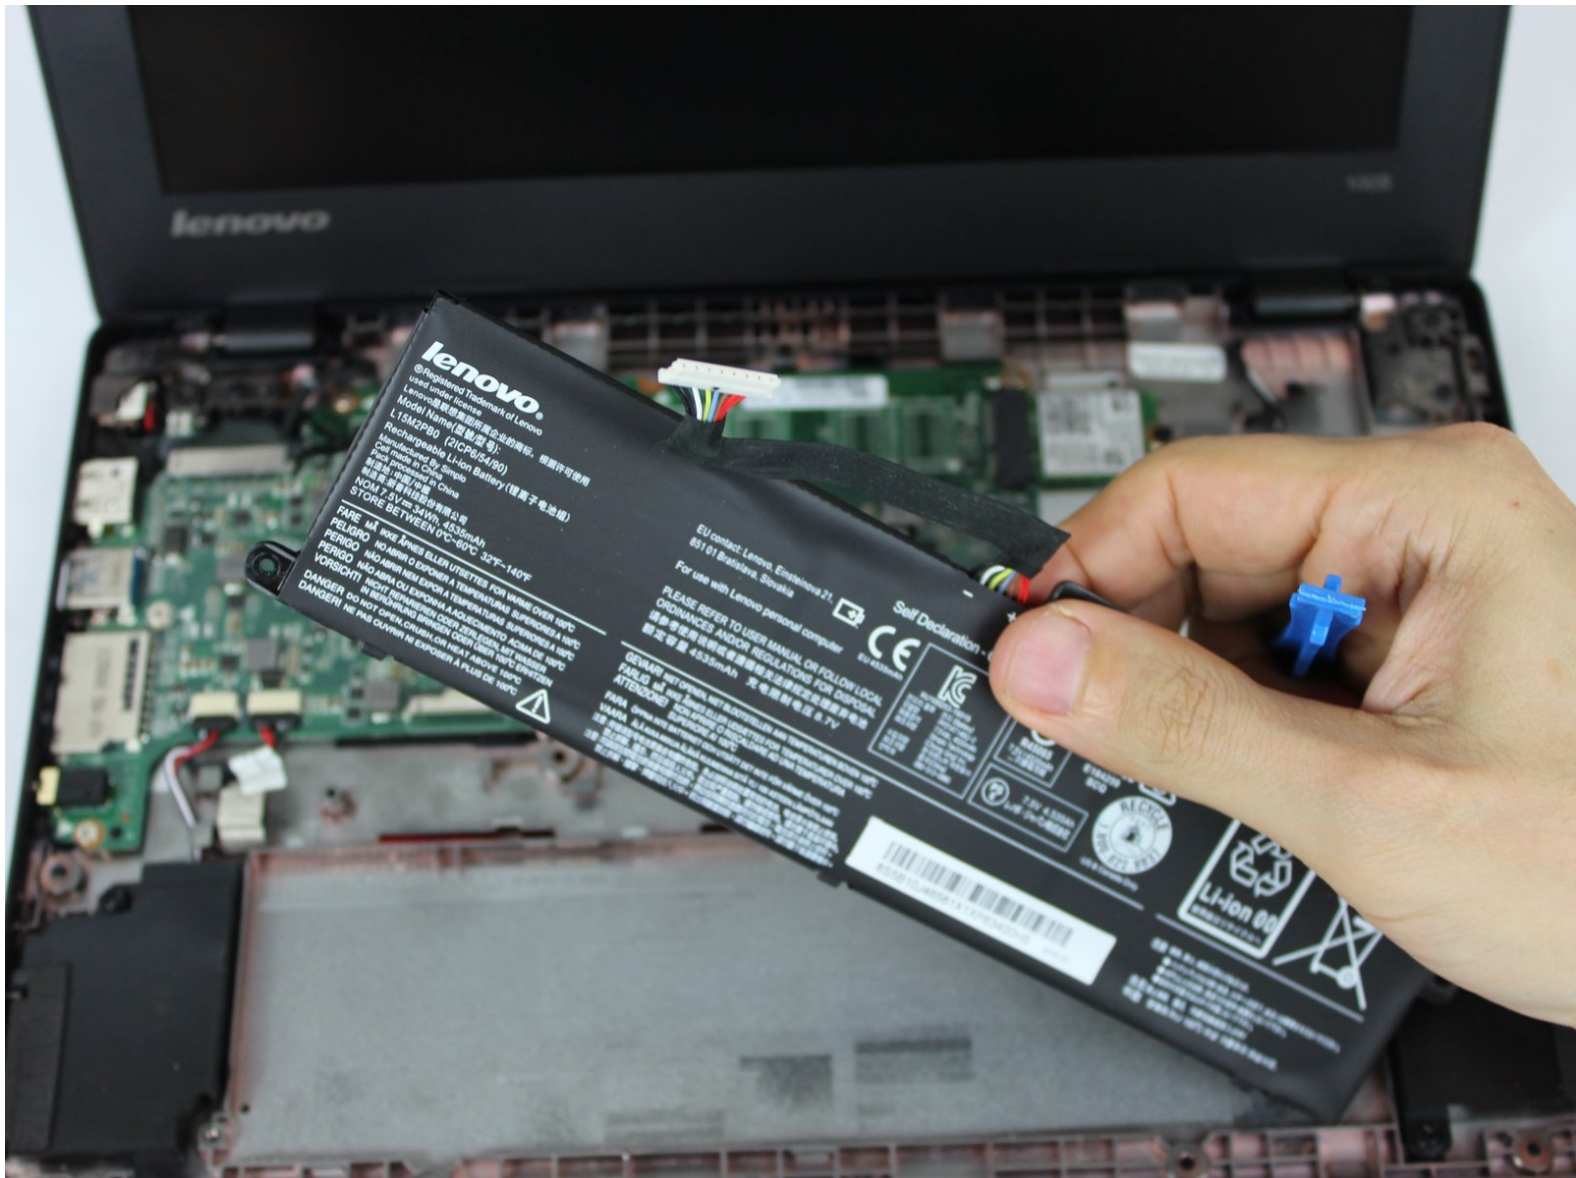

Lenovo 100s Chromebook-11IBY Battery Replacement

This guide will show how to remove and replace the battery for the Lenovo 100s Chromebook-11IBY.

Written By: Milton Perez



This document was generated on 2019-12-26 03:25:41 PM (MST).

INTRODUCTION

This guide will show how to remove the battery for the Lenovo 100s Chromebook-11IBY. This removal will allow you to replace or upgrade the battery for your laptop.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Ensure your device is turned off and unplugged.

Step 2



- Use a Phillips #0 screwdriver to remove the nine 6mm screws from the larger back plate.



Step 3



- Turn your laptop back over, open it, and use the plastic opening tool on the recessed notch to gently pry each side and lift the keyboard plate up.


⚠ Be careful not to pull keyboard plate out immediately because cables are attached.

Step 4

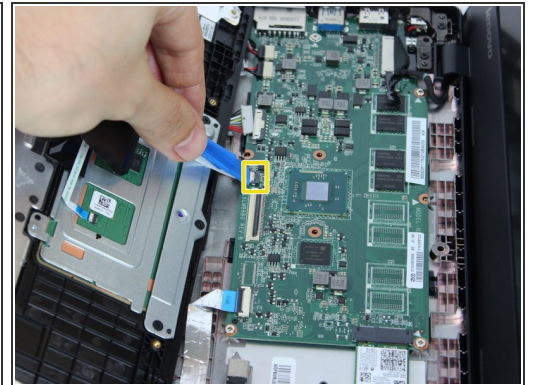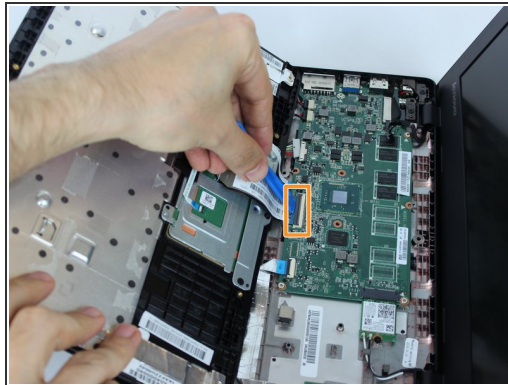


- Locate the two sticker-like connecting wires (for the keyboard and touchpad).
- Carefully unplug the orange circled (keyboard) wire from the keyboard plate.
- Carefully unplug the yellow circled (touchpad) wire from the keyboard plate.
- Then lift the keyboard plate up and place it to the side.

Step 5

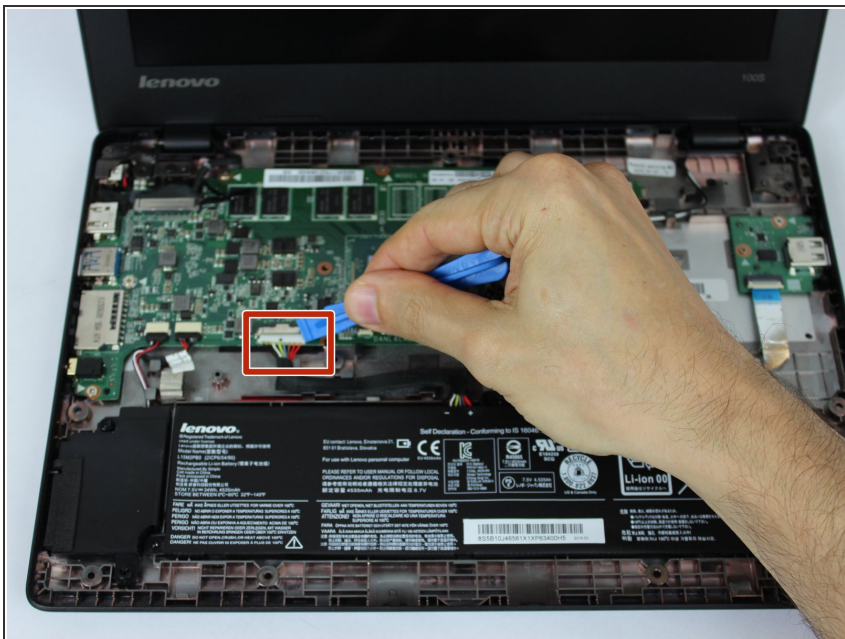


- Locate the cable attaching the battery to the motherboard and gently unplug it by hand.

Step 6

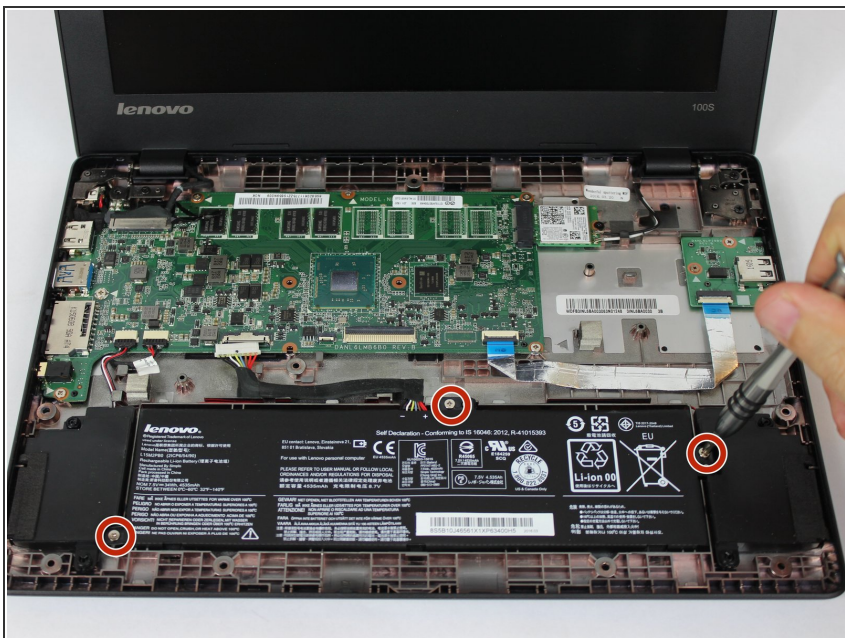

- Use the Phillips #0 screwdriver to remove the three 6mm screws from the battery.

Step 7

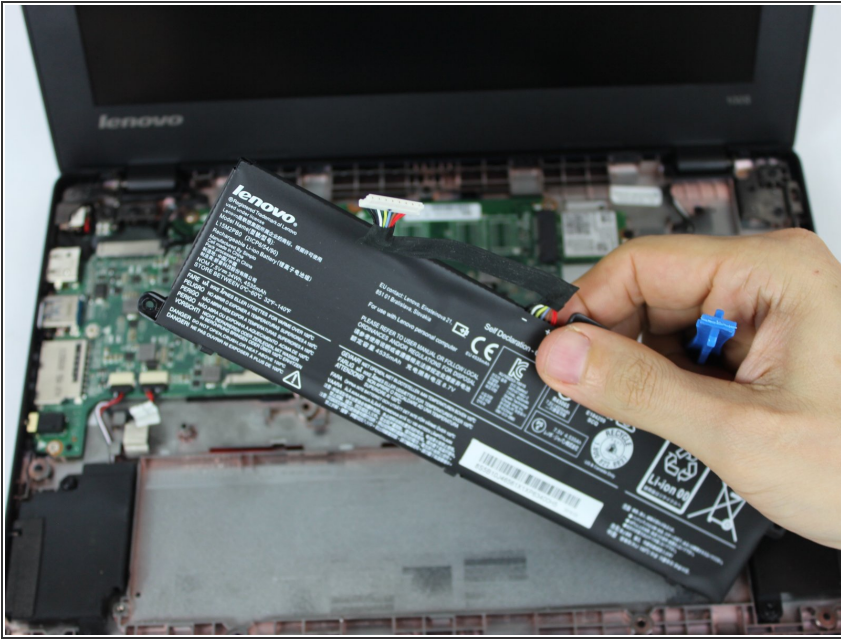

- Remove the battery.

To reassemble your device, follow these instructions in reverse order.