



Lenovo 100s Chromebook-11IBY Screen Replacement

This guide will show how to remove and replace the screen for the Lenovo 100s Chromebook-11IBY.

Written By: Milton Perez



This document was generated on 2019-09-22 02:16:33 AM (MST).

INTRODUCTION

This guide will show how to remove the screen for the Lenovo 100s Chromebook-11IBY. This removal will allow you to replace or upgrade the screen for your laptop.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Screen




- Ensure your device is turned off and unplugged.

Step 2



- Use the plastic opening tool on the recessed notch to gently pry each side of around the screen up.

Step 3

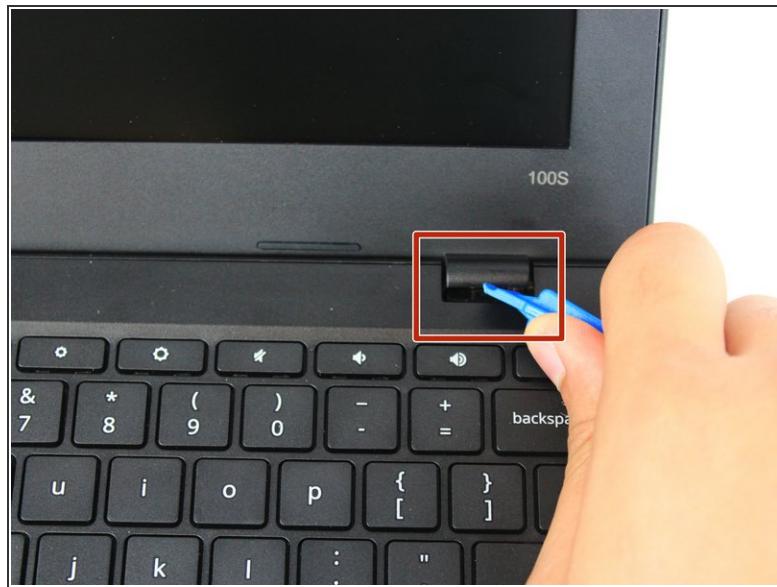

- Carefully pry up and underneath both the (left & right) hinges of the screen cover.

Step 4



- Use the opening tool on the inside of the screen plate and again on the sides to gently remove it.

Step 5



- Use the #0 Phillips screwdriver to remove the four 6mm screws from the screen.

Step 6



- Gently remove the screen from the plate and place it on the keyboard.


Be careful not to pull screen the immediately or completely out because cables are attached.

Step 7



- Gently remove the adhesive tape from the back of the screen.

Step 8

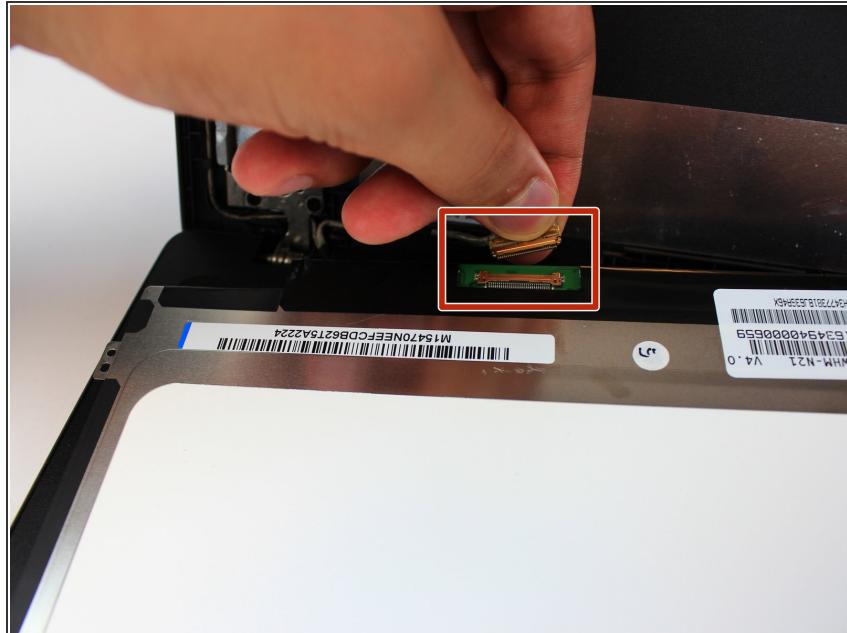

- Unplug the screen from the laptop.

Step 9



- The screen may now be removed completely from the laptop.
- ⓘ The back side of the screen has the screen's model number and manufacturer.

To reassemble your device, follow these instructions in reverse order.