




Lenovo 100s Chromebook-11IBY Webcam Replacement

This guide will show how to remove and replace the webcam for the Lenovo 100s Chromebook-11IBY.

Written By: Milton Perez

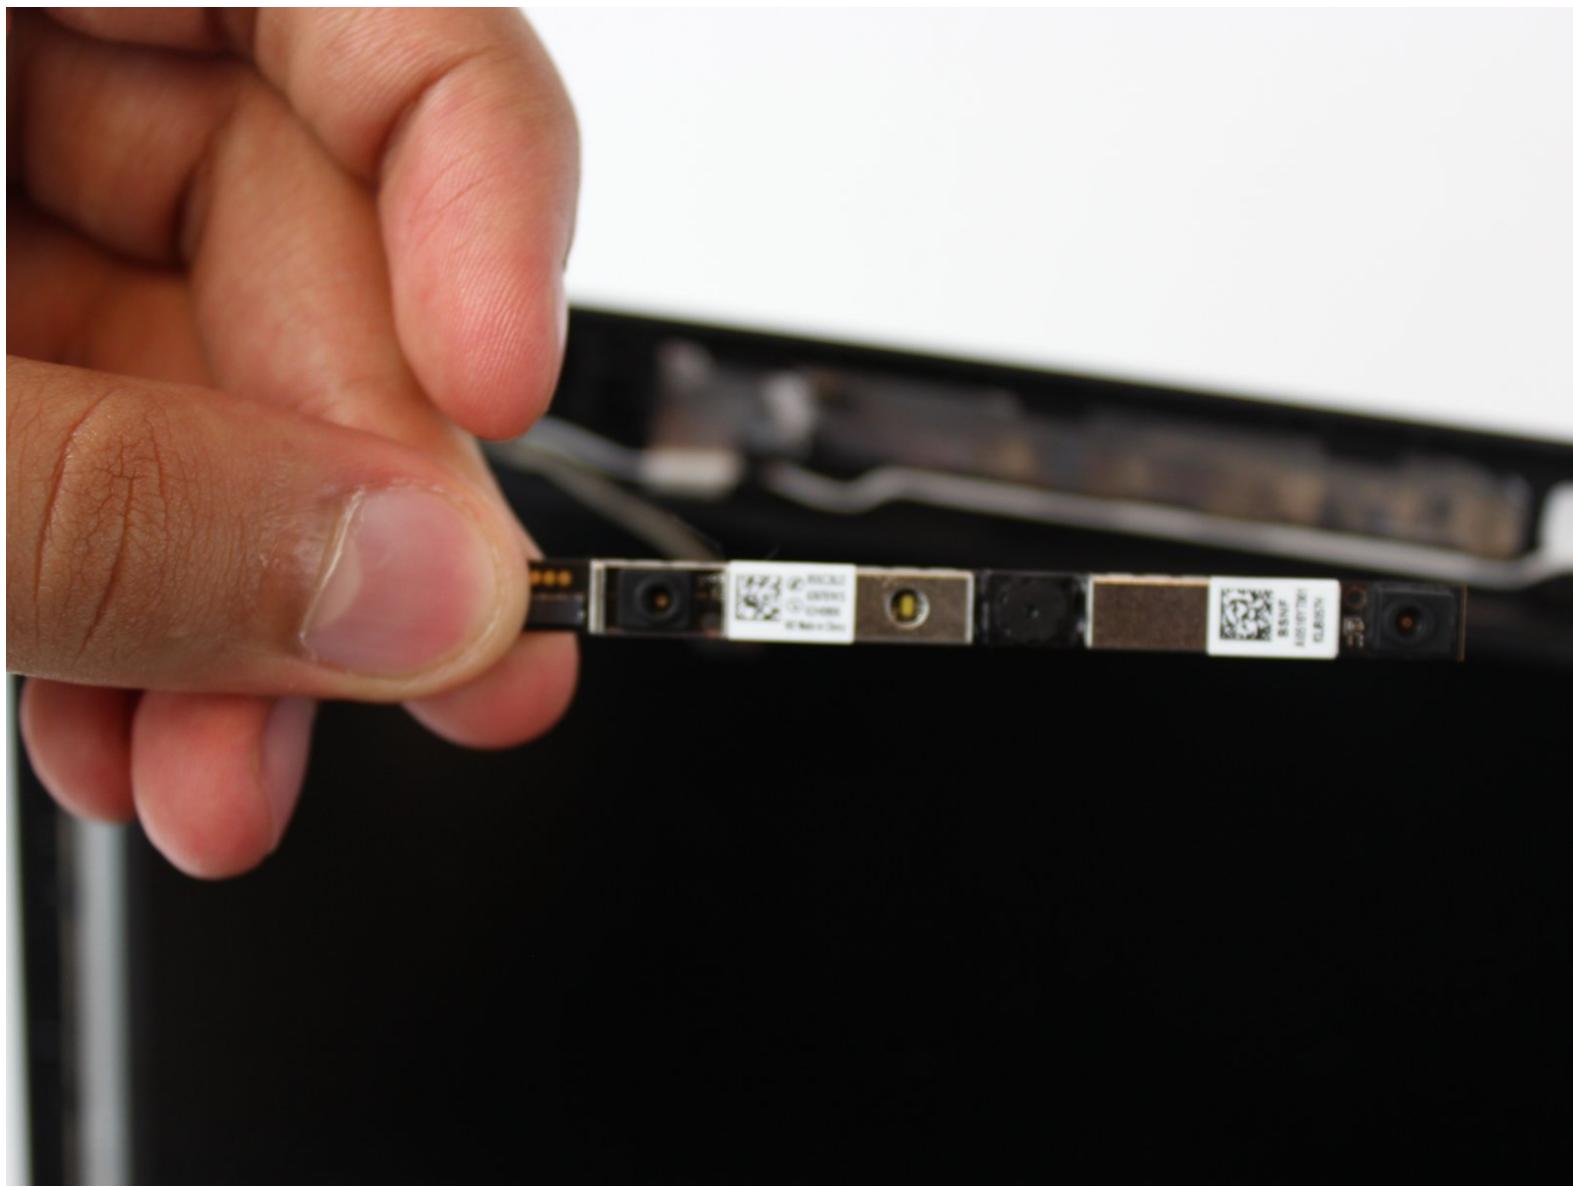

This document was generated on 2019-09-20 08:29:43 PM (MST).

INTRODUCTION

This guide will show how to remove the webcam for the Lenovo 100s Chromebook-11IBY. This removal will allow you to replace or upgrade the webcam for your laptop.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Webcam



- Ensure your device is turned off and unplugged.

Step 2



- Use the plastic opening tool on the recessed notch to gently pry each side of around the screen up.

Step 3




- Carefully pry up and underneath both the (left & right) hinges of the screen cover.

Step 4




- Use the plastic opening tool on the inside of the screen plate and again on the sides to gently remove it.

Step 5

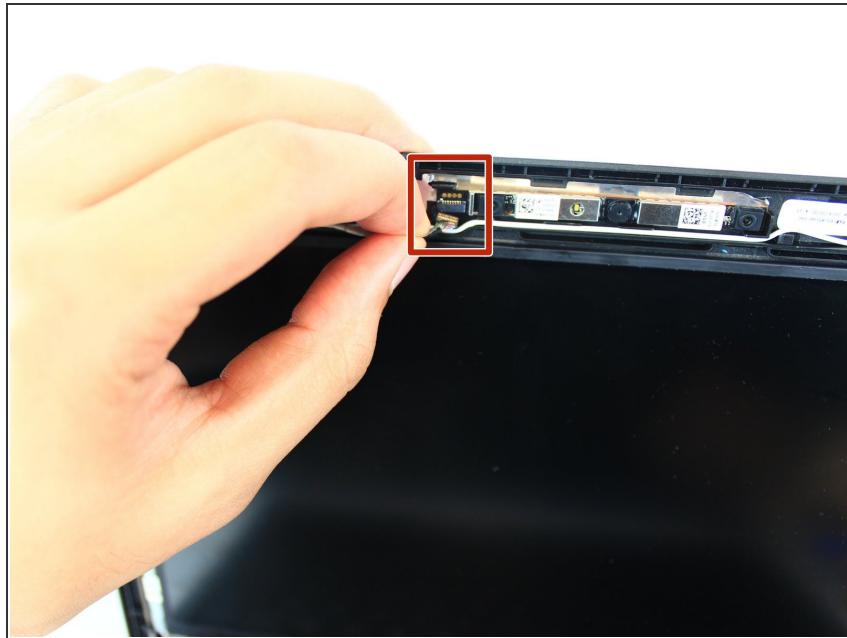

- Gently unplug the wire connecting the webcam to the laptop.

Step 6

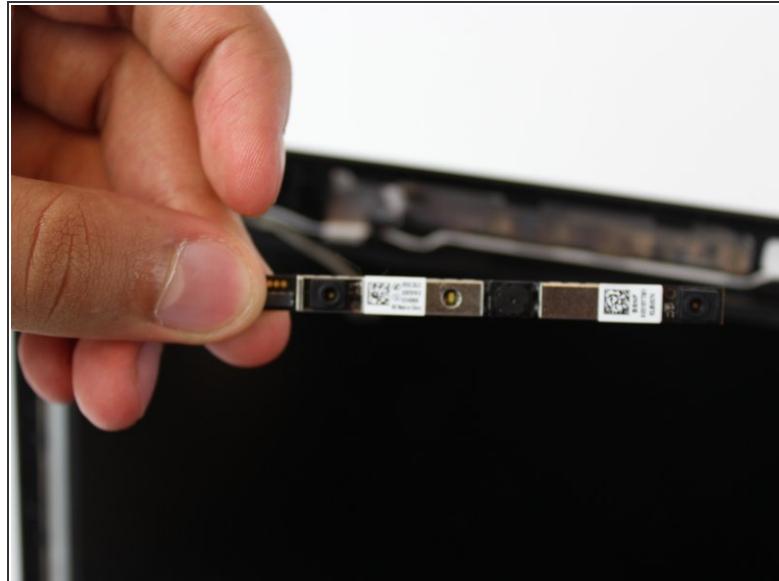

- Using the plastic opening tool, gently lift the webcam panel from the screen. Then remove it.

To reassemble your device, follow these instructions in reverse order.