



Lenovo A8-50 Motherboard and Speaker Replacement

Replacing the motherboard and the speaker part.

Written By: Jay Shah



INTRODUCTION

In this guide you will learn how to replace the motherboard and the speaker assembly. Both the motherboard and speaker are connected.

TOOLS:

- Prying and Opening Tool Assortment (1)


Step 1 — Battery



- Remove the back cover by prying it open with the metal spudger tool.

Step 2

- Remove the two screws with a PH000 head screwdriver.
- Keep all your screws in one place.

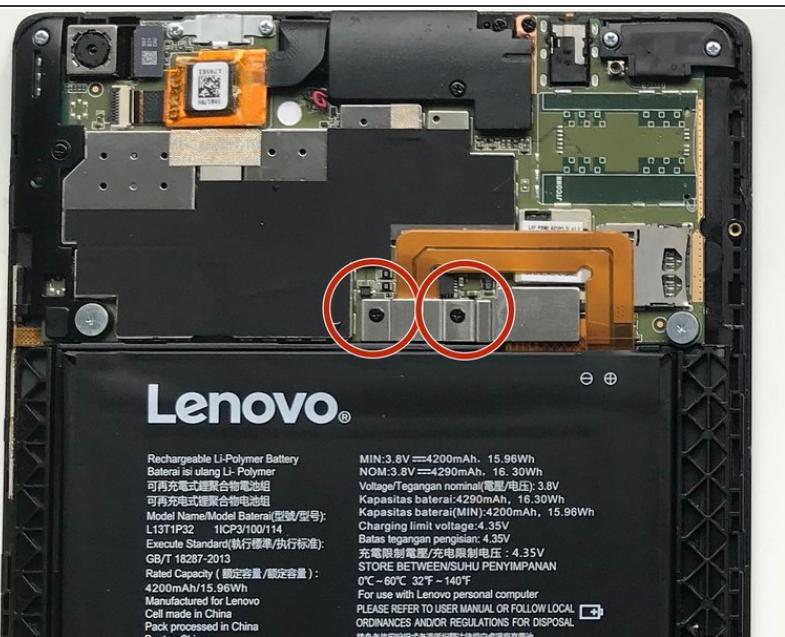

Step 3



- Remove the metal piece.


- ➡ Keep this piece safe, as you will need it to reassemble the device again.

Step 4



- Remove the battery by lifting it up using a plastic spudger.

Step 5

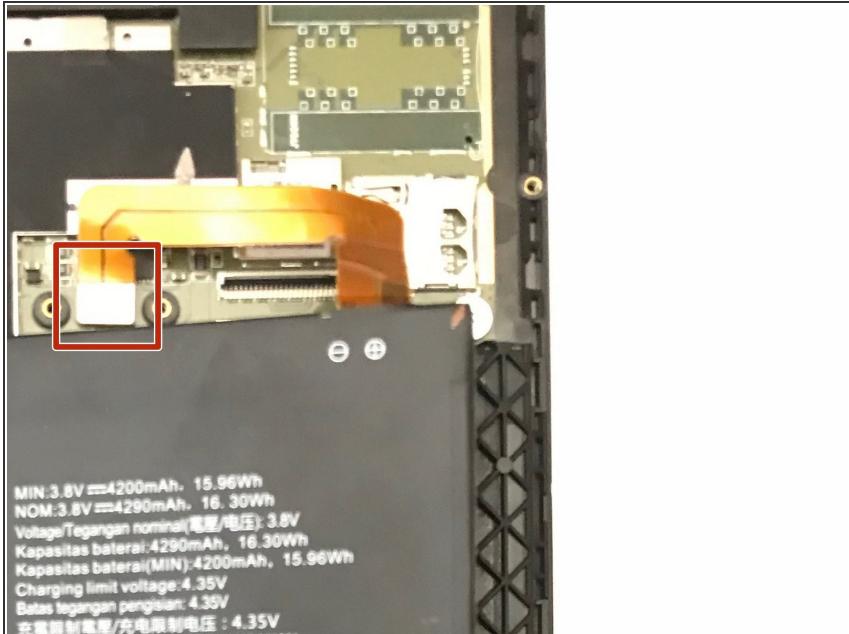

- Disconnect the cable from the connection.

⚠ Be careful not to tear or bend the cable.

Step 6 — Motherboard and Speaker



- Unscrew the 5 black screws, and the 9 silver screws with a PH000 head screwdriver.

➡ Set aside carefully.


Step 7



- Remove the two black panels and the clear circle piece.


- ★ Set aside carefully.

Step 8

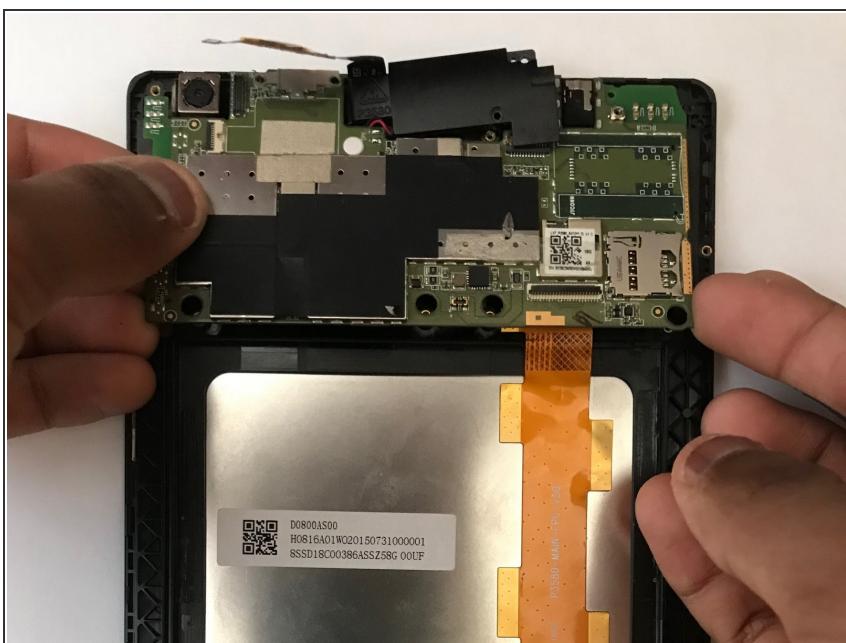

- Lift up the motherboard carefully, ensuring that you lift the speaker housing and the motherboard together

Step 9

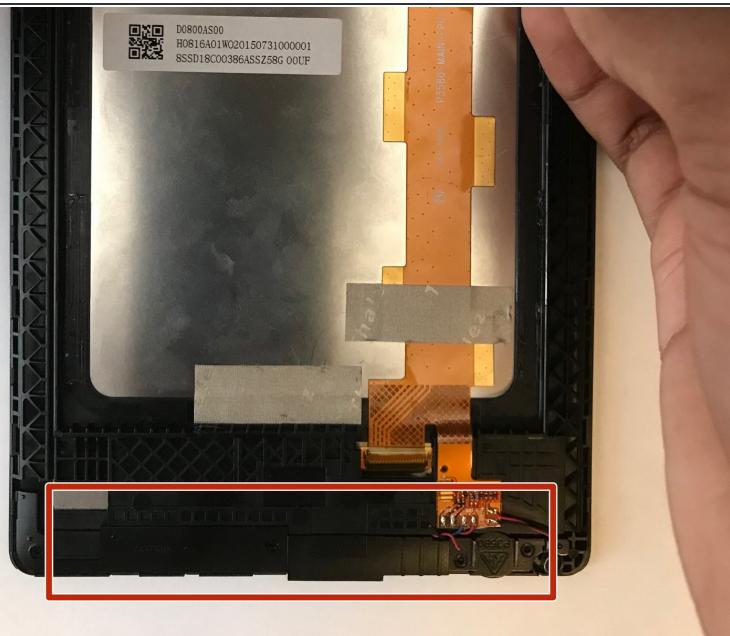

- Lift the bottom speaker piece up carefully

To reassemble your device, follow these instructions in reverse order.