


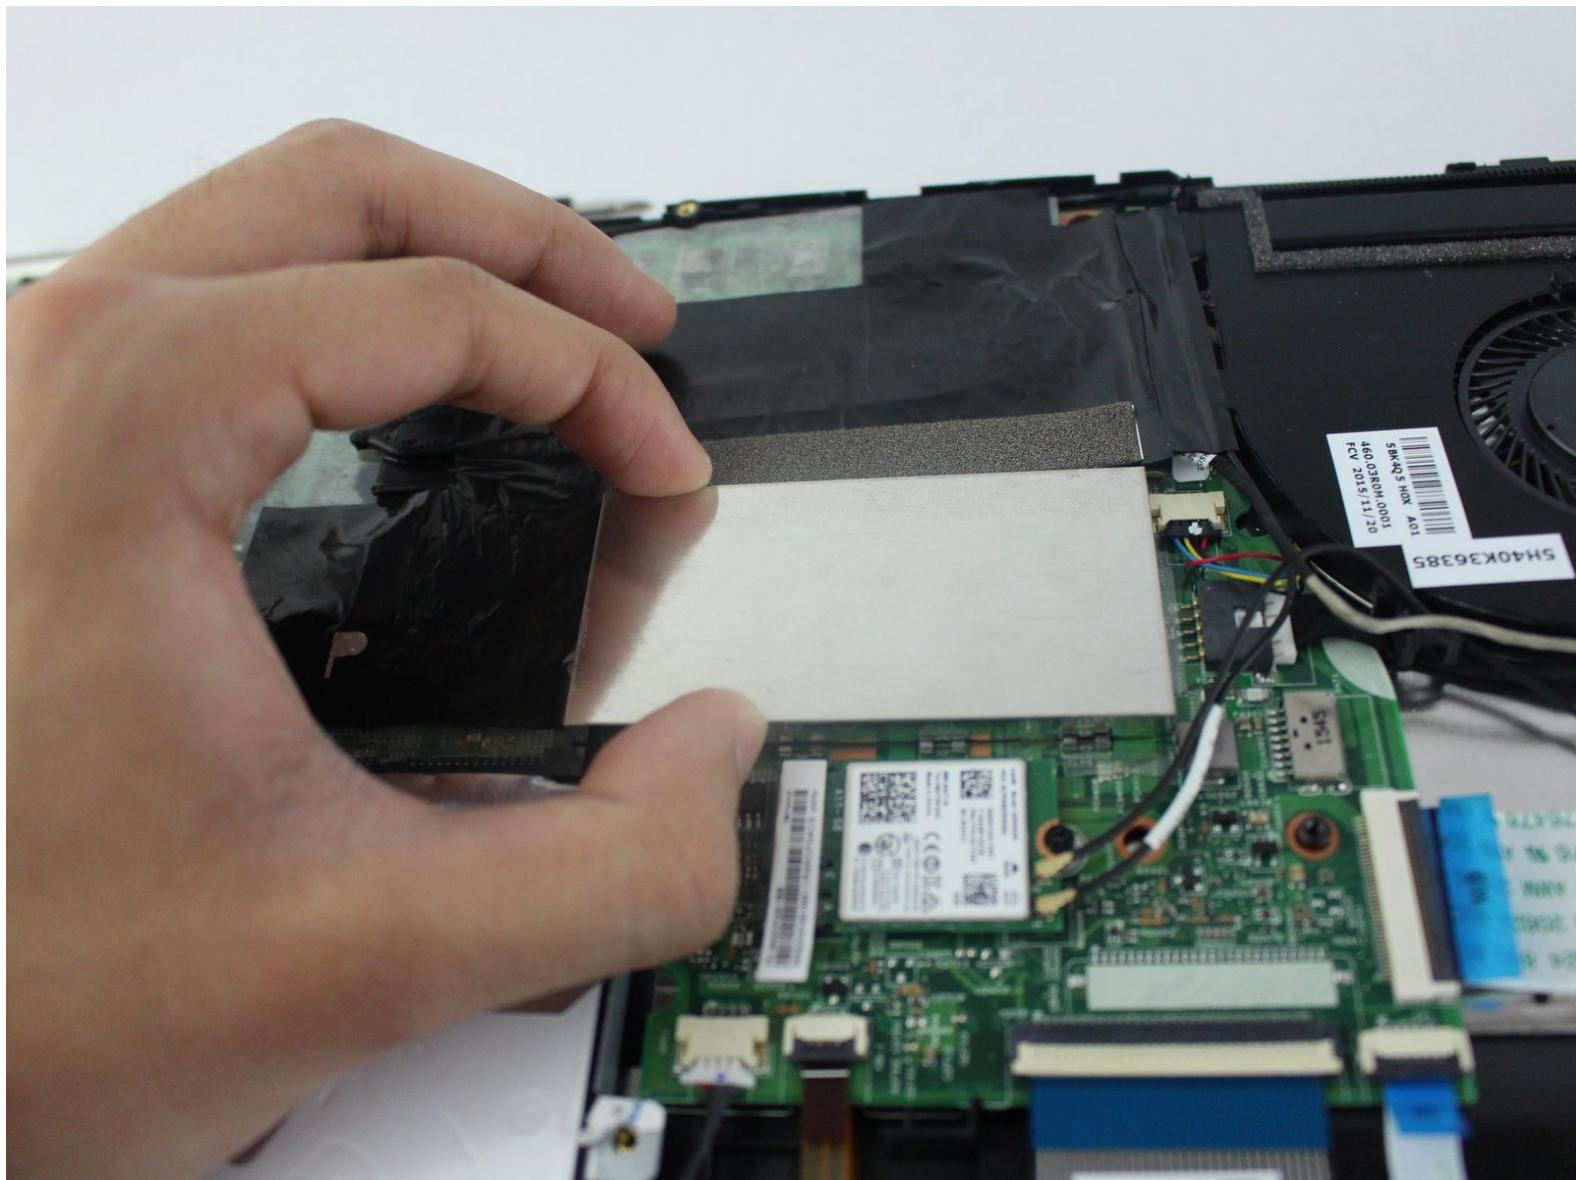

Lenovo Edge 2-1580 RAM Replacement

This guide describes the steps to replacing the Lenovo Edge 2-1580 8GB DDR3L RAM.

Written By: Julian Escallon




INTRODUCTION

The guide will show you how to remove and replace the RAM module that comes with the laptop. Be sure the new replacement module is compatible with the motherboard.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery

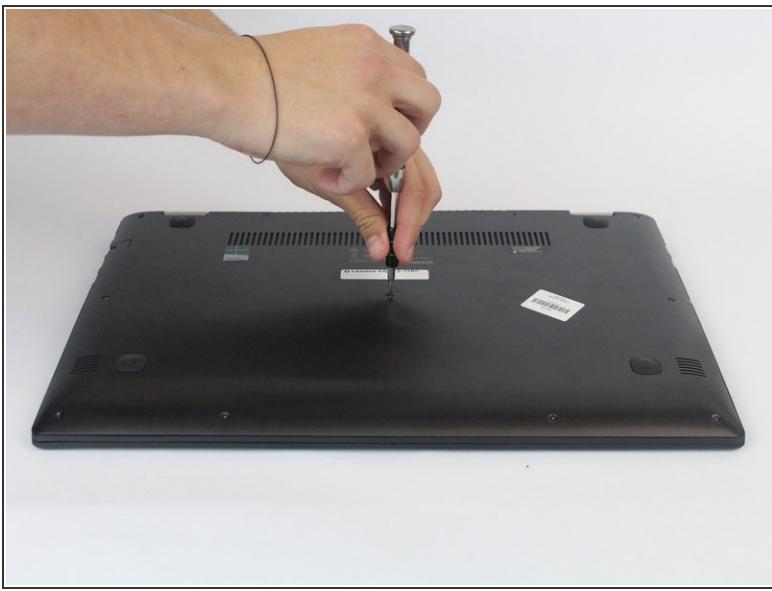


- Using the Phillips #0 screwdriver, remove the (11) eleven 5.4 mm screws from the back panel.

Step 2




- Using a plastic opening tool, pull out the back panel from the laptop.

Step 3

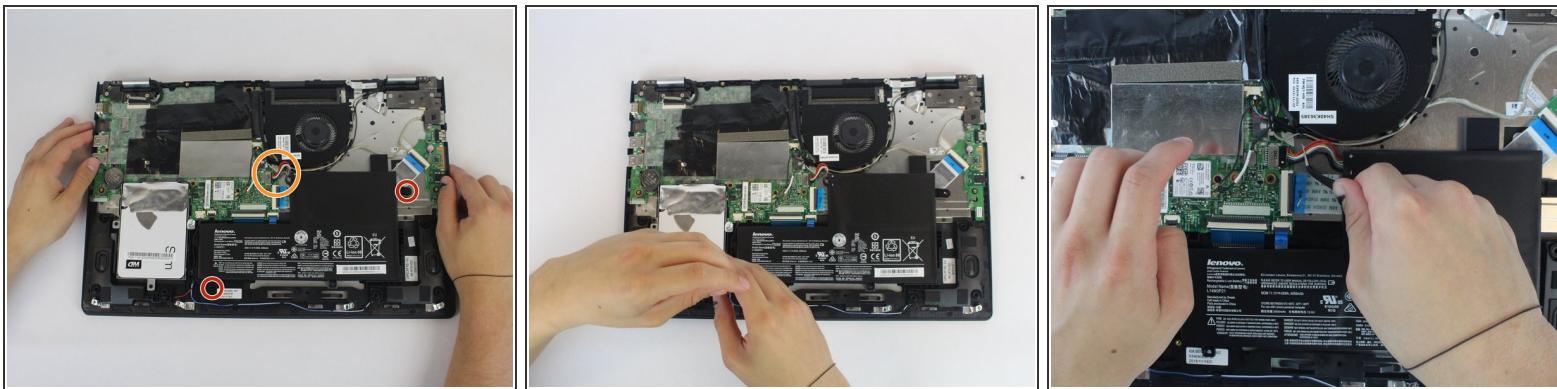


- Using the Phillips #0 screwdriver, remove the (2) 5.4 mm screws.
- Disconnect the battery connector from the motherboard.

Step 4

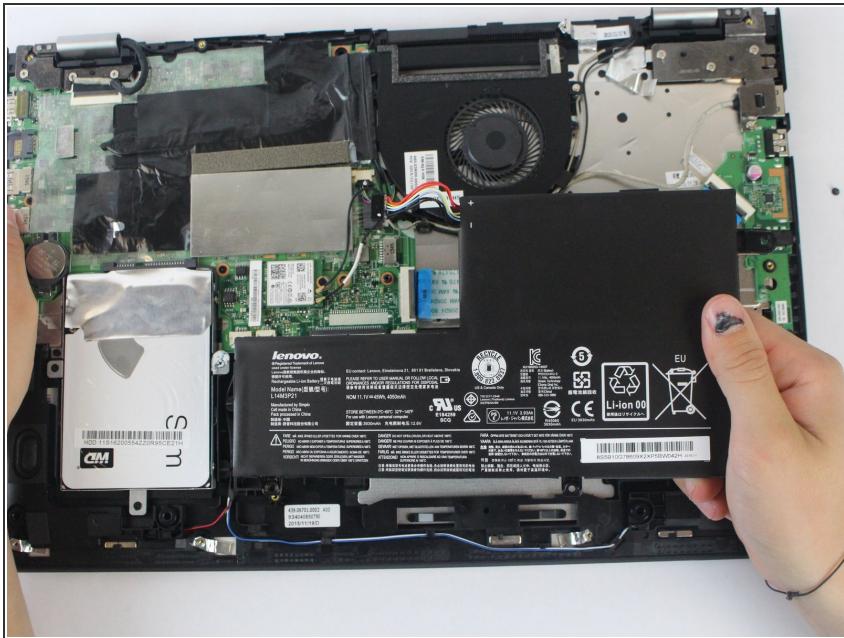



- Pull the battery outward and remove it from the rest of the laptop.

Step 5 — RAM

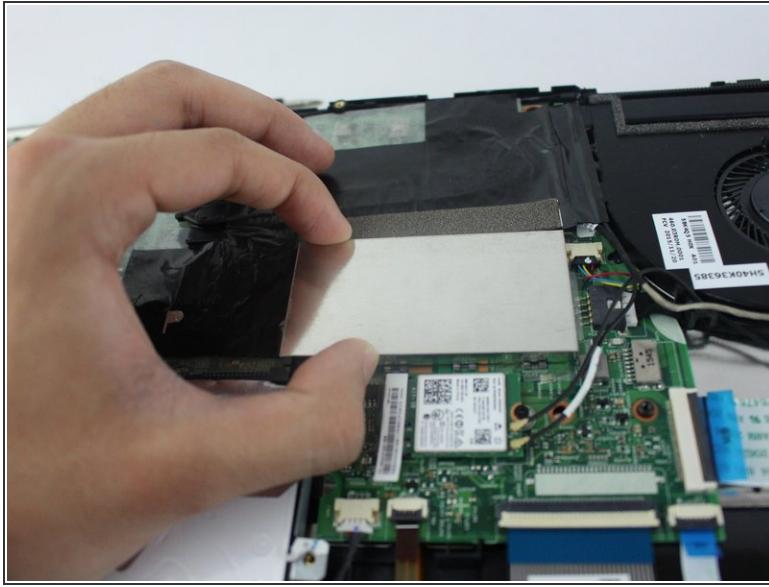


- Remove the metallic RAM cover

Step 6

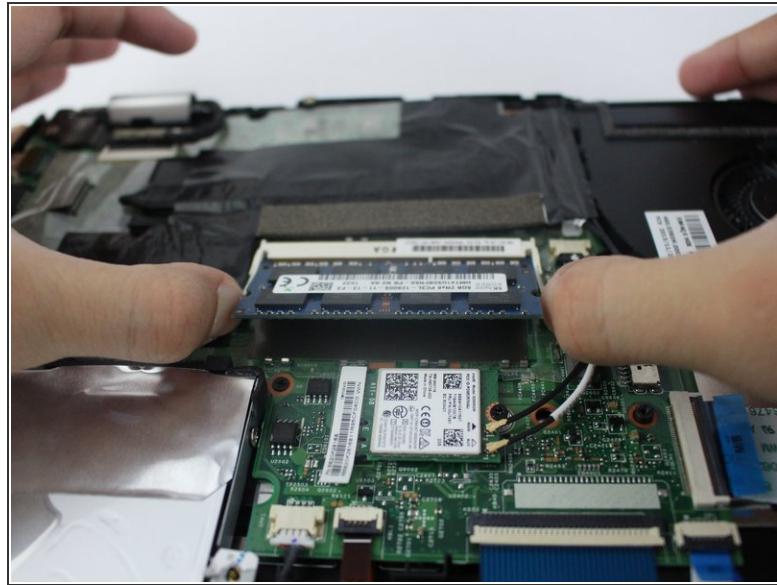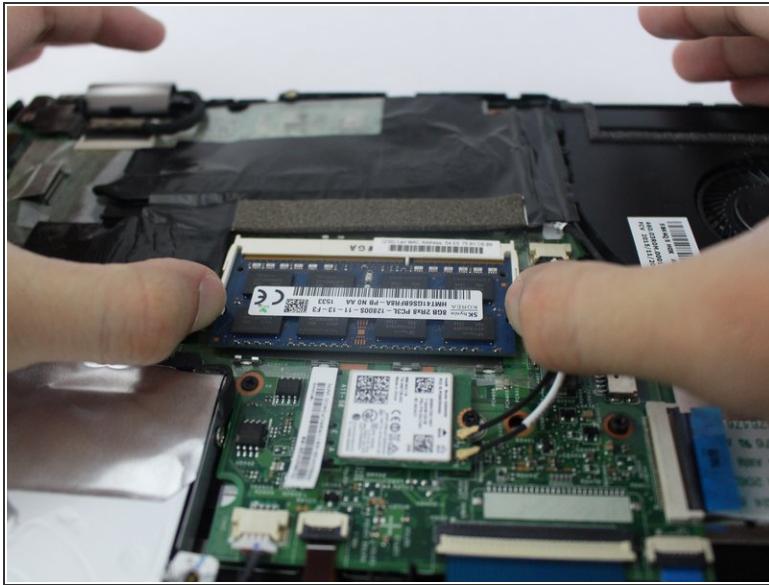

- With both of your thumbs, gently pull both adjacent levers outwards. The RAM module will rise a bit.

Step 7

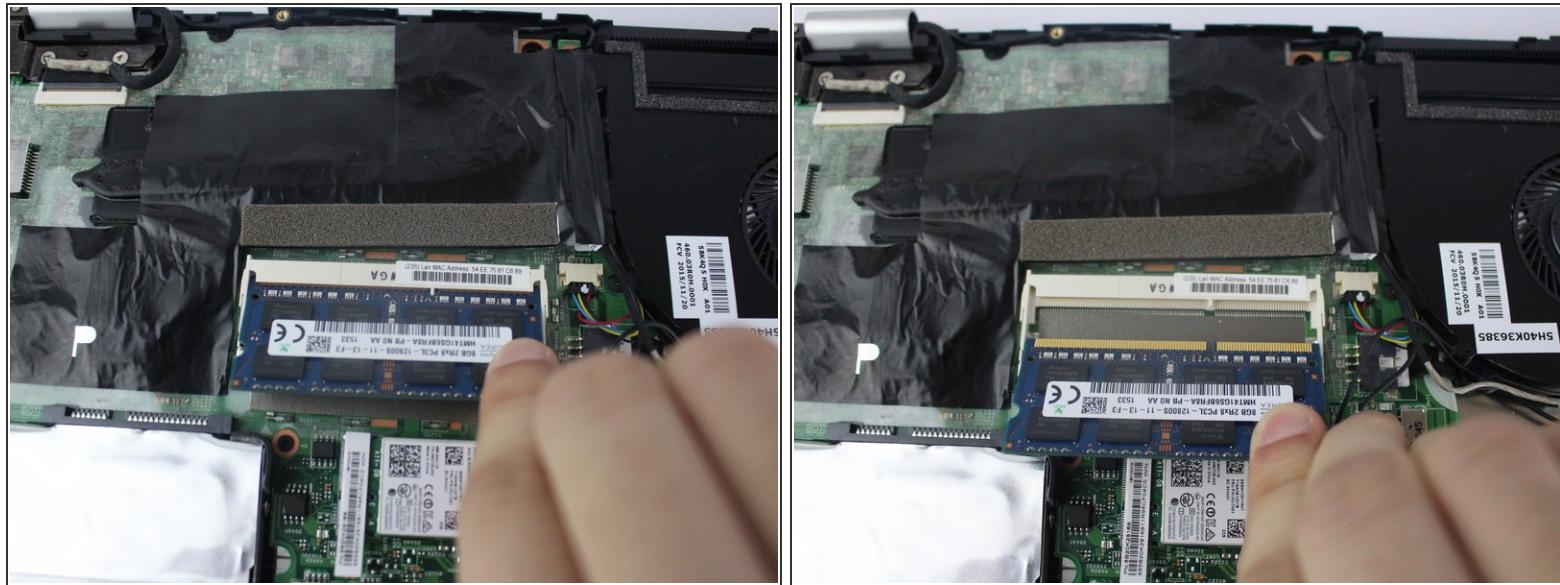

- Grab the RAM module , and gently pull it out.

To reassemble your device, follow these instructions in reverse order.