



Lenovo Essential B570 Hard Drive Replacement

Use this guide to remove the Hard Drive

Written By: Samuel Filliettaz



INTRODUCTION

This guide will show how to be able to identify and remove your Hard Drive using common tools.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [64 Bit Driver Kit](#) (1)


Step 1 — Battery



- Turn over laptop.
- Switch open the left battery lock.


(i) If you are replacing inner components of the laptop, it is recommended to remove the battery first to avoid damage to the laptop.

Step 2

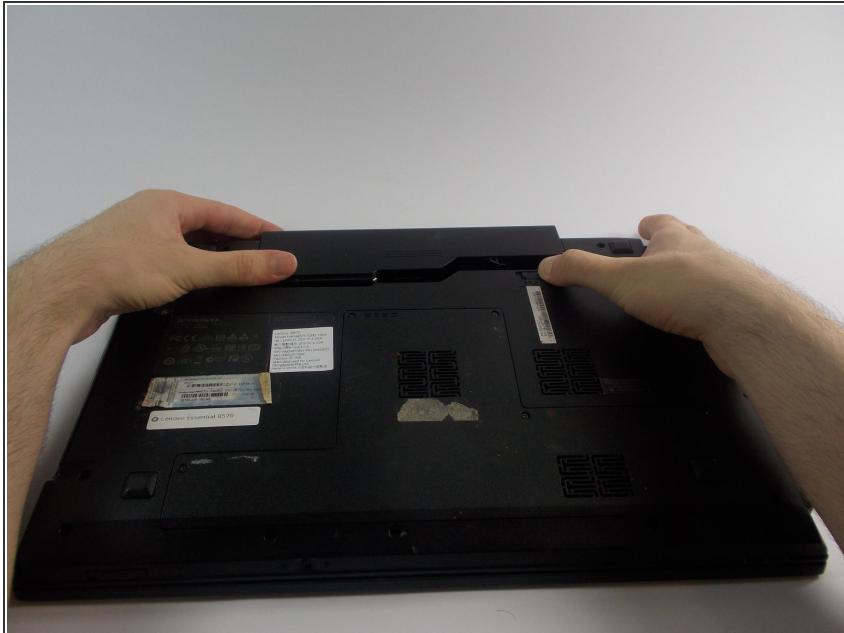

- Hold the right battery lock open with one hand while removing the battery itself with the other.

Step 3 — Back Panel

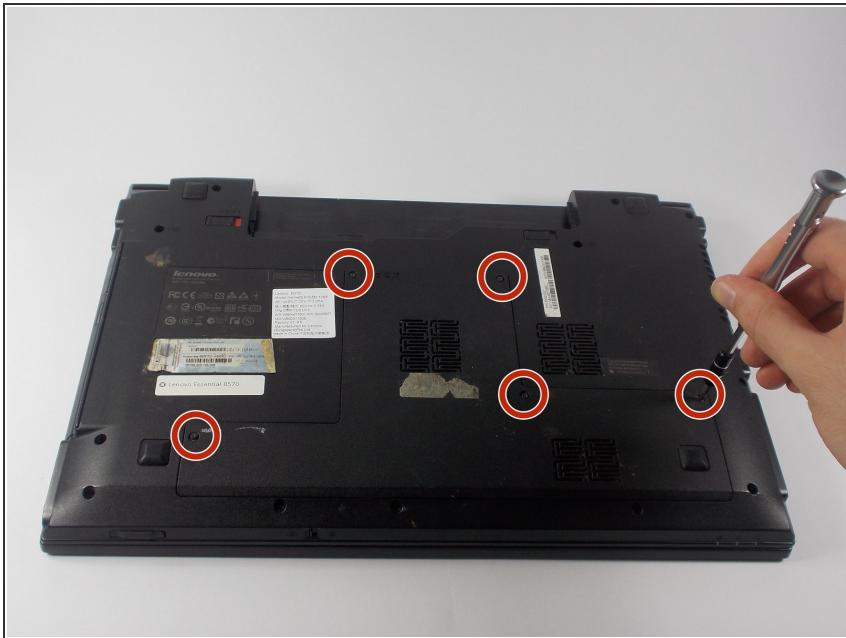

- Loosen the five Philips screws that secure the panel.

(i) The screws do not actually fully remove from the panel. Loosening them as much as you can will be enough to disconnect them from the laptop.


Step 4



- Prop open the cover with a plastic opening tool.

⚠ If the cover does not come off easily, do not force it. Make sure all screws are loosened.

Step 5 — Hard Drive

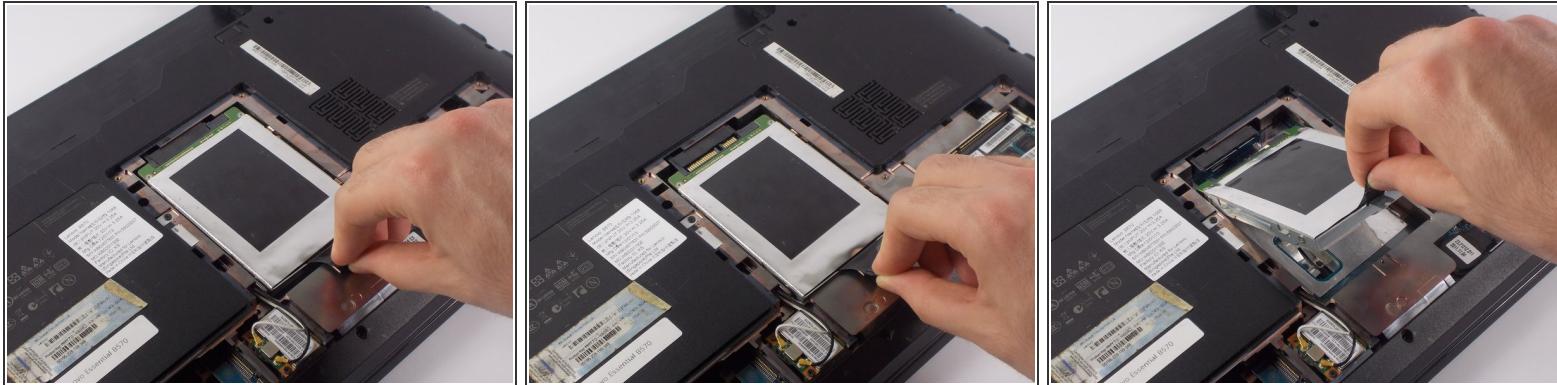

- Pull the Hard Drive out of its socket.
- Lift the tab upwards to remove the hard drive.

(i) If you cannot pull the hard drive out of its socket, there is a possibility that there is a 4mm Phillips #1 screw securing it. Locate it and remove it before continuing. It is in very close proximity to the black tab.

To reassemble your device, follow these instructions in reverse order.