



Lenovo G40-30 LCD Screen Replacement

How to replace the LCD screen in a Lenovo G40-30.

Written By: Jimmy McClenan



INTRODUCTION

Replacing the screen is a quick and easy task. Removing the screen only takes three tools: A JIS #0 screwdriver, a plastic opening tool, and a spudger. Before you start make sure you remove the battery and unplug the device.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [JIS #1](#) (1)
-

Step 1 — Battery




- At the top of the laptop you will see two switches, like in image one and two.
- Pull the switches outwards with your thumb, towards the unlocked lock.

Step 2



- Once both switches are pulled, the battery should pop out.

Step 3

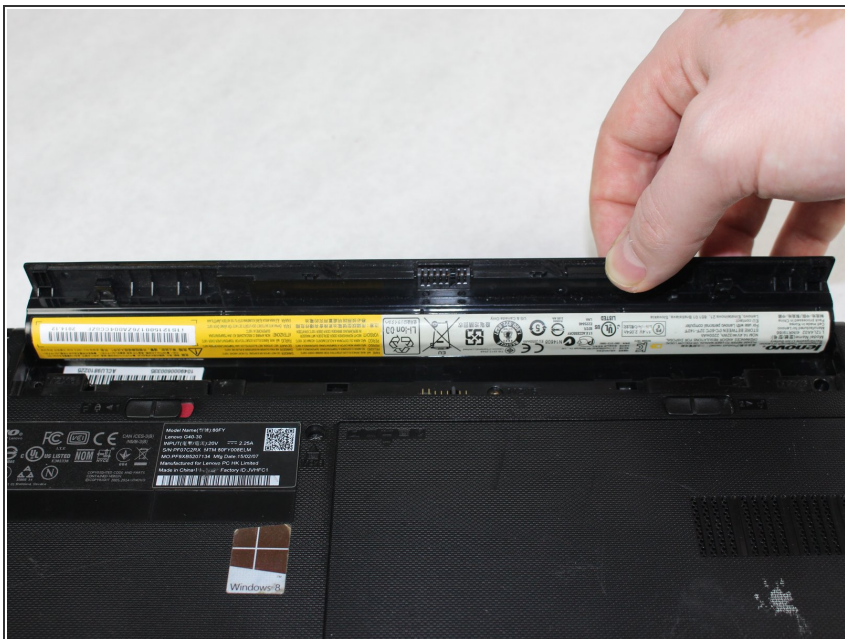


- Now you are ready to insert your new battery.

Step 4 — LCD Screen





- Use the plastic opening tool to pry the plastic away from the screen.

Step 5

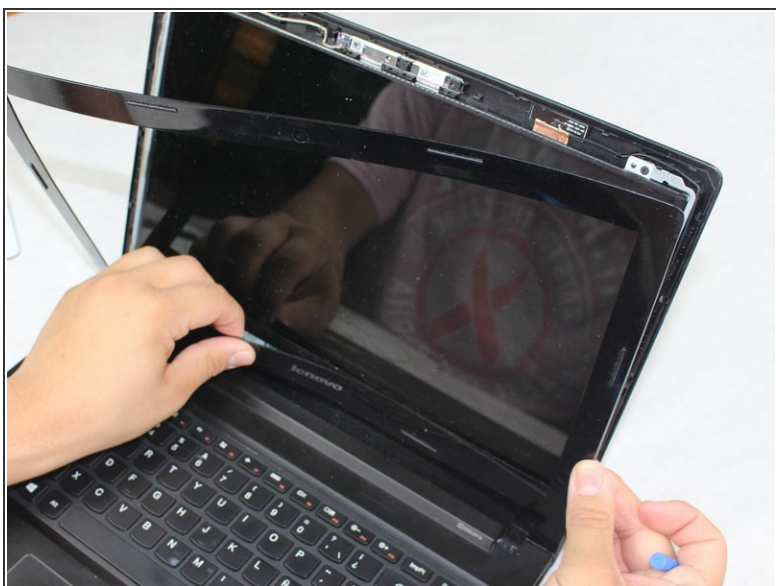

- Carefully unsnap the front plastic piece to expose the frame of the screen.


Step 6

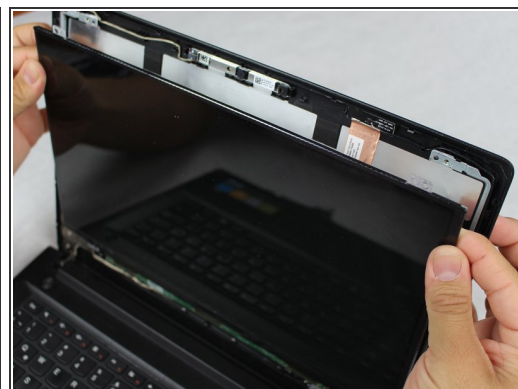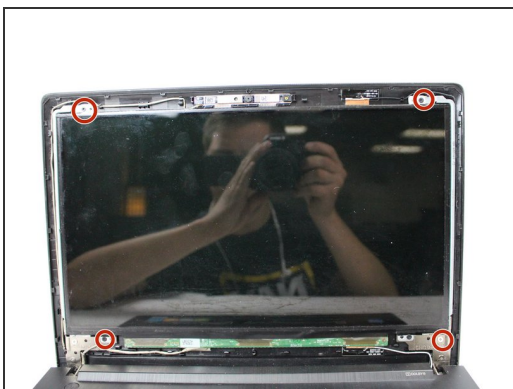

- Unscrew the four 7mm screws located on all four corners of the frame using a JIS #0 screwdriver.

⚠ Carefully lift the screen from the base so as to not damage it.

Step 7

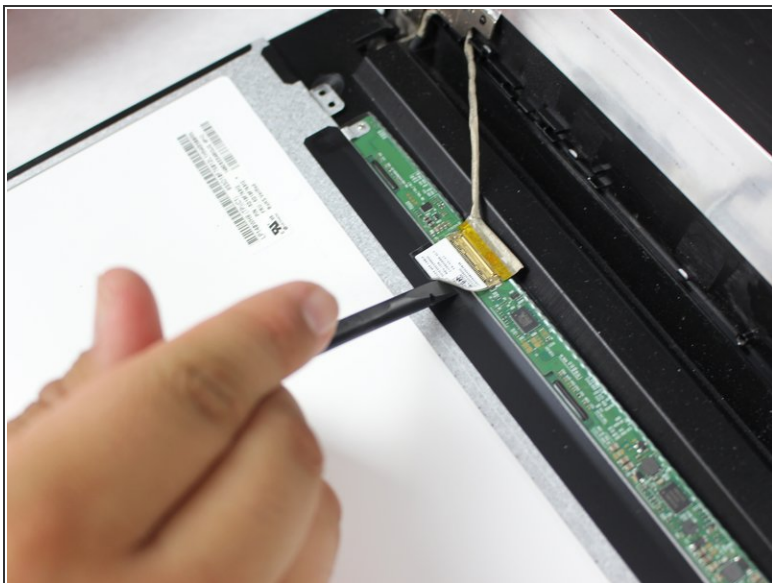

- Slowly remove the sticker connected to the rear of the screen using a spudger.

 Carefully disconnect the screen from the base of the laptop.

Step 8



- Now you have removed the screen and are ready to install a new one.

To reassemble your device, follow these instructions in reverse order.