



# Lenovo G50-70 Fan Replacement

This guide will show how to replace the cooling fan.

Written By: Caleb DesJardins



## INTRODUCTION

The fan on a computer is important for cooling the parts that generate a lot of heat. If fan is not running properly, there is a risk of other parts overheating and causing damage to critical components. Most computers have thermal throttling; this means speeds will decrease when it starts to overheat to prevent from damage.

## TOOLS:


- Phillips #0 Screwdriver (1)

## Step 1 — Battery



- Push the left switch (labeled 1) to the left to show red underneath. This will unlock battery.
- Push the right switch (labeled 2) to the right. This will eject battery.

## Step 2

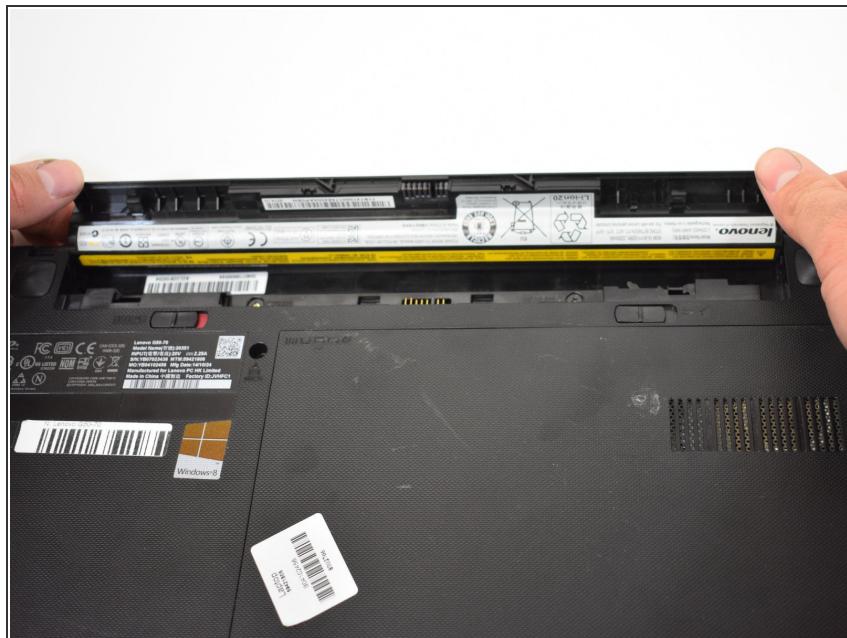

- Rotate the battery away from the laptop.

## Step 3 — Back Access Panel




- Remove the three 6mm Phillips #0 screws holding the back access panel on.

## Step 4




- Slide the cover toward you to unlatch it.
- The edge of the panel will slide away from the laptop so it can be lifted.

## Step 5 — Fan

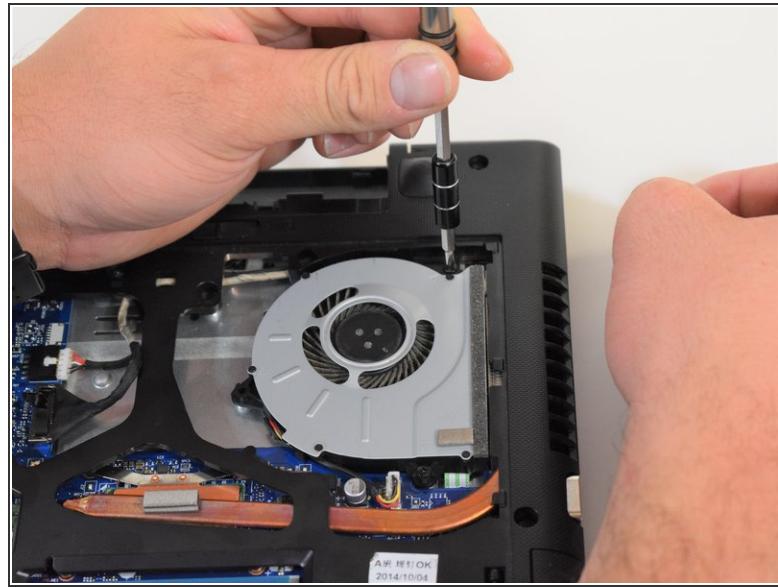


- Remove the three 6mm Phillips #0 screws on the perimeter of the fan.

## Step 6

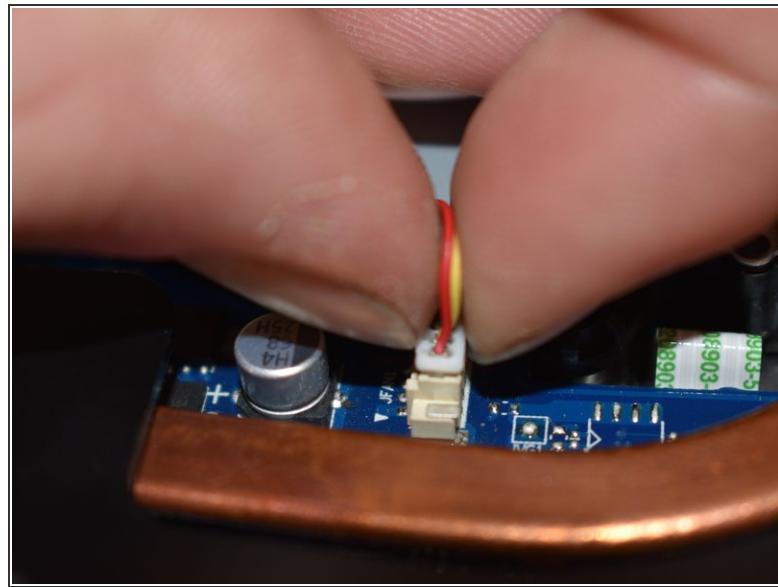

- ⓘ The fan is plugged into the motherboard next to the copper heat sync.
- Unplug the bundled wire connector by pulling up on the white plug.
- ⚠ Do not pull up by the wires.

## Step 7

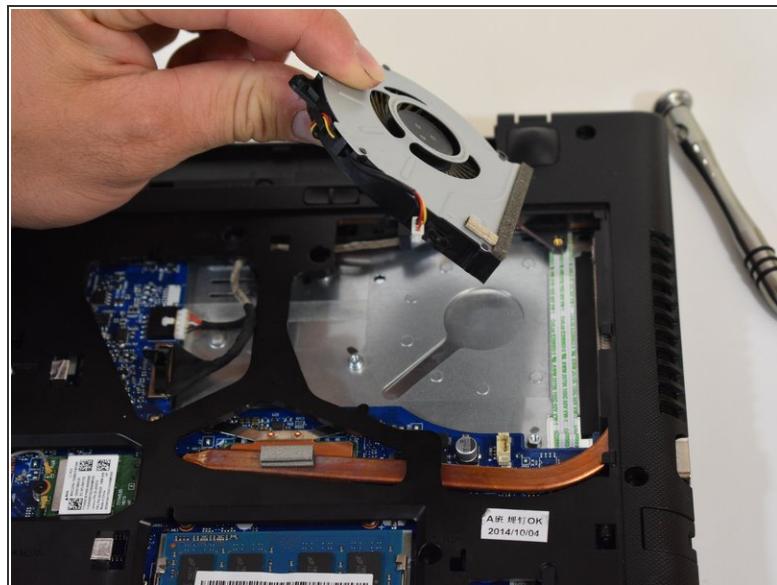

- Lift fan out of case.

To reassemble your device, follow these instructions in reverse order.