



Lenovo G50-70 Wireless Card Replacement

This guide will show how to replace the wireless card on a Lenovo G50-70.

Written By: Caleb DesJardins



INTRODUCTION

When connecting to the internet, the computer should see the available wifi signals. If it cannot find any signals, the wireless card could be the problem.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Push the left switch (labeled 1) to the left to show red underneath. This will unlock battery.
- Push the right switch (labeled 2) to the right. This will eject battery.

Step 2

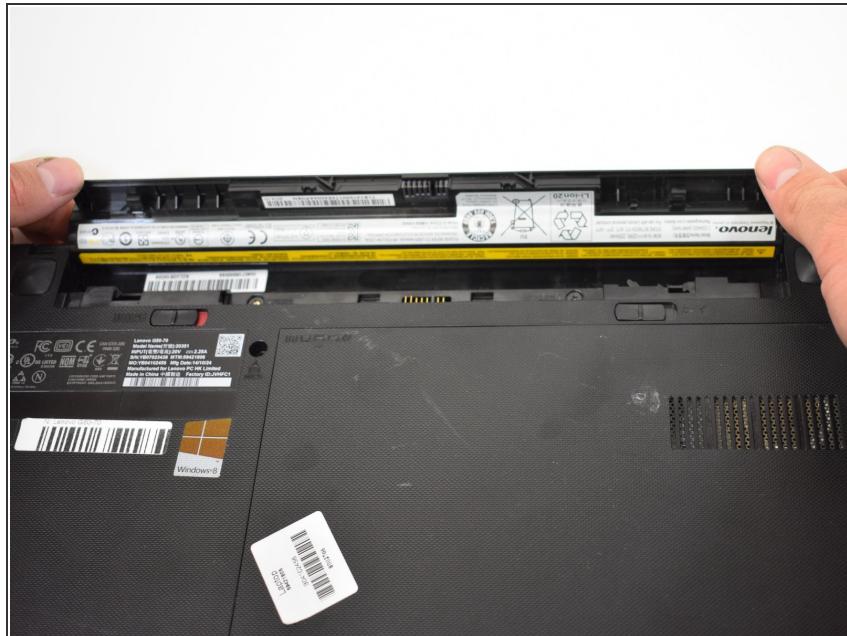

- Rotate the battery away from the laptop.

Step 3 — Back Access Panel



- Remove the three 6mm Phillips #0 screws holding the back access panel on.

Step 4



- Slide the cover toward you to unlatch it.
- The edge of the panel will slide away from the laptop so it can be lifted.

Step 5 — Wireless Card



- Disconnect the two plugs on the wireless card by pulling them up with a small tool.
- Use a plastic spudger to minimize the risk of damage.

Step 6



- Remove the one 3mm Phillips #0 screw.

Step 7



- Lift up wireless card out of plug.

To reassemble your device, follow these instructions in reverse order.