




# Lenovo G50-80 80E5 CD Drive Replacement

This guide will instruct users how to disassemble the laptop and remove the CD drive for repair or replacement.

Written By: Brett Bousquet

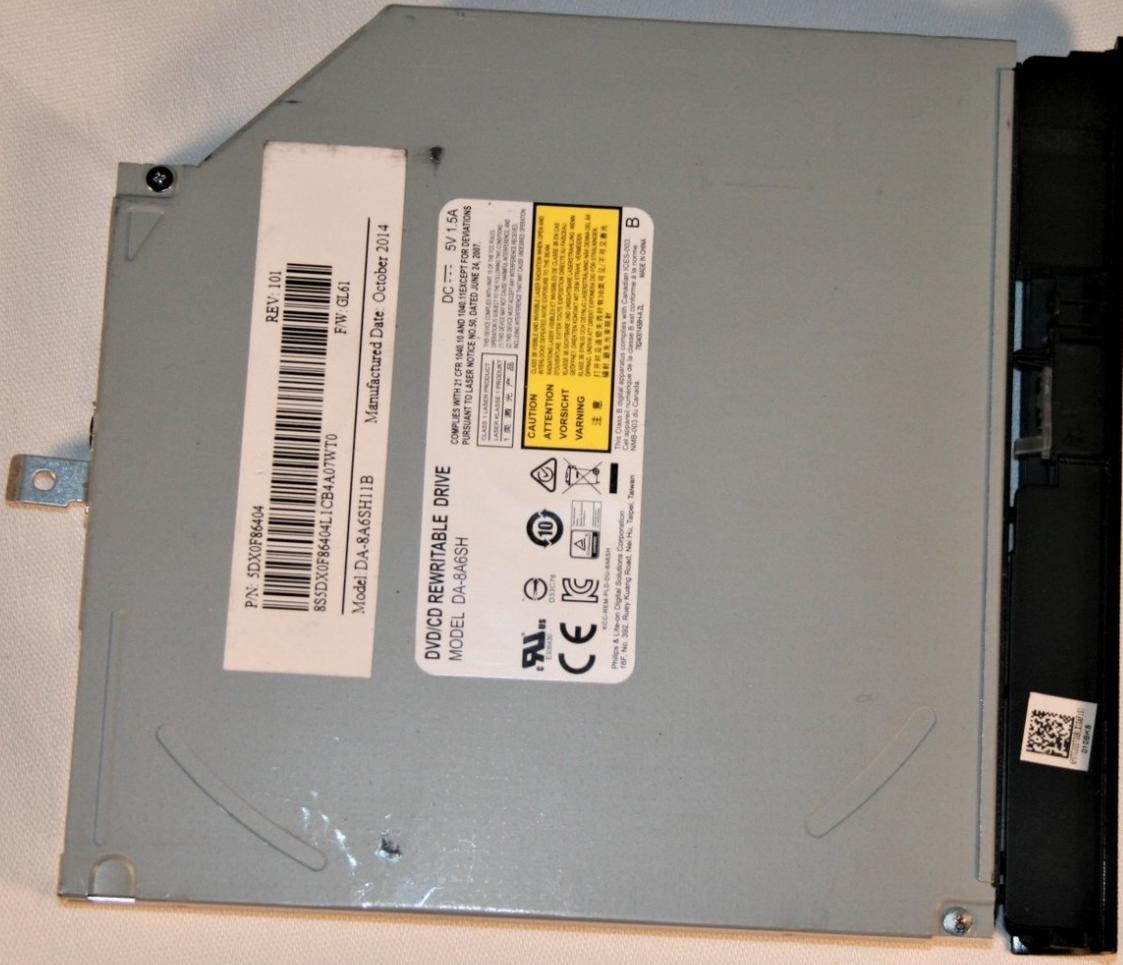

 **TOOLS:**


- **Phillips #00 Screwdriver (1)**

## Step 1 — Bottom Access Panel



- Locate and remove the 3 screws securing the outer cover of the laptop.

## Step 2

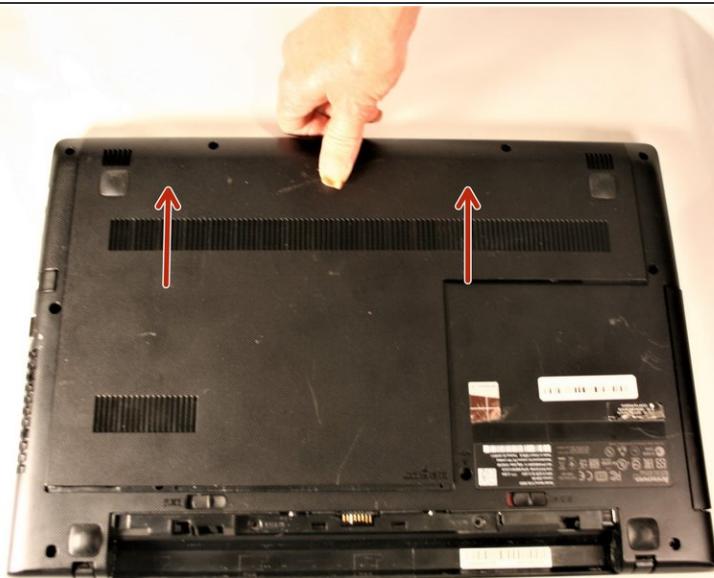


- slide cover away from hinges and lift panel off.

## Step 3 — CD Drive



- Locate the CD drive.
- Remove the single #00 Phillips 5.5 mm screw on the centermost side of the drive.

## Step 4

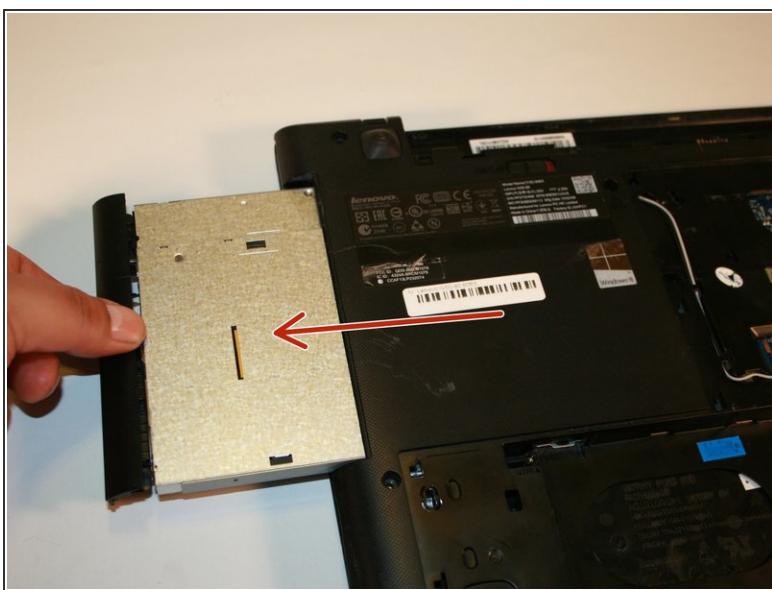

- Move the drive towards the outside of the laptop to remove the connector.
- Pull the drive out of the laptop.

To reassemble your device, follow these instructions in reverse order.