



Lenovo G500S Touch Disc Drive Replacement

Use this guide to remove the disc drive/CD drive/optical drive in your Lenovo G500s Touch.

Written By: Christopher Foster



INTRODUCTION

The disc drive in a laptop is a component that is likely to experience troubles overtime. You may hear clicking noises coming from the disc drive when a disc is inserted. If your disc drive is making a clicking noise or if your device fails to read the discs you insert, your disc drive may have stopped working. Use this guide to replace the disc drive in your laptop.

TOOLS:

- Phillips #00 Screwdriver (1)

PARTS:


- [Lenovo G500s Touch Laptop Disc Drive](#) (1)

Step 1 — Battery



- ⓘ Make sure that your device is powered off and unplugged from the power source.
- Flip your device over so that the back is facing you.
- Using your fingers, push the tabs in opposite directions to eject the battery.
- Remove the battery from the device.

Step 2 — Back Panel

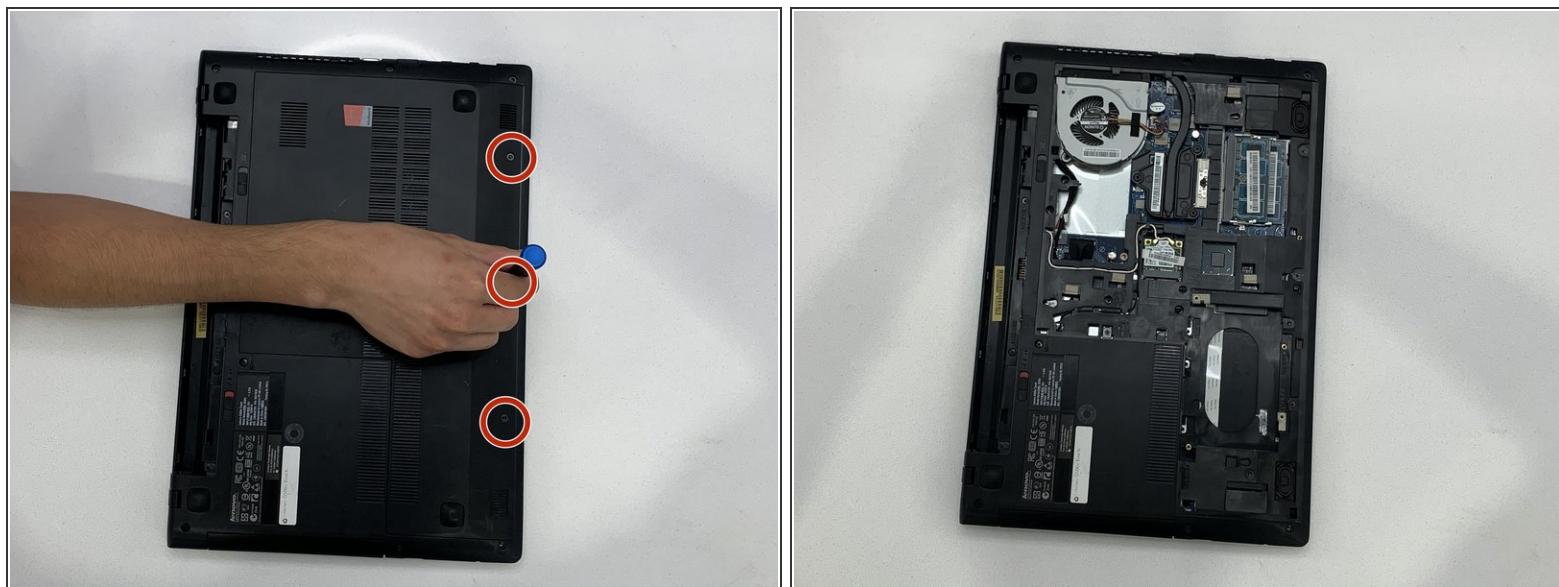

- Remove the three 4mm screws on the back cover using the Phillips #00 screwdriver.
- Remove the back cover from the device.

Step 3 — Disc Drive



- Remove the single 6mm screw holding the disc drive in place using the same screwdriver.
- Carefully pull out the disc drive and remove it from the device.

To reassemble your device, follow these instructions in reverse order.