




Lenovo G580 Keyboard Replacement

A guide on how to replace the Lenovo G580's keyboard.

Written By: Kyle McNeil

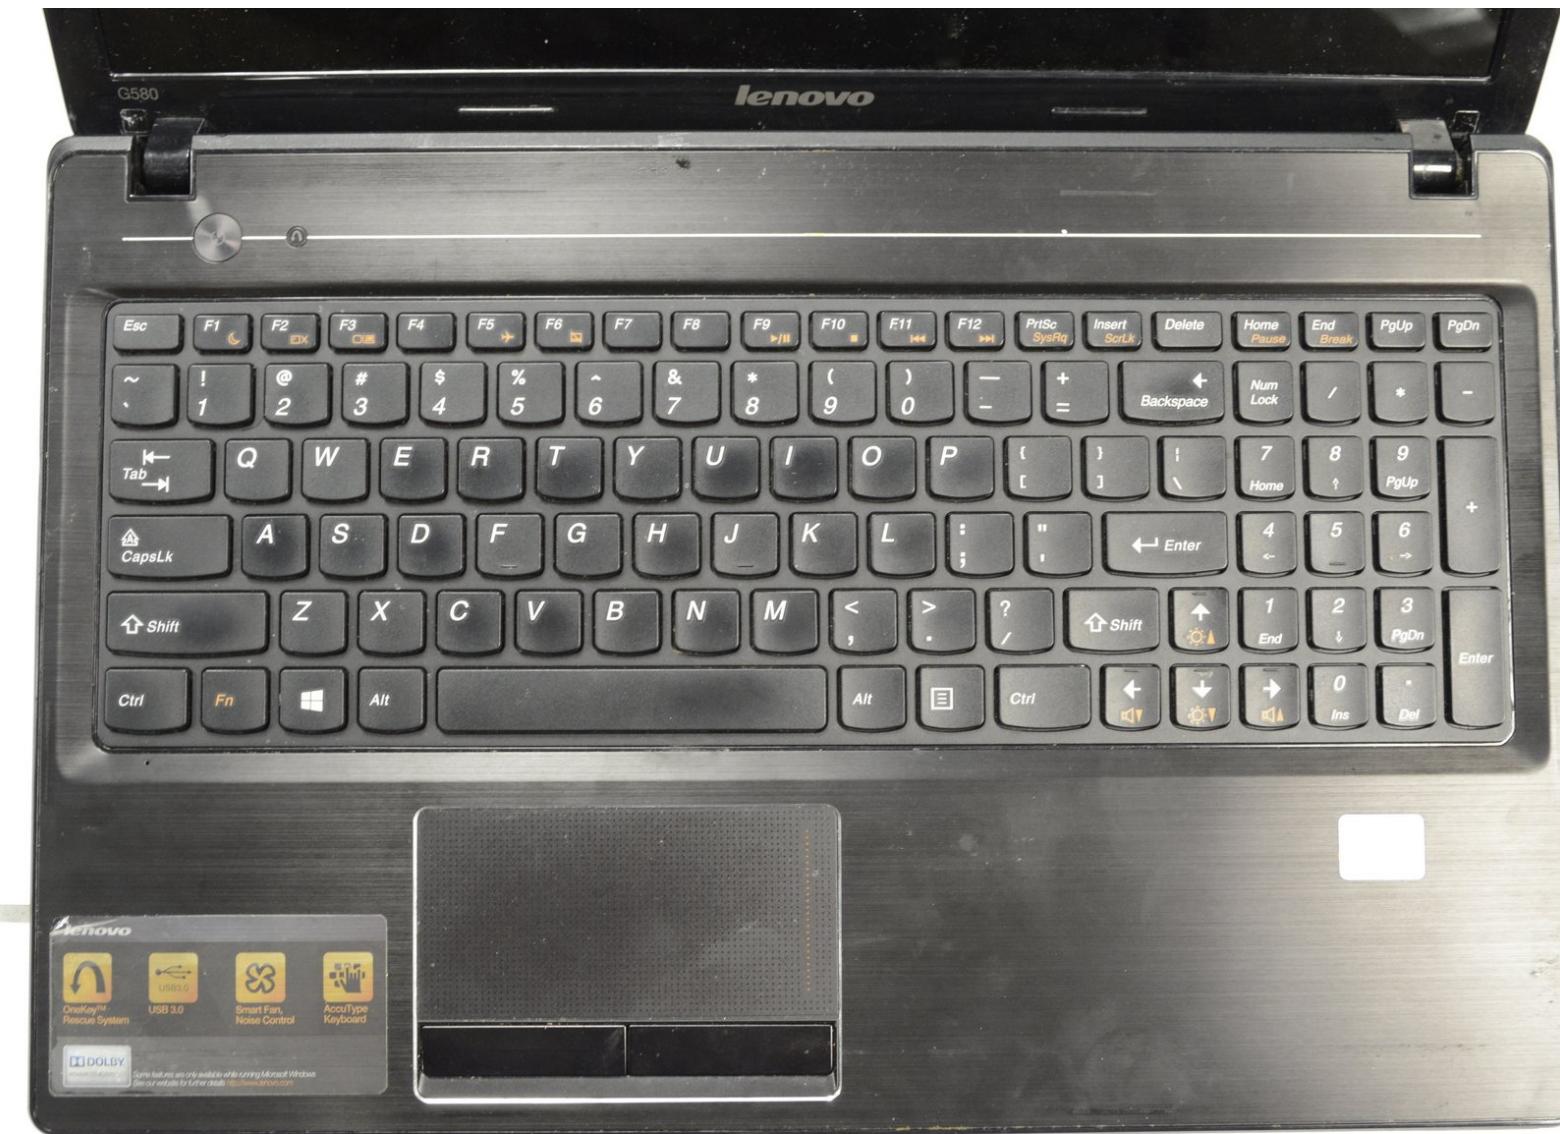

INTRODUCTION

Keyboards often need to be replaced due to broken keys, mechanical failures, or wiring failures. This guide demonstrates how to replace the keyboard in three easy steps that should take 3-5 minutes. The only tool required is a prying tool.

TOOLS:

- [iFixit Opening Tools](#) (1)

PARTS:


- [Lenovo G580 Keyboard](#) (1)

Step 1 — Keyboard



- Open the lid of the laptop and locate the keyboard.

Step 2

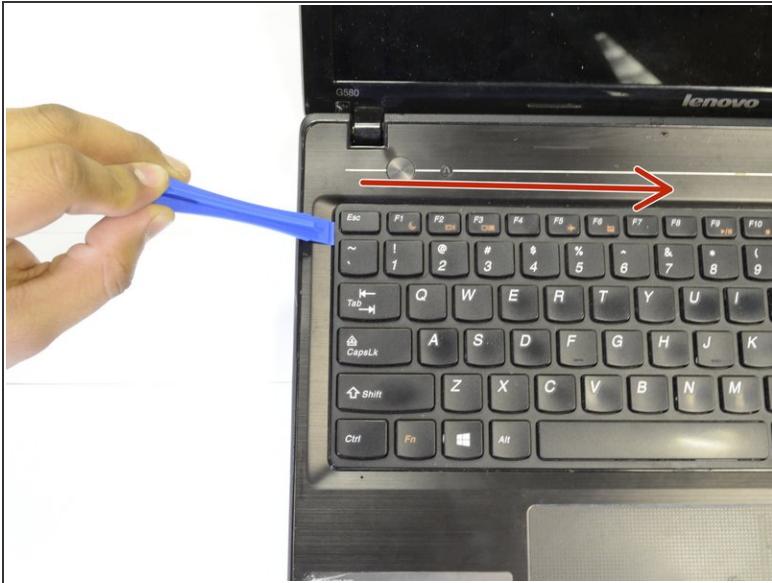

- Insert the plastic opening tool into the corner of the laptop between the keyboard and the side of the laptop.

⚠ Do not force the plastic opening tool as this will damage the laptop.

- Slide the plastic opening tool across the keyboard towards the other corner.

This document was generated on 2019-10-20 09:07:25 AM (MST).

Step 3



- Grab the keyboard at the corners and pull the keyboard off the laptop.

⚠ Make sure to disconnect the cord connecting the keyboard to the laptop before removing the keyboard.

To reassemble your device, follow these instructions in reverse order.