



# Lenovo G70-80 CD Drive Replacement

Is the CD Drive for your Lenovo G70-80 malfunctioning? Here are some helpful tips on how to replace a faulty drive.

Written By: Alexis Buford




## INTRODUCTION

Following the steps in this guide will help you replace a CD drive for a Lenovo G70-80. After approximately 5 minutes of following the instructions, you should have a working CD drive.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — CD Drive

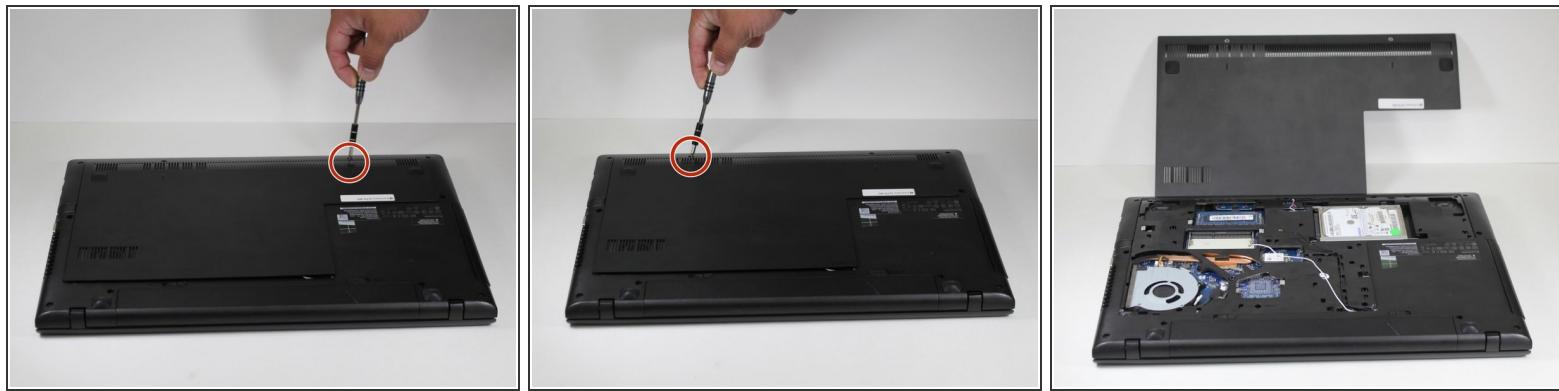


- Remove the 2 screws from the backside of the Lenovo G70-80 using a Phillips-head screwdriver. Now you can remove the back of the Lenovo G70-80.

## Step 2



- Locate the CD Drive to your right, near the battery.

## Step 3

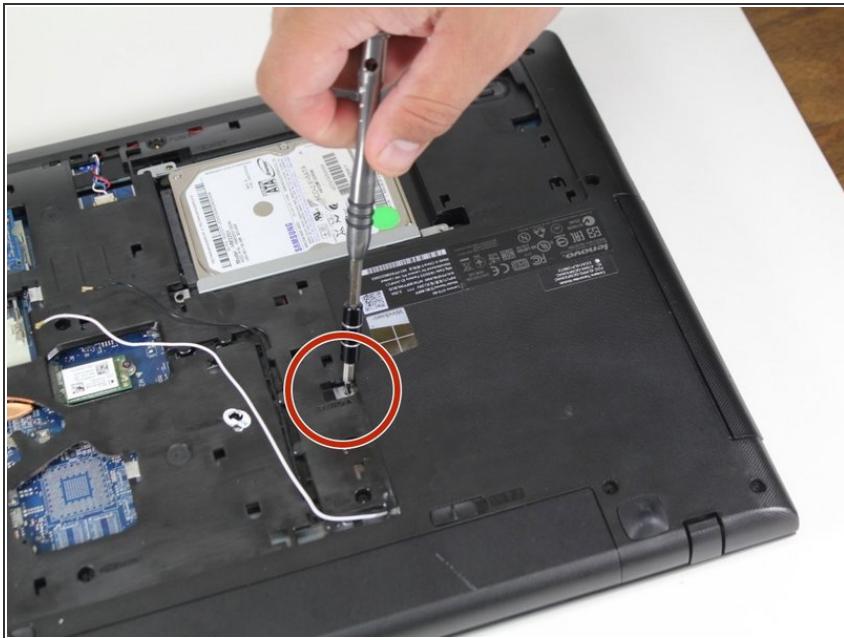

- Remove the screw to the left of the CD Drive.

## Step 4



- Pull out the drive directly from the CD Drive.

To reassemble your device, follow these instructions in reverse order.