




Lenovo G780 Battery Replacement

How-To-Guide for Lenovo G780 Battery Removal and Replacement


Written By: Whitney Hurd

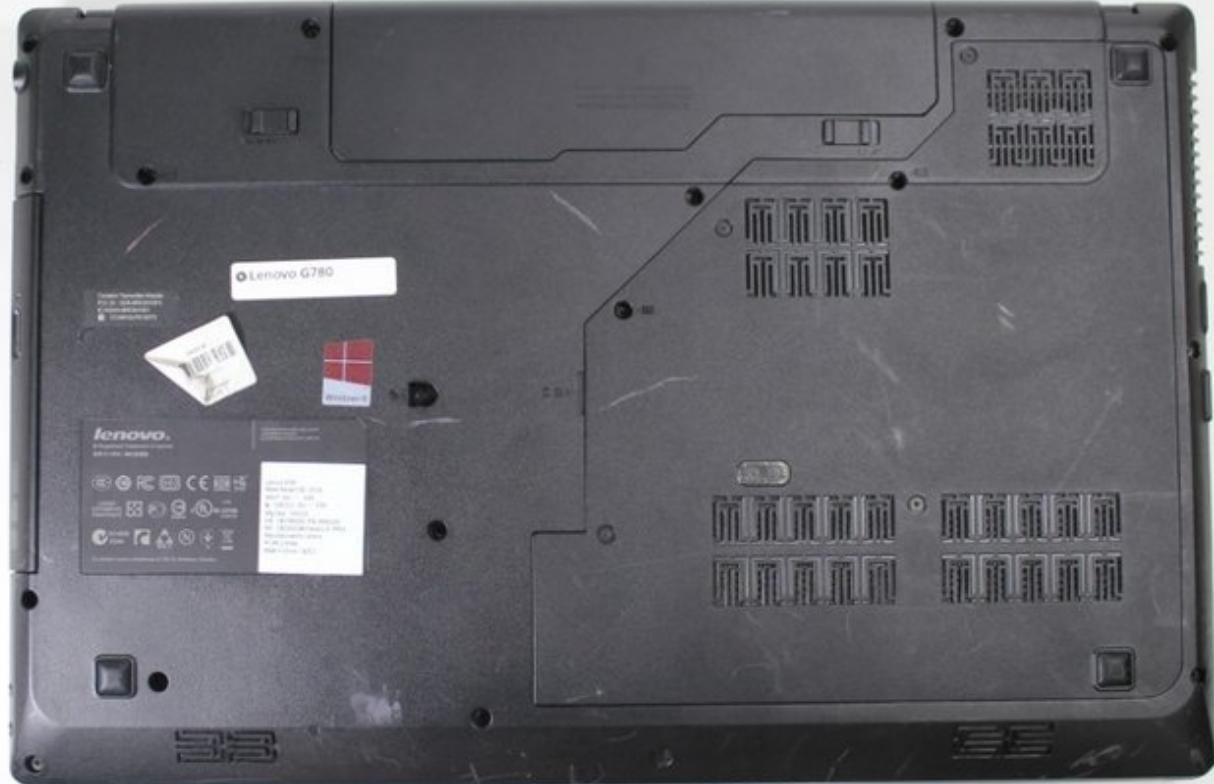

INTRODUCTION

This guide describes the steps to removing and replacing the Lenovo G780 battery that may be due to no longer holding charge, faulty charger or a faulty battery. The battery for replacement is a 6 Cell Li-ion type with 11.1 volts.

Step 1 — Battery

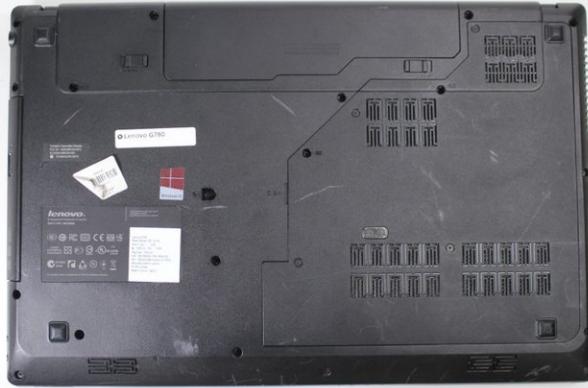

- Turn off the computer.
- Slide the battery-lock switch on the bottom of the laptop to the unlocked position.

Step 2



- Hold the battery release switch in the unlocked position and remove the battery.

To reassemble your device, follow these instructions in reverse order.