



Lenovo IdeaCentre AIO 510S-23ISU Back Cover Replacement

This is a preliminary guide for removing the back cover to access the inside of the computer.

Written By: Jackson Blake



INTRODUCTION

This part requires a phillips head screwdriver to remove the screws as well as a plastic spudger.

TOOLS:

- **Phillips Head Screwdriver: Size PH1 (1)**
- **Spudger (1)**

Step 1 — Stand Base




- Turn off the computer, unplug all cables, and let it cool down. Lay the computer flat on its screen.
- *i* Make sure that the work surface is flat and has nothing sharp on it.

Step 2



- Remove the monitor stand screw in the bottom of the stand, and remove the stand completely.

Step 3 — Back Cover

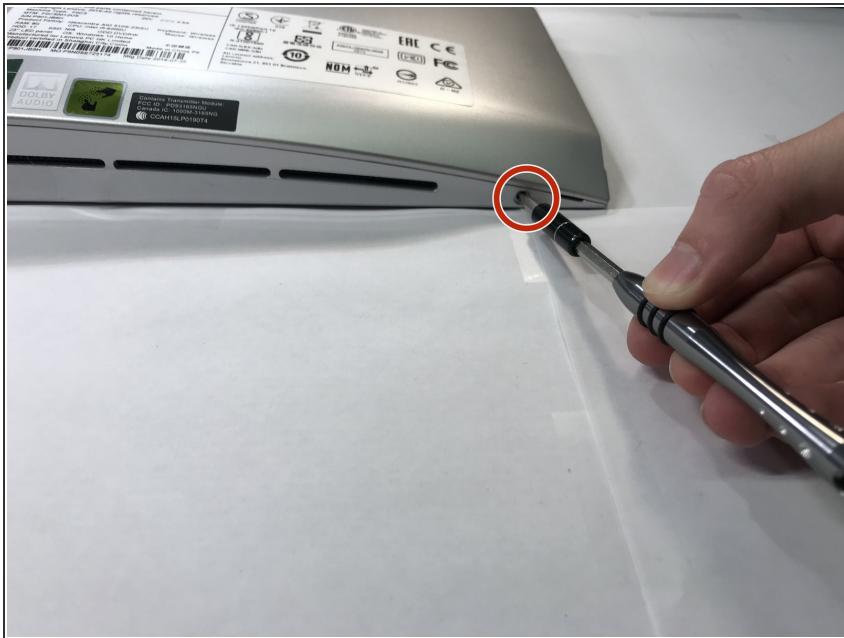

- Remove the two screws on the bottom of the computer, one on each side.

Step 4



- Locate the slot on the right side of the computer next to the screw hole. Use a plastic opening tool or spudger to pry off the rear cover. (Don't be afraid to use a little force.)

Step 5



- Once it has been separated, lift to remove.

To reassemble your device, follow these instructions in reverse order.