


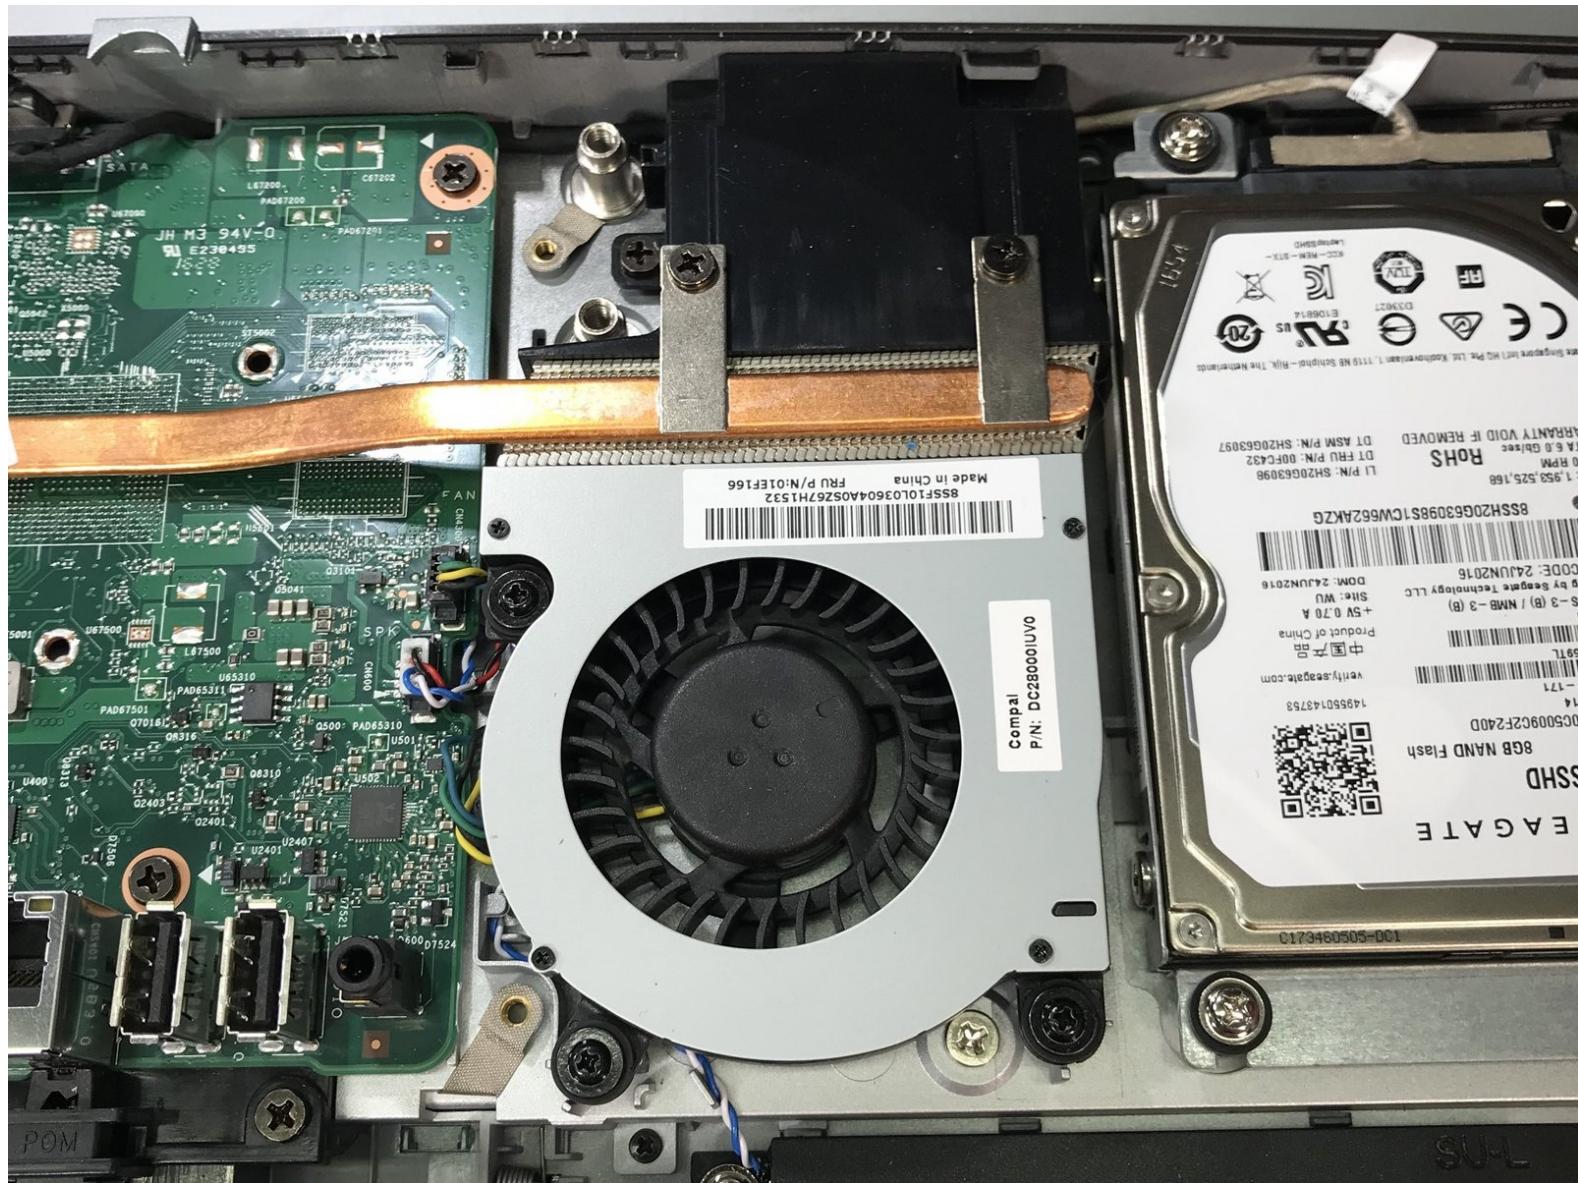

Lenovo IdeaCentre AIO 510S-23ISU Fan Replacement

This guide will show you how to remove and replace the fan inside the computer.

Written By: Jackson Blake



This document was generated on 2019-11-02 07:09:00 PM (MST).

INTRODUCTION

This requires a Phillips head screwdriver. Be careful not to drop the screws into the rest of the computer.

TOOLS:

- [Phillips Head Screwdriver: Size PH1 \(1\)](#)
- [Spudger \(1\)](#)

Step 1 — Stand Base




- Turn off the computer, unplug all cables, and let it cool down. Lay the computer flat on its screen.
- *i* Make sure that the work surface is flat and has nothing sharp on it.

Step 2



- Remove the monitor stand screw in the bottom of the stand, and remove the stand completely.

Step 3 — Back Cover

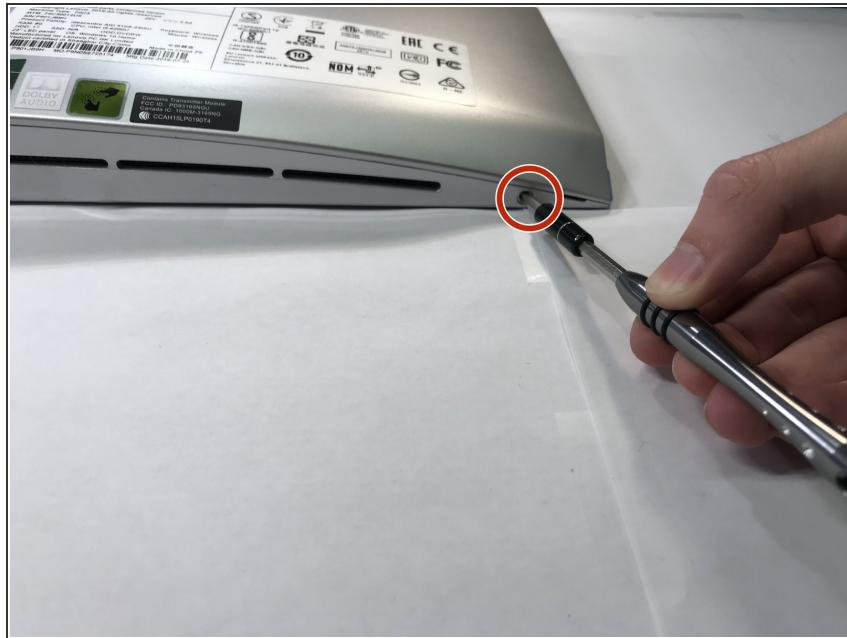

- Remove the two screws on the bottom of the computer, one on each side.

Step 4



- Locate the slot on the right side of the computer next to the screw hole. Use a plastic opening tool or spudger to pry off the rear cover. (Don't be afraid to use a little force.)

Step 5




- Once it has been separated, lift to remove.

Step 6 — Arm Stand




- Remove the four screws that secure the arm stand.

Step 7

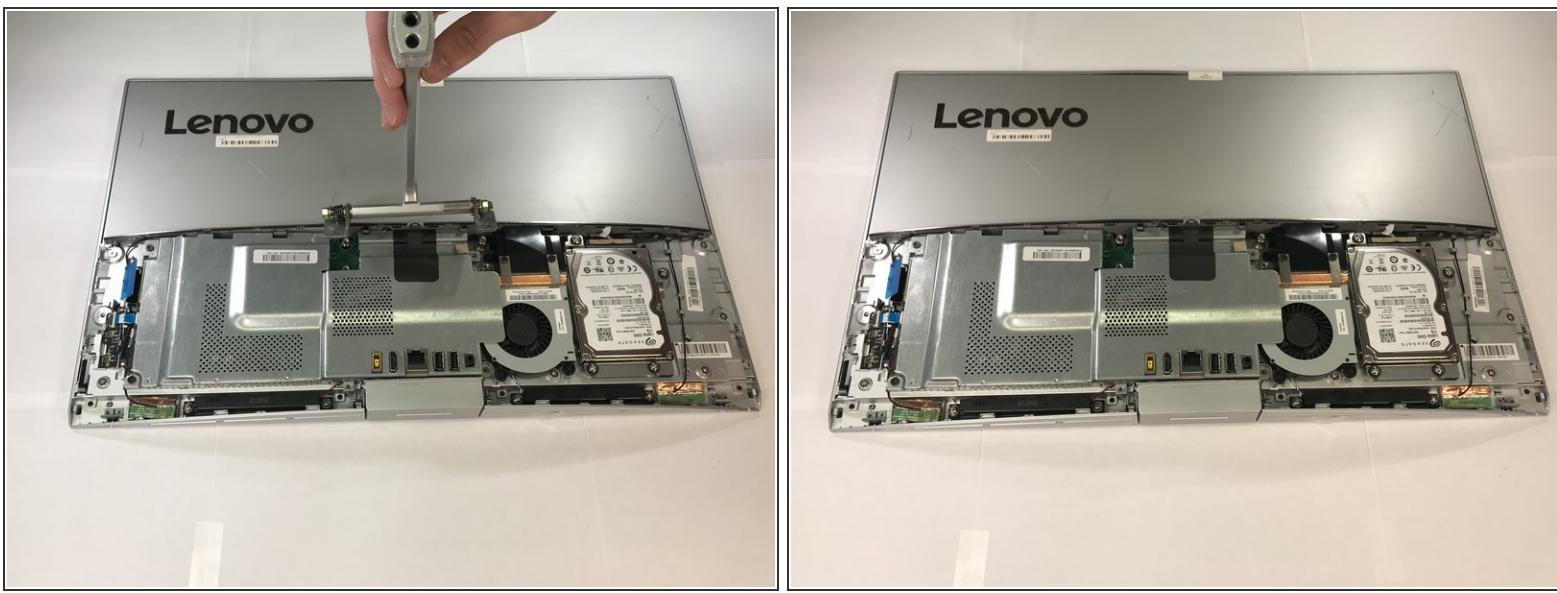



- Lift up to remove the arm stand.

Step 8 — Fan

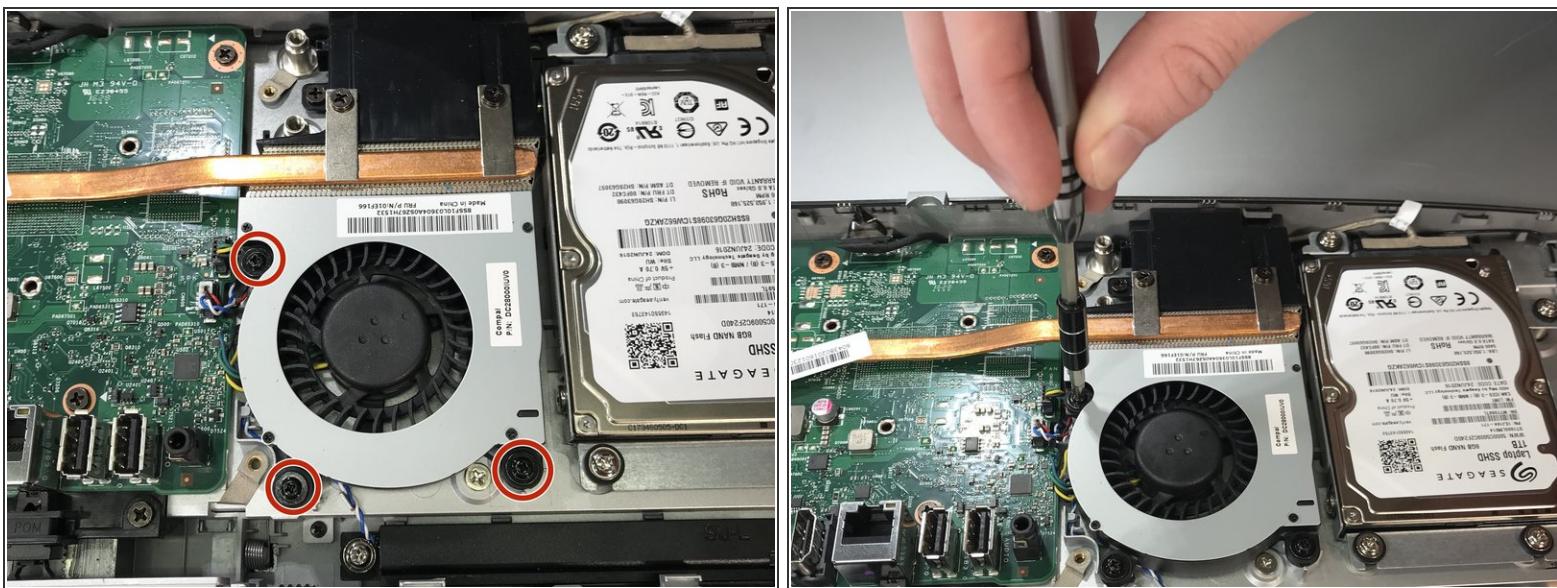

- Remove the three screws that secure the fan.

Step 9

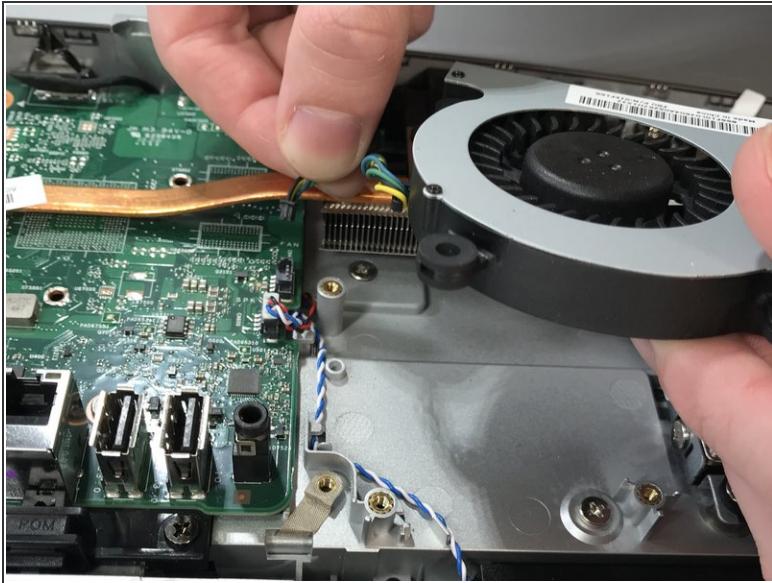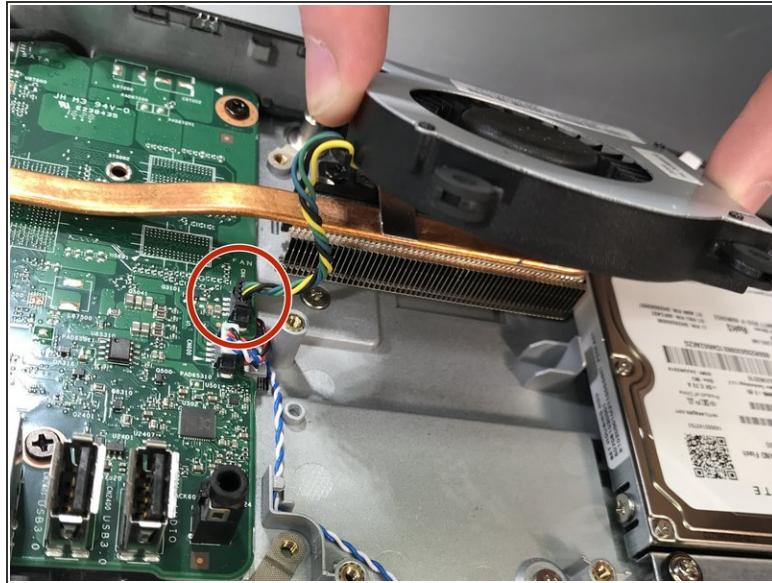

- Disconnect the fan power cable from the motherboard, and remove the fan.

To reassemble your device, follow these instructions in reverse order.