


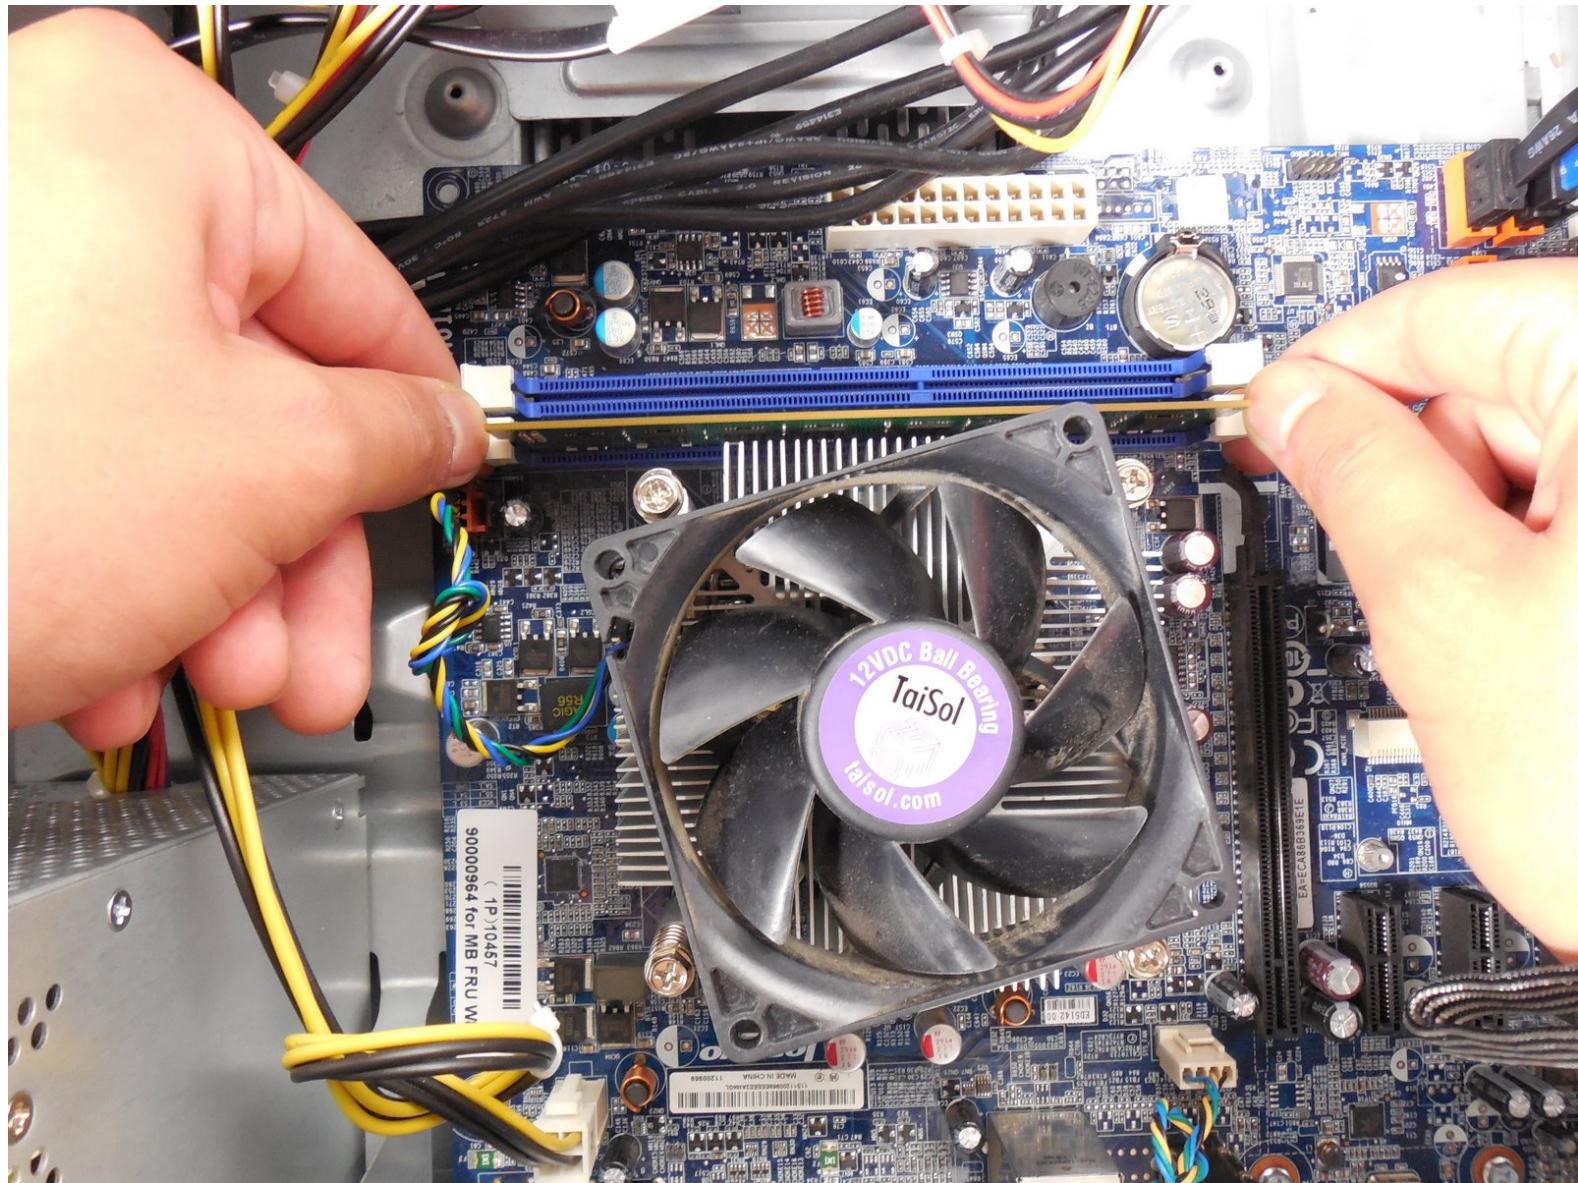

# Lenovo IdeaCentre K410 RAM Module Replacement

This guide will show how to remove the memory module.

Written By: Timothy Grebe



 **TOOLS:**

- **Phillips #2 Screwdriver (1)**

## Step 1 — Side Panel




- Lay the computer down on its side as shown.
- Remove the two 14mm screws shown. The screws are loose enough to unscrew with your hands.

## Step 2



- Gently slide the side panel straight back and remove from the computer.

## Step 3 — RAM Module

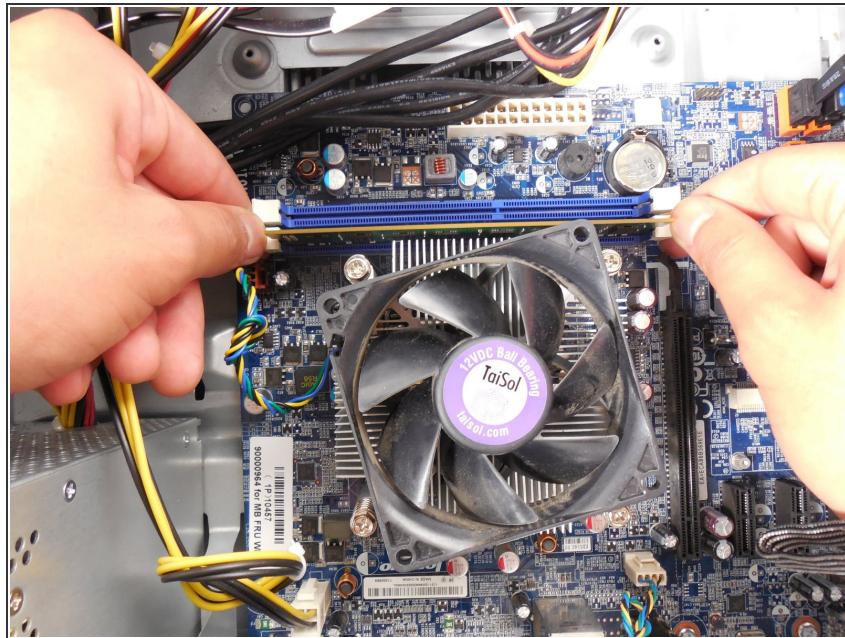

- Push down on the white clips on both sides of the memory module to release it.
- Gently pull up on the memory module to remove it from the unit.

To reassemble your device, follow these instructions in reverse order.