




Lenovo IdeaPad 110-15ISK Optical Drive Replacement

Replace your broken or malfunctioning Optical Drive.

Written By: Tyler

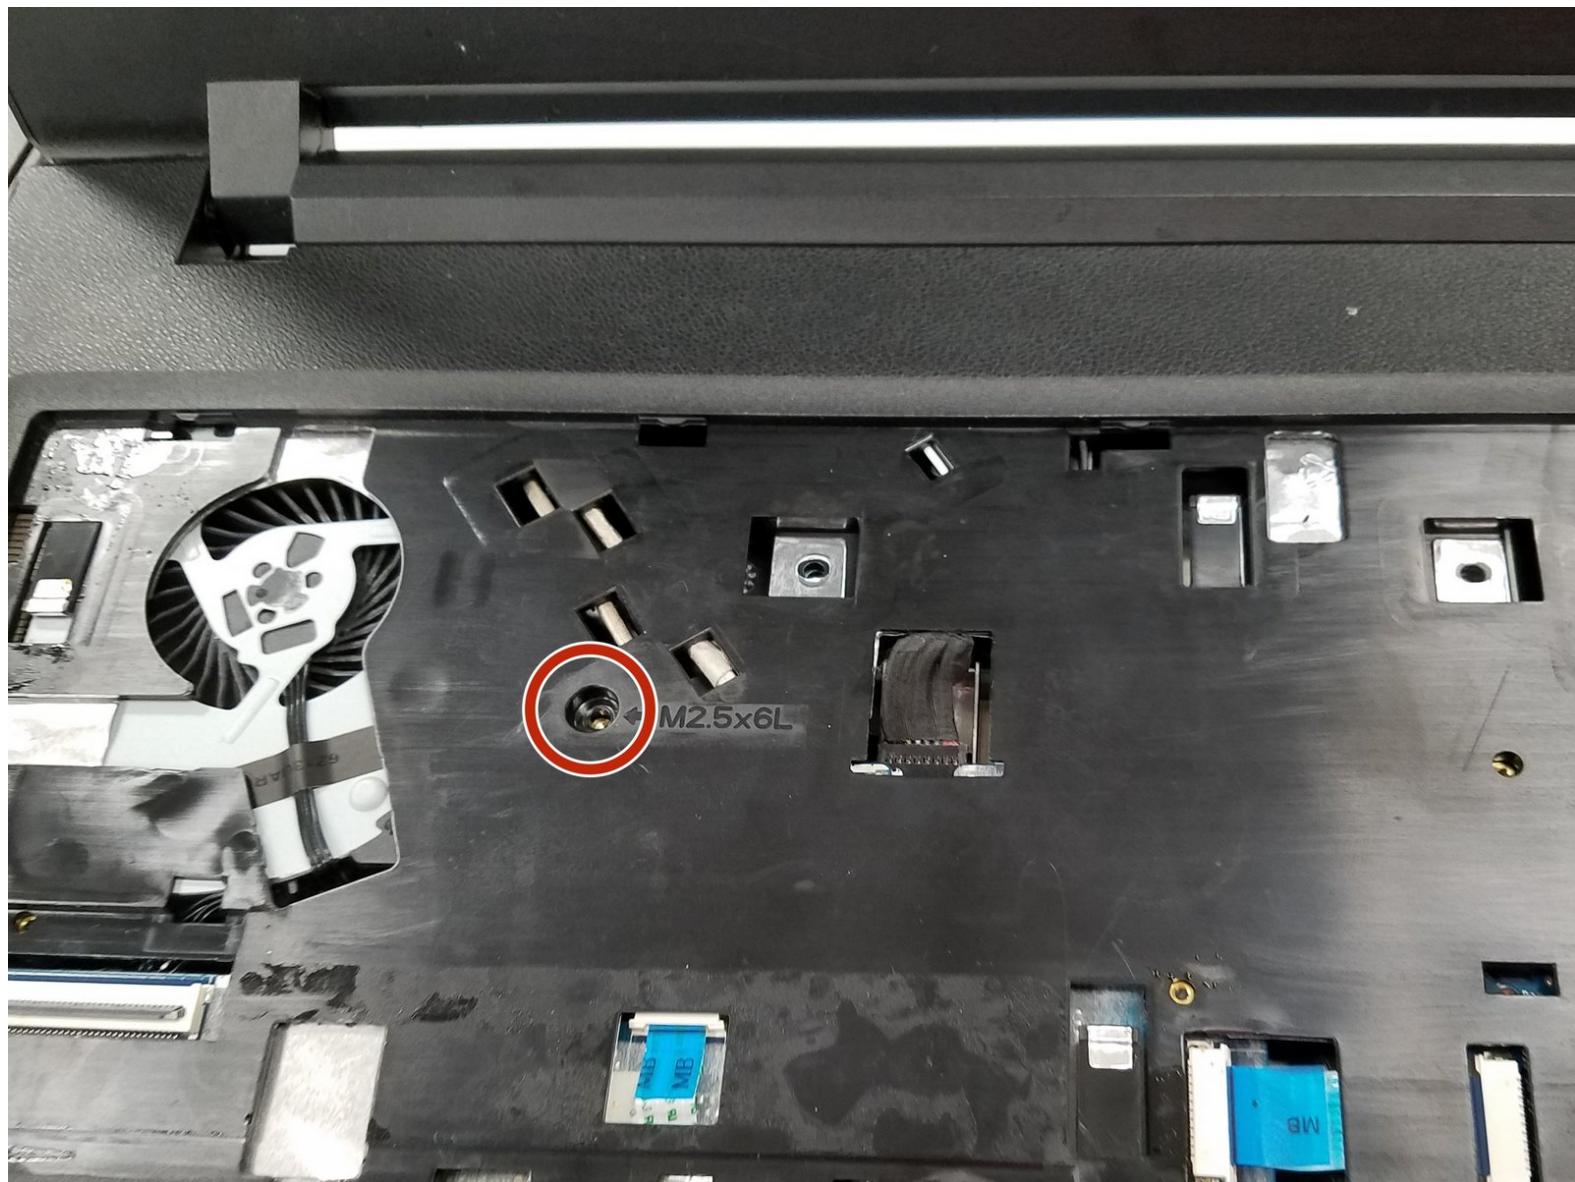


INTRODUCTION

If the Lenovo is unable to read a disc, the optical drive may be broken. To replace the optical drive, follow the provided guide.

TOOLS:


- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Keyboard

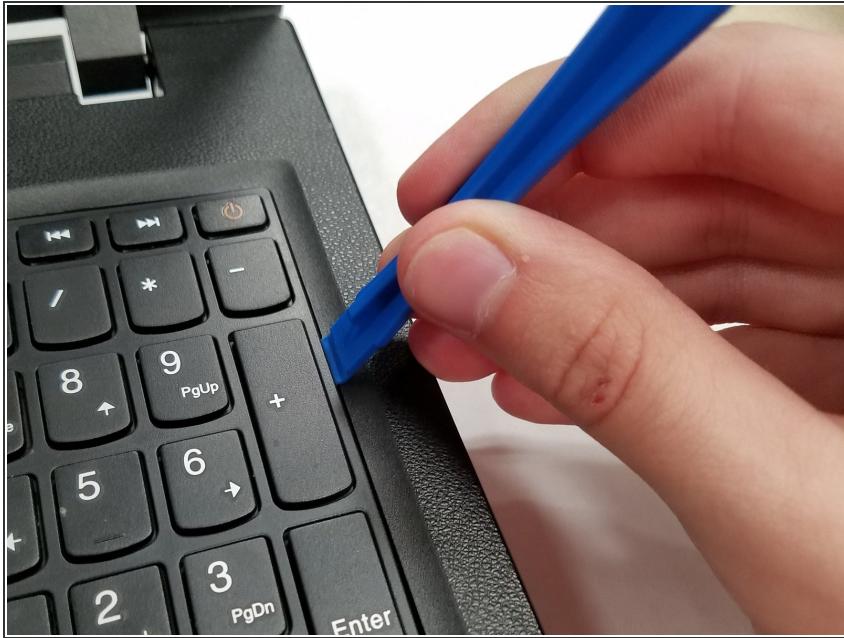


- Use the plastic opening tool to pry the keyboard up and away from the bottom assembly.

Step 2

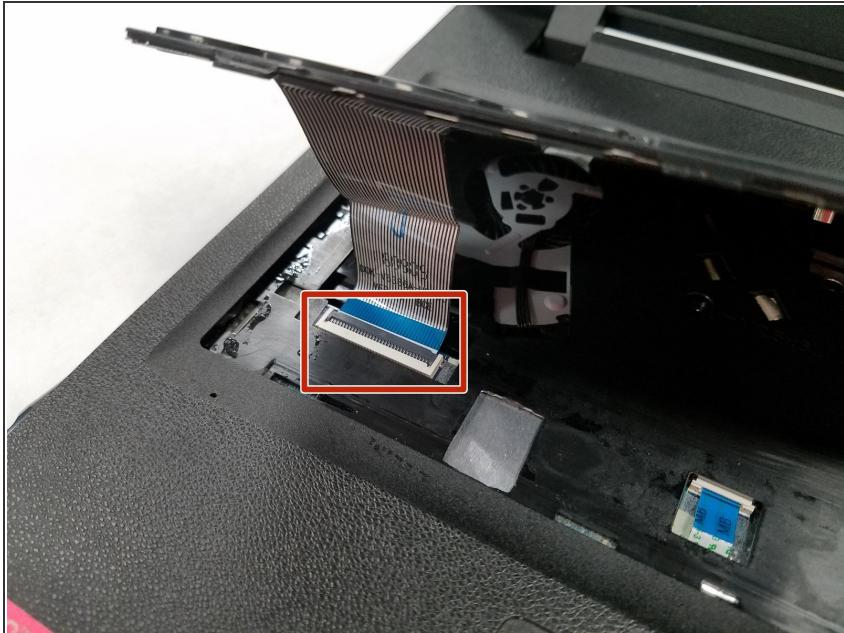

- Next disconnect the keyboard cable by using the tip of the spudger or your finger to lightly push out the ribbon from the contact port.
- Completely remove the keyboard from the bottom assembly.

Step 3 — Optical Drive

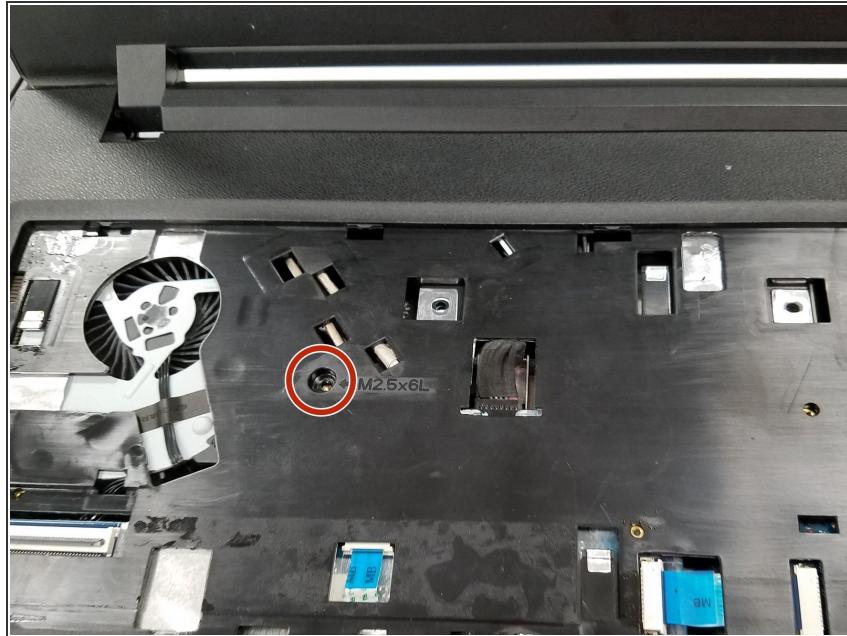

- Using a Phillips #1 screwdriver, unscrew the one 5.0mm screw on the back panel.

Step 4



- Flip the laptop to its back and the optical drive is located at the top left corner.
- Remove the optical CD DVD drive by lightly pulling it out of the assembly.

To reassemble your device, follow these instructions in reverse order.