



Lenovo IdeaPad Flex 4-1130 Wi-Fi Card Replacement

Replacing the Wi-Fi card on the Lenovo Ideapad Flex4-1130.

Written By: Adrian Miranda



INTRODUCTION

A Wi-Fi card replacement is a quick and simple task. If you are experiencing slow or intermittent internet connection a Wi-Fi card replacement might be in order.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery



- **Power off your Lenovo Ideapad Flex4-1130 before beginning disassembly.**
- **Remove the ten 4mm screws from the back panel.**

Step 2



- Insert the spudger into the groove work your way around the laptop to separate the bottom from the case.


⚠ Do not insert the spudger too deep! This could potentially damage a device part.

Step 3



- Remove the connector attaching the battery to the motherboard.

Step 4

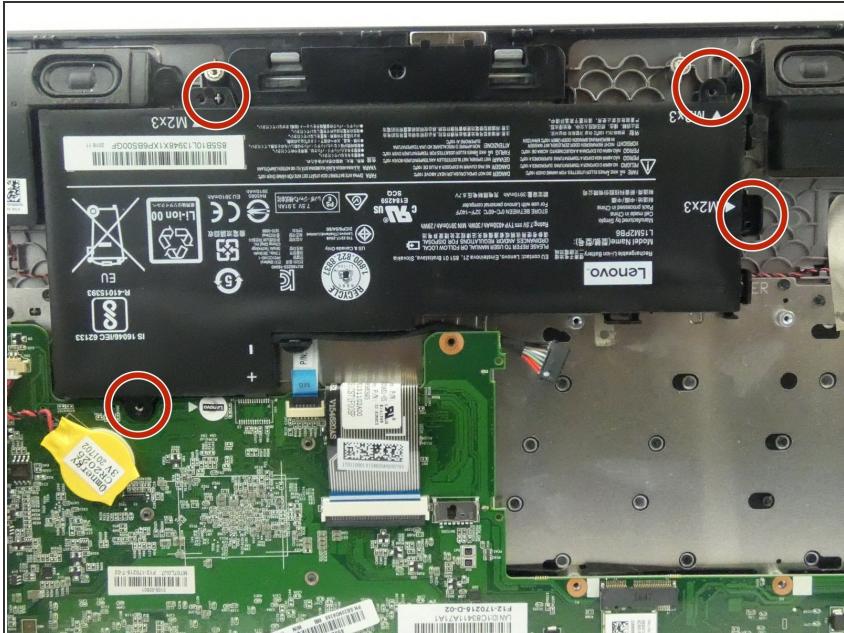


- Remove the four 4mm screws on the battery.

Step 5




- Lift the battery with a spudger and remove.

Step 6 — Wi-Fi Card

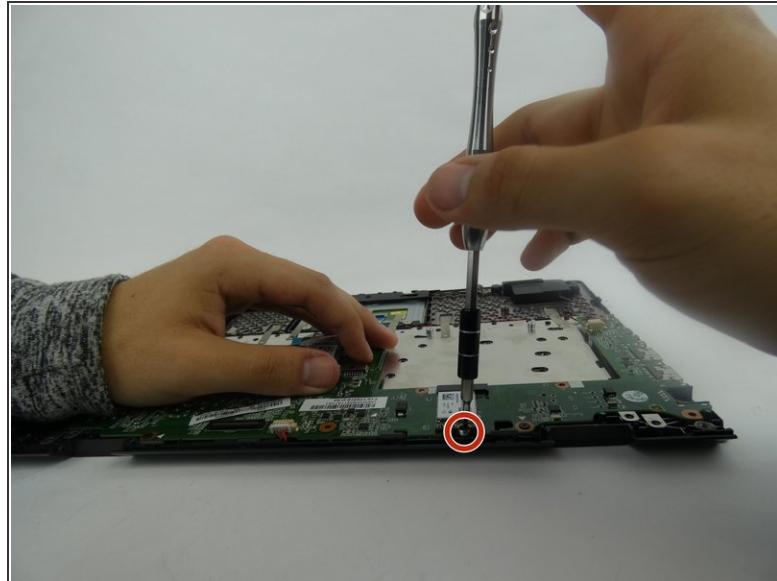

- Remove one 5mm screw.

Step 7

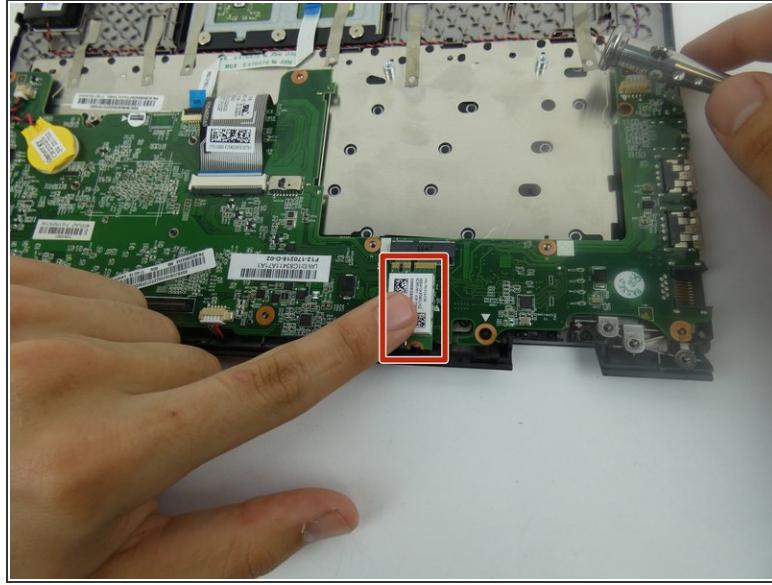

- Remove the Wi-Fi card from the motherboard socket.

To reassemble your device, follow these instructions in reverse order.