



Lenovo IdeaPad Flex 5-1470 SSD Replacement

This guide will show you how to locate and replace the SSD chip in the Lenovo IdeaPad Flex 5-1470 laptop.

Written By: Lexie Sakoda



INTRODUCTION

If you want to [upgrade the SSD](#) card in your Lenovo IdeaPad Flex 5-1470, use this guide to replace the SSD card. The SSD card in the Lenovo IdeaPad Flex 5-1470 is connected to the device's motherboard.

Before replacing the SSD in your Lenovo IdeaPad Flex 5-1470, research which SSD cards are [compatible](#) with the device.

The only step to do before removing the SSD card is to remove the device's back panel.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:


- [1 TB GB M2 SSD](#) (1)
- [250 GB M2 SSD](#) (1)
- [500 GB M2 SSD](#) (1)

Step 1 — Back Panel



- Remove all ten 6.6 mm screws with a Phillips #00 screwdriver.

Step 2

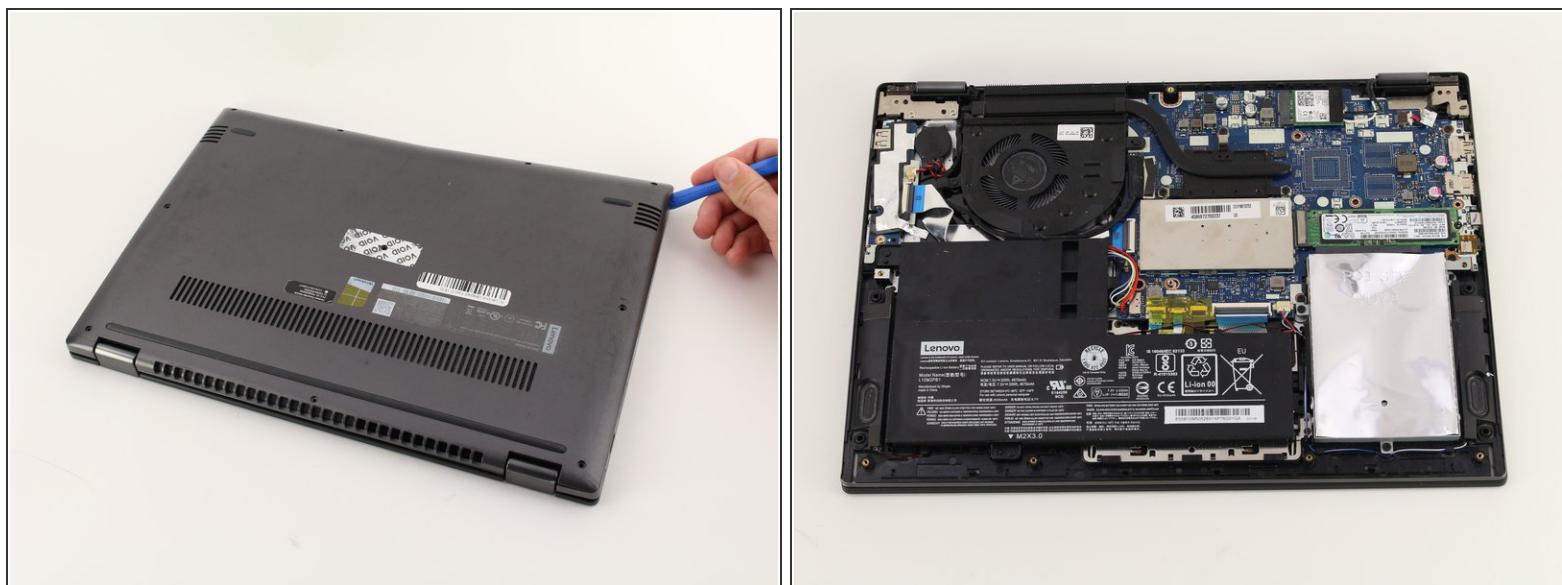

- Use the plastic opening tool to lift up and remove the casing.

Step 3 — SSD



- Remove one 3.6 mm screw using the Phillips 00 screwdriver.
- The SSD will pop up on its own after removing the screw.

To reassemble your device, follow these instructions in reverse order.