



Lenovo IdeaPad Flex 5-1470 Wireless Network Adapter Replacement

This guide will show the user how to locate and replace the wireless network adapter on a Lenovo IdeaPad Flex 5-1470.

Written By: Emily Lau



This document was generated on 2020-04-19 05:55:16 PM (MST).

INTRODUCTION

If your Lenovo IdeaPad Flex 5-1470 (Model Name: 80XA Model Number: 80XA0001US) is refusing to connect to wireless connections and your wireless network adapter has stopped working, simply follow this guide. All you need is a standard Phillips #00 screwdriver, a plastic opening tool, and nylon-tipped reverse tweezers. The wireless network adapter is a small chip located in the top right corner of the device that allows the laptop to successfully connect to Wi-Fi connections.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Nylon-Tip Reverse Tweezers](#) (1)

PARTS:

- [Lenovo 01AX704 Wireless Adapter](#) (1)
- [Lenovo 00JT497 Wireless Adapter](#) (1)
- [Lenovo 01AX713 Wireless Adapter](#) (1)

Step 1 — Back Panel



- Remove all ten 6.6 mm screws with a Phillips #00 screwdriver.

Step 2



- Use the plastic opening tool to lift up and remove the casing.


Step 3 — Wireless Network Adapter



- Use the reverse tweezers to carefully unplug the two wired connections.


 Be careful when removing the wire connections to avoid damage to the metal connections on the adapter.

Step 4

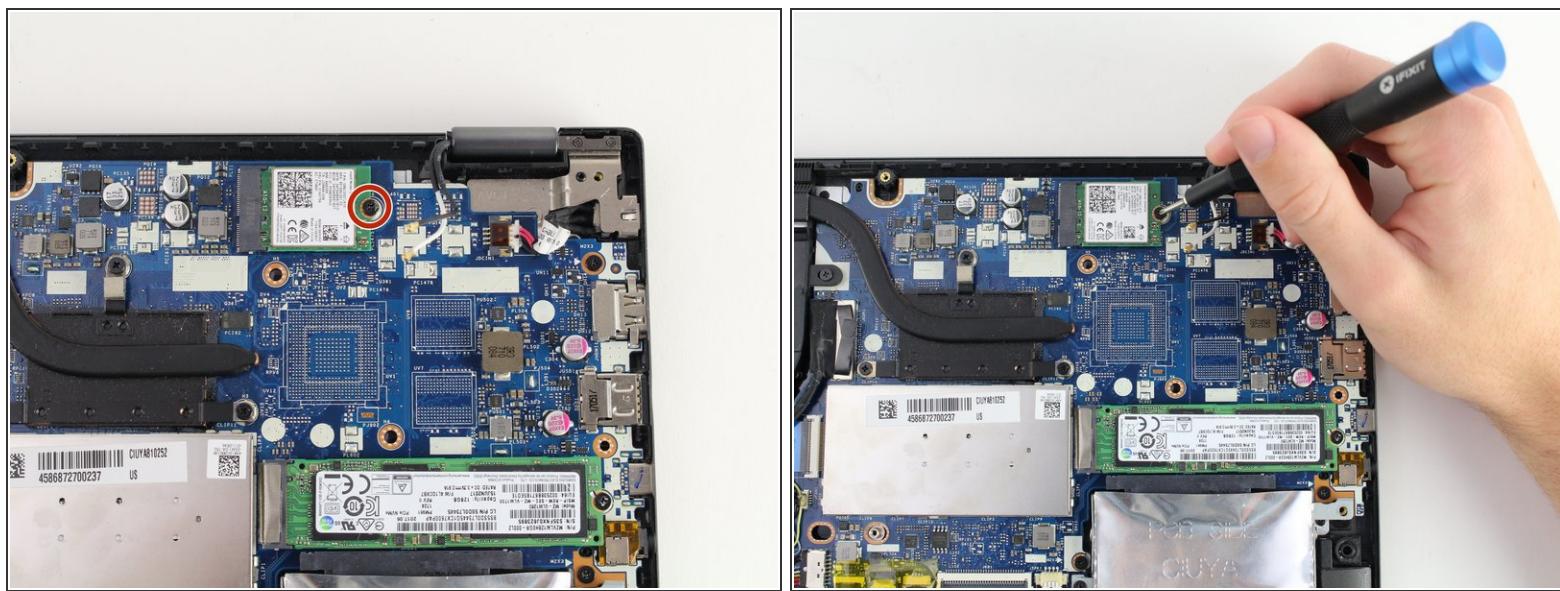

- Using the Phillips #00 screwdriver, remove one 3.6 mm screw.

Step 5

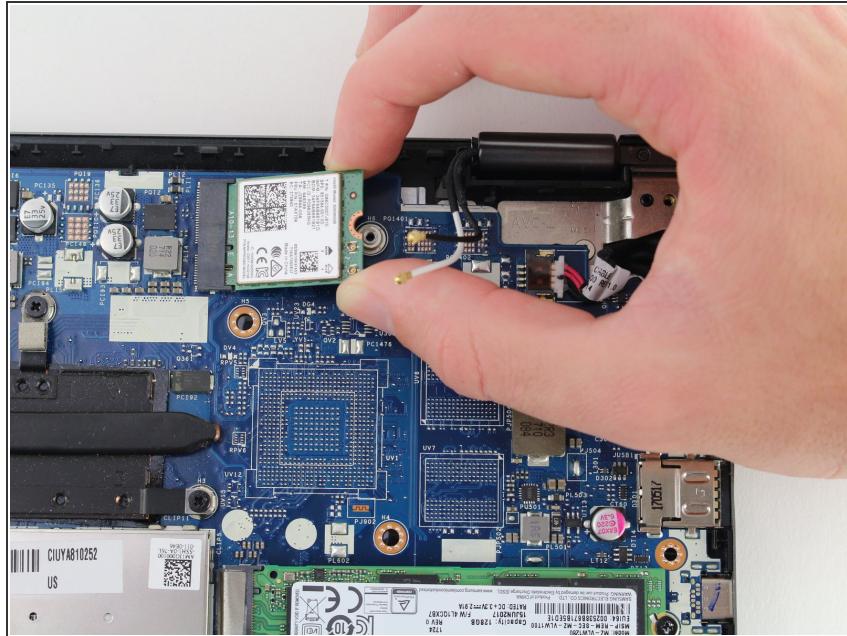

- Remove the wireless network adapter.

To reassemble your device, follow these instructions in reverse order.