


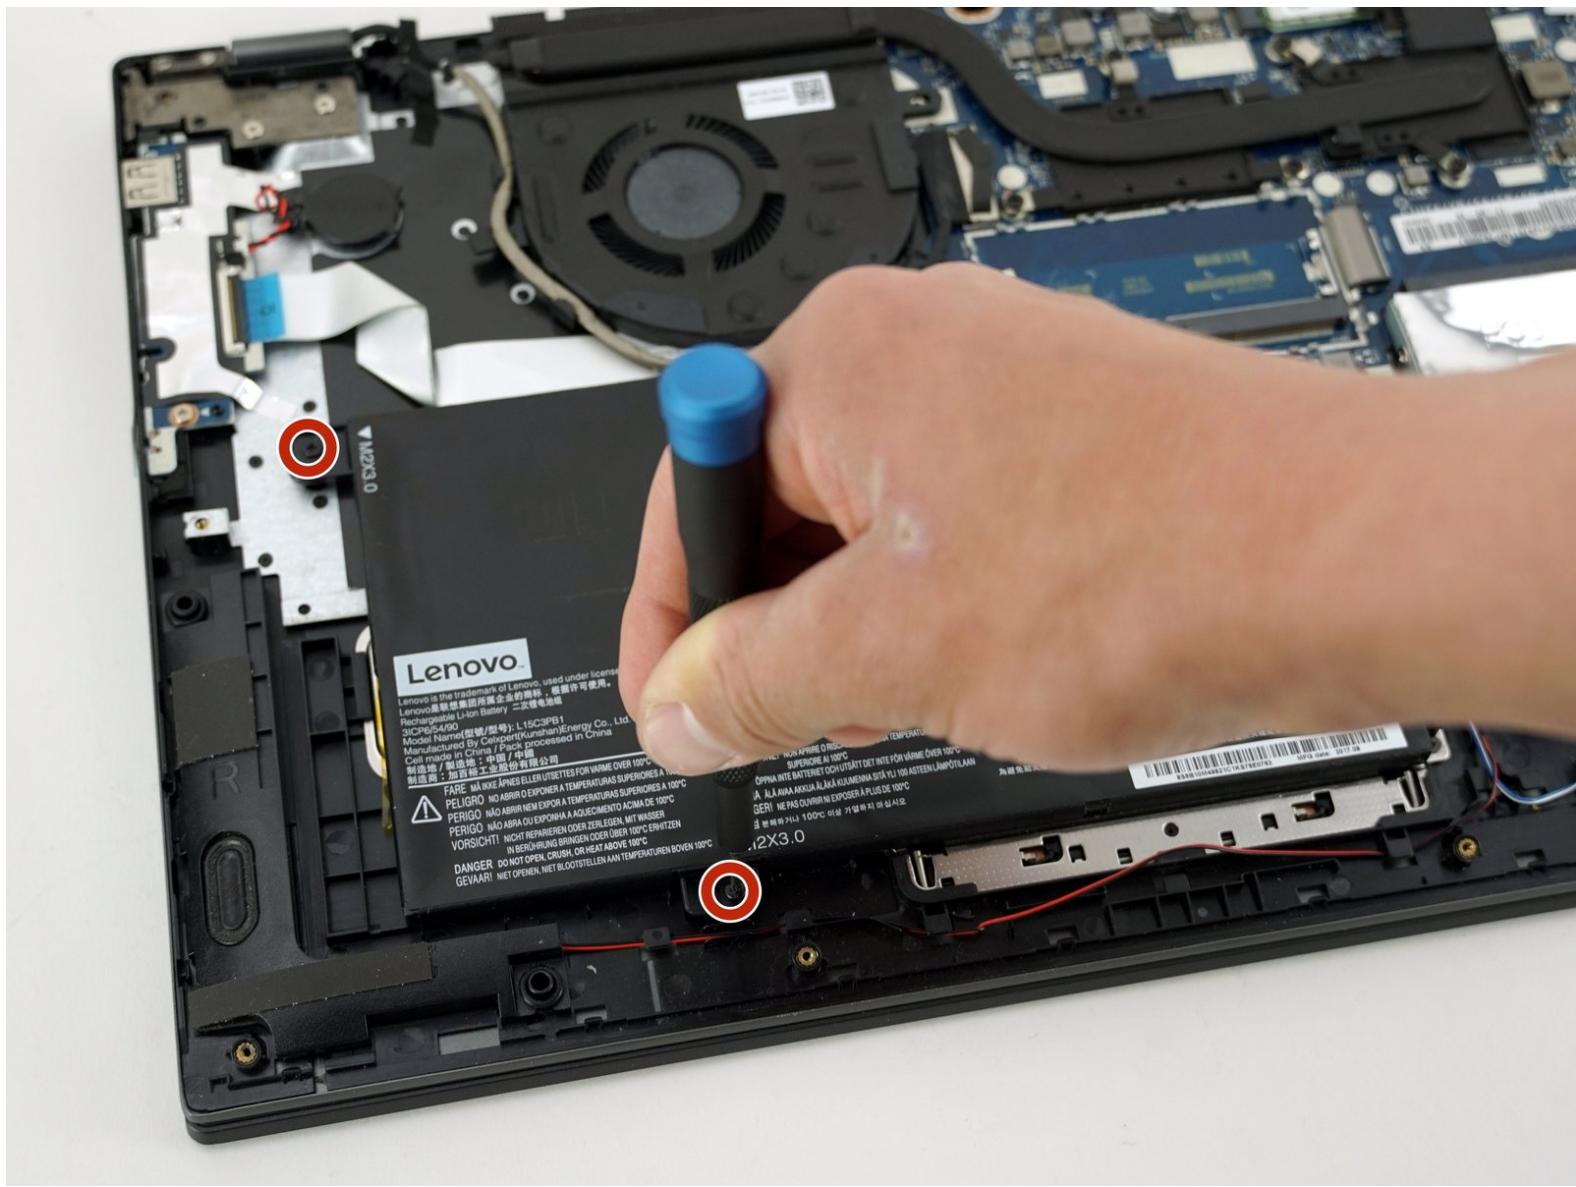

Lenovo IdeaPad Flex 5-1570 Battery Replacement

A faulty battery in the Lenovo IdeaPad Flex 5-1570 may result in an unusable device. This guide will show you how to successfully replace the battery.

Written By: Nate Blake



INTRODUCTION


Laptop batteries can become faulty in as little as 2 years. Having a working battery is an essential piece to an efficient laptop, as the main function of the laptop is to be able to work away from home. Laptops with short battery lives can be extremely tedious as you constantly need to be plugging them in to an outlet.

If you have had your Lenovo IdeaPad Flex 5-1570 for longer than 2 years and/or you are experiencing a short battery life, it may be time to replace your battery. Do not worry however, replacing the battery in this device is simple and requires little to no tools.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Back Panel

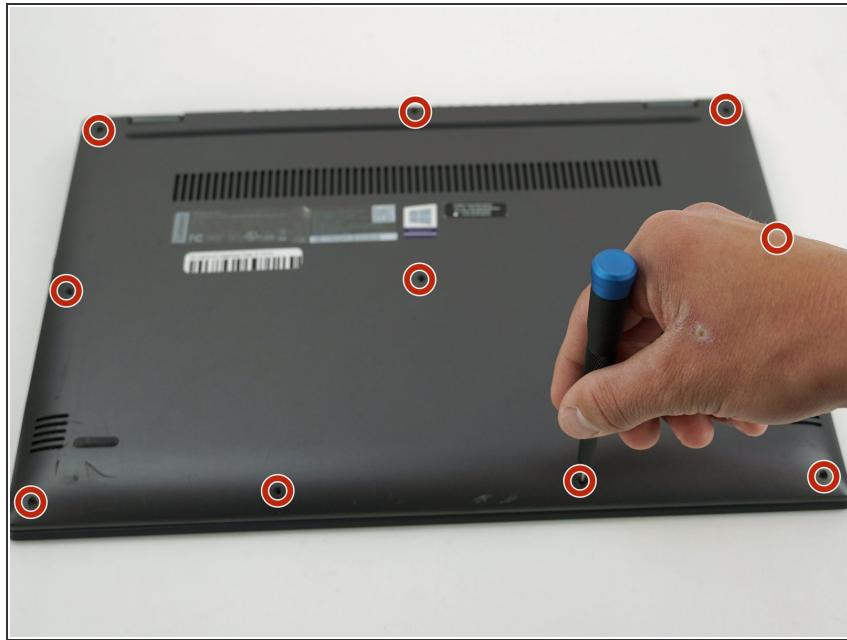


- Remove the ten 5 mm Phillips #00 screws that are holding the back panel on.

Step 2





- Gently use the plastic opening tool around the edges of the laptop to pry up the back panel.

Step 3 — Battery

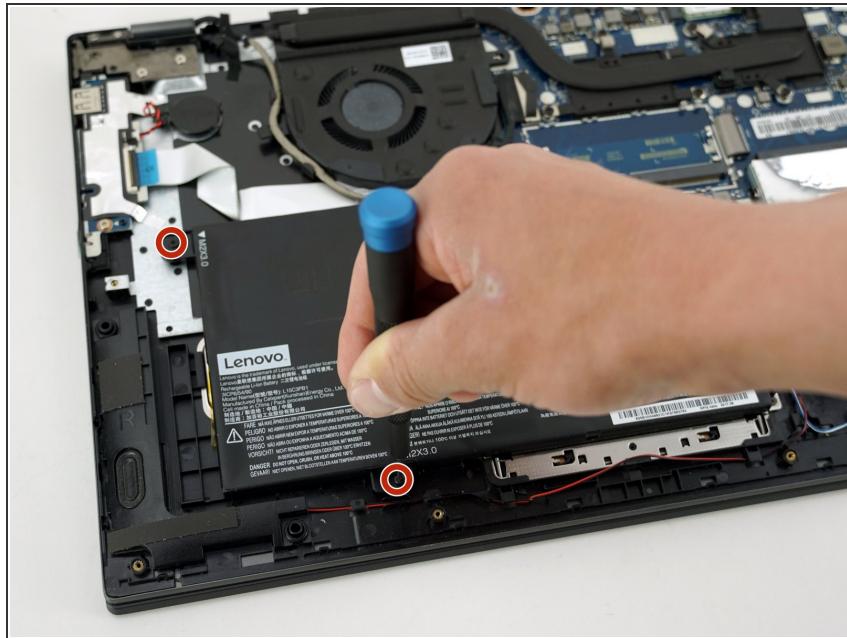

- Remove the two 5 mm Phillips #00 screws that secure the battery in place.

Step 4

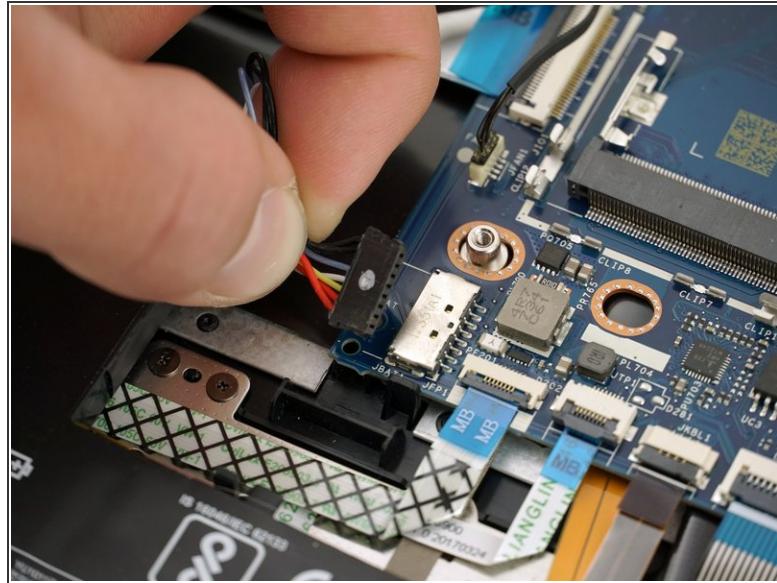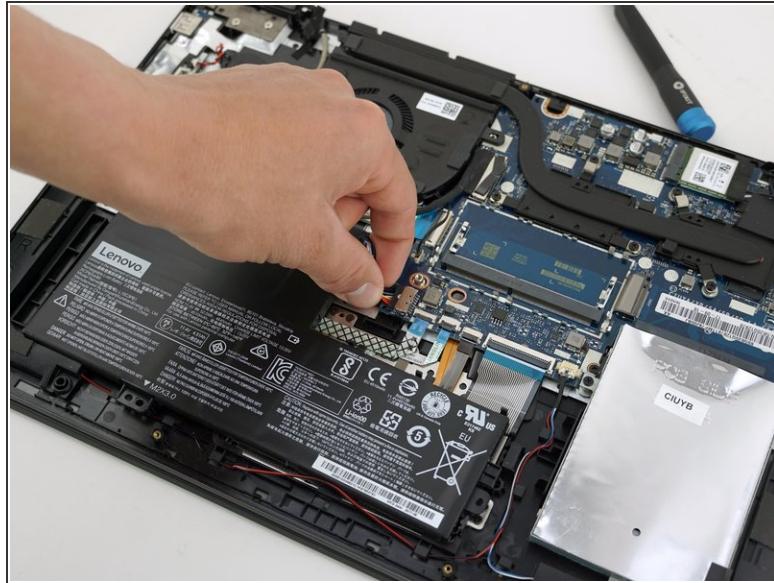

- Using your hands, disconnect the wires connecting the battery to the motherboard.

To reassemble your device, follow these instructions in reverse order.